

PARTS CATALOGUE

MODEL YEAR 2002

TRAIL WAY

TW200 P(5FYC) U49

TW200 PC(5FYD) CALIFORNIA

STARTING VIN (5FYC): JYA3AWE0*2A089181 and following
STARTING VIN (5FYD): JYA3AWCO*2A TBA and following

Color Code	Color-Rite Code	Color Name	Abbreviation
0206	5450	PURPLISH WHITE SOLID 1	PWS1

OWNERS LIT-11626-15-17

ASSEMBLY LIT-11666-14-43

SERVICE LIT-11616-06-26

FOREWORD

-INTRODUCTION-
To The Yamaha Parts Fiche

This parts fiche lists parts and sub-assemblies for the TW200P/ PC. When preparing a parts order, please refer to the most recently updated microfiche for this model.

THE YAMAHA PARTS FICHE

SYMBOLS

[]	Inactive, no longer available
U.R.	Use size (thickness) and/or number as required
U.N.	Use as many as you need
T	Number of teeth in a gear
V	Voltage for light bulbs
S	"S" type oil seal or "S" type circlip
SD,SO,SW	"SD", "SO", or "SW" type oil seal
E,R	"E" or "R" type circlip
F/No.	Frame No. (Applicable Machine No.)
L.M.	Locally made
O.L.	Obtain locally
AP	Alternate Part

SUPERSEDED PART NUMBERS

If part 'A' has been superseded by part 'B', the superseding part number "B" will appear in the part number listing with the superseded part number "A" appearing in parentheses immediately following the description.

EXAMPLE:

Ref. No.	Part No.	Description	Qty.
	(Part 'B')	(Part 'A')	
8	123-45678-00-00	CYLINDER (111-12345-00-00).....	1

A part that has been supersede to a kit may be identified by a 99999-00000-00 part number appearing in the part number column. The old superseded part number will appear in parentheses immediately following the description. Listed directly below the 99999 part number will be those parts making up the kit. The description of the parts making up the kit will be preceded by a small black dot (.) and the description will be indented one letter space.

EXAMPLE:

Ref. No.	Part No.	Description	Qty.
8	99999-12345-00	CYLINDER (111-12345-00-00)	1
	234-56789-00-00	• HEAD, CYLINDER	1

SIZES

Except for steel balls (ball sizes are indicated in inches), all parts sizes are indicated in millimeters as in the following examples:

Hose (Rubber or Vinyl)Inside Diameter - Length

O-RingSection Area - Inside Diameter

Washer, Shim, Collar.....Inside Diameter - Outside Diameter
Thickness (Length)

ASSEMBLIES AND COMPONENT PARTS

Assemblies and their component parts, are identified by an indention of one letter space, and the description is preceded by a dot (.). If two main assemblies are listed, and have the same basic description (i.e.: left and right sides of the same assembly), one will immediately follow the other. If each of these main assemblies is made up of almost the same components, these component parts will be listed immediately under the second main assembly line and will be indicated, as noted above.


If the component is the same for both main assemblies, the quantity indicated will be the total required. If the component is not the same for both main assemblies, the quantity for each separate item will be listed separately.

EXAMPLE:


Description	Qty
CARBURETOR ASSY, LEFT	1
CARBURETOR ASSY, RIGHT	1
. JET, PILOT	2
. NOZZLE, MAIN	2
. LEVER, STARTER, LEFT	1
. LEVER, STARTER, RIGHT	1

APPLICABLE SERIAL NO.

(1) Engine Serial No.

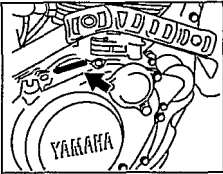

(2) Frame Serial No.

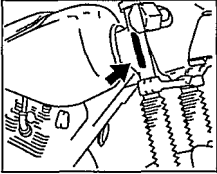


FOREWORD

THE YAMAHA PART NUMBER

The Yamaha part number consists of 12 digits. Each number represents a specific piece of information relating to a replacement part. The following is a guide for reading and interpreting the Yamaha part number.

BASIC PART NUMBER CONFIGURATION:

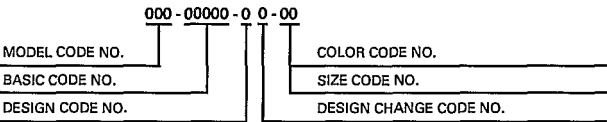

MODEL CODE NUMBER

FIRST THREE DIGITS . . . 000-00000-00-00


Every model in each Yamaha product line is assigned a model number to identify that particular model. All component parts are given the model code number relating to the model on which they were first used.

Example: 4DU-00000-00-00 identifies the XJ600SE.
3FA-00000-00-00 identifies the YFA1E.

BASIC CODE NUMBER


MIDDLE FIVE DIGITS . . . 000-00000-00-00

These "Middle Five Digits" indicate the type of part i.e., piston, rings, lower units, etc.: The five digits are broken down as follows:



The "Major Classification" indicates the section to which the parts belong, i.e., engine, electrical etc. The "Intermediate" and "Minor Classifications" indicate more specific details.

Example:



DESIGN CODE NUMBER: 000-00000-00-00

The design code distinguishes like component parts from one another when specification differences are involved. For example, distinguishing a standard size piston ring from an oversized piston ring.

Example:

4BR-11610-0 0-00 Standard Piston Ring Set for XJ600SE
4BR-11610-2 0-00 Oversize Piston Ring Set for XJ600SE

DESIGN CHANGE CODE NUMBER: 000-00000-00-00

This code number is used to identify a difference between a new component part and old one when a new part is created by changing the old one.

Example: YFZ350E

2GU-11610-0 0-00 PISTON RING SET, STD. - ORIGINAL
2GU-11610-0 1-00 PISTON RING SET, STD. - FIRST DESIGN CHANGE


Only major changes to performance, durability, quality, appearance, cost or interchangeability will affect a part number change.

COLOR CODE & SIZE CODE NUMBER: 000-00000-00-00

When applicable, the last two digits of the part number identify:

1. Color Code: The painted color or type of plating or surface treatment used on certain parts.
2. Size Code: The last two digits are also used to show the size of parts (mm). Such as the thickness of shims or the size of pistons.

HARDWARE (Fastener) PART NUMBER CONFIGURATION:

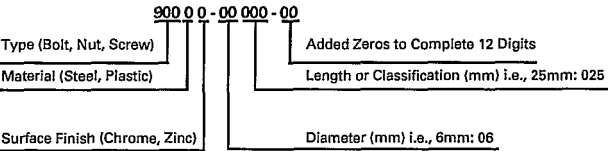

TYPE:

A fastener part number always begins with the number "9" followed by either a 0, 1, 2, 3, 4, 5, 6, 7 or 8 designating one of eight major divisions within this group.


FOREWORD

Example:

- 9 0 000-00000-00 "0" designates various types.
- 9 1 000-00000-00 "1" designates bolts, cotter pins, etc.
- 9 2 000-00000-00 "2" designates screw, nuts, etc.
- 9 3 000-00000-00 "3" designates oil seals, o-rings, bearings, etc.
- 9 4 000-00000-00 "4" designates spark plugs.
- 9 5 000-00000-00 "5" designates bolts and nuts.
- 9 7 000-00000-00 "7" designates ISO bolts.
- 9 8 000-00000-00 "8" designates ISO screws and nuts.

The only major divisions which the mechanic should become familiar with are those related to the general hardware (nuts, bolts, and washers), since these are the most commonly used and most often replaced items. By knowing how to interpret the part number, the dimensions of a piece of hardware can be determined. This can be very helpful during major engine repair, and general parts replacement.


BOLT EXAMPLE:



EXCEPTION:

It is NOT possible to identify the LENGTH of bolts having a 901 prefix. Only the bolt diameter can be identified with this number.

NUT AND WASHER EXAMPLE:

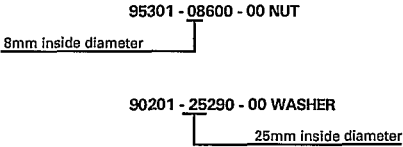

-MODEL LABEL-

A label called "Model Label" is affixed in the location as indicated in (3) below. When using this parts catalogue, please be sure to cross-reference the "model code - production code No." in the catalogue to the "model code - production code No." indicated on the Model Label affixed onto the product concerned.

"MODEL LABEL" INDICATION

1
xxxx - xxx

2
x³

1 Model Type Code


2 Production Code Nol

3 Coloring Type

○ 4TW1-010


● A

MODEL LABEL AFFIXING LOCATION

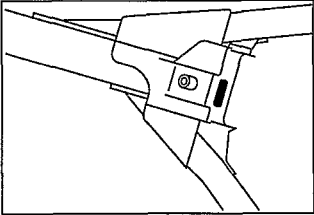

MODEL CODE - PRODUCTION CODE NUMBER OF MODEL LISTED IN THIS PARTS CATALOG

Model Code	Production Code No.	Country (destination)
5FYC	010	U49
5FYD	010	CALIFORNIA

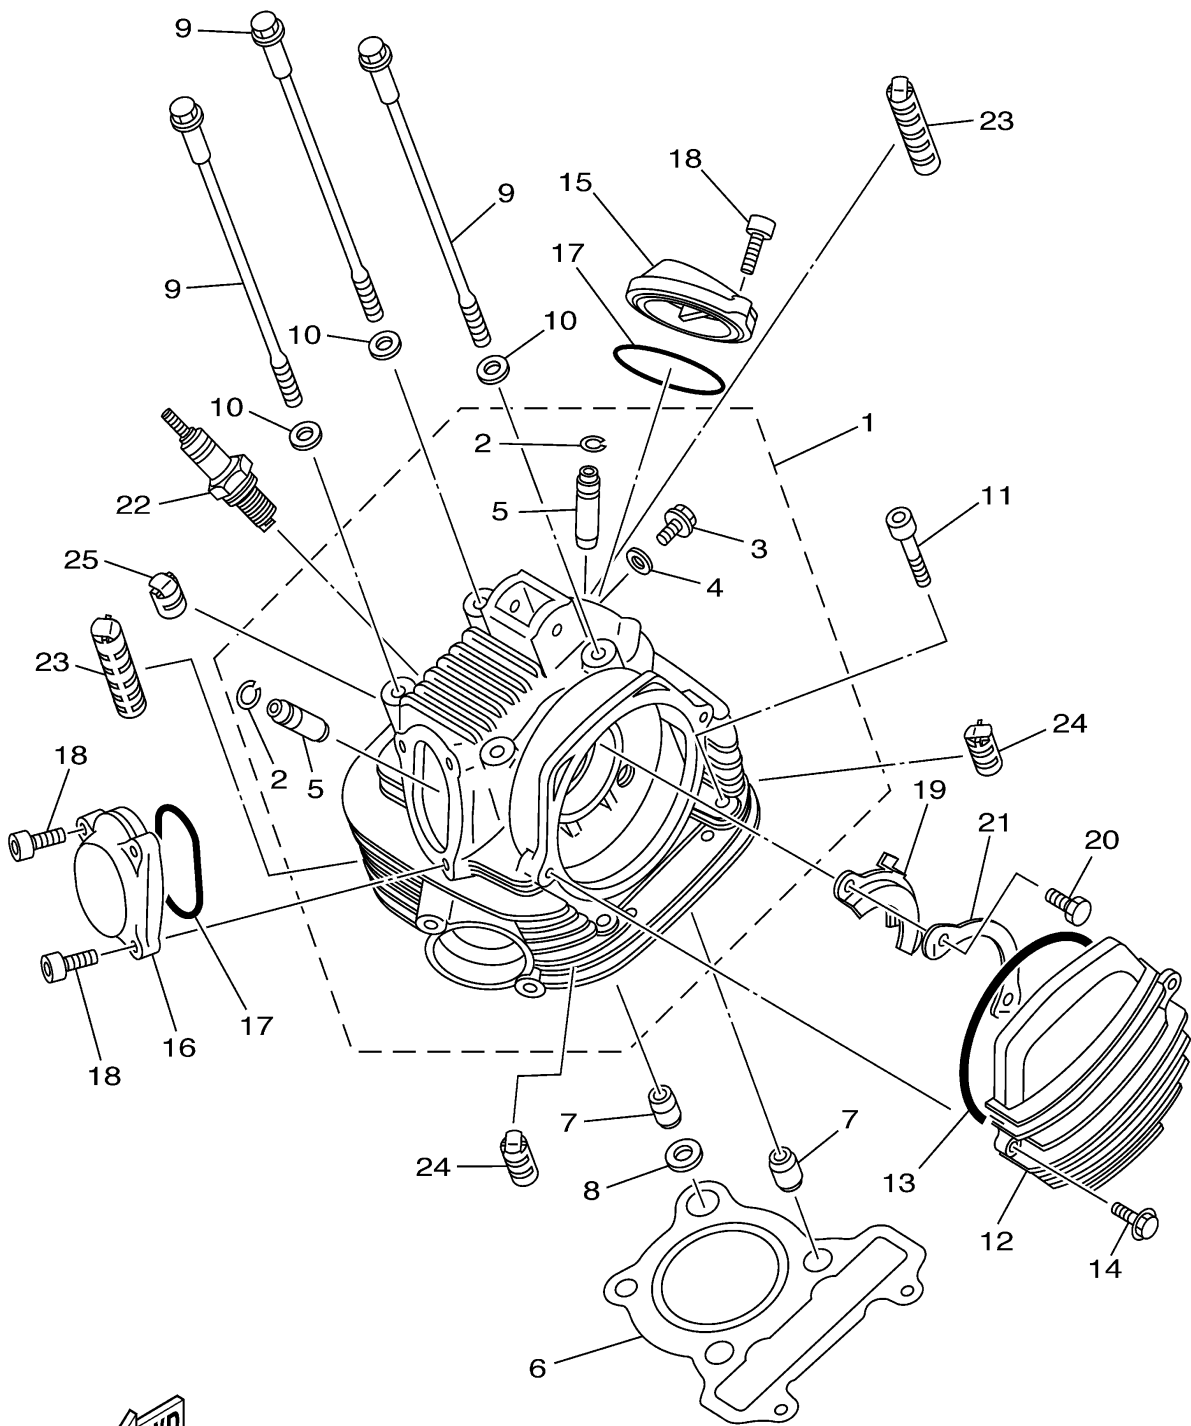


CYLINDER HEAD

Ref. No.	Part Number	Description	Qty	Remarks
1	15A-11110-03-00	CYLINDER HEAD ASSY	1	
2	93440-10085-00	. CIRCLIP	2	
3	90153-06029-00	. .SCREW, HEXAGON	1	
4	90430-06014-00	. GASKET	1	
5	5H0-11133-11-00	. GUIDE, INTAKE VALVE	2	
6	1NU-11181-00-00	GASKET, CYLINDER HEAD 1	1	
7	99530-14016-00	PIN, DOWEL	3	
8	90430-14131-00	GASKET	1	
9	90105-08195-00	BOLT, FLANGE	4	
10	90201-08609-00	WASHER, PLATE	4	
11	91317-08045-00	BOLT	2	
12	15A-11185-00-00	COVER, CYLINDER HEAD SIDE 1	1	
13	93211-05471-00	O-RING	1	
14	95027-06020-00	BOLT, FLANGE	2	
15	15A-11186-00-00	COVER, CYLINDER HEAD SIDE 2	1	
16	15A-11187-00-00	COVER, CYLINDER HEAD SIDE 3	1	
17	93210-57634-00	O-RING	2	
18	91317-06018-00	BOLT	5	
19	5H0-1111F-00-00	PLATE	1	
20	97007-06012-00	.BOLT	2	
21	90215-06184-00	WASHER, LOCK	1	
22	NGK-DR8EA-00-00	PLUG, SPARK (NGK DR8EA)	1	UR
23	15A-11162-00-00	ABSORBER 2	2	
24	5H0-11162-00-00	ABSORBER 2	2	
25	15A-11161-01-00	ABSORBER 1	1	




5FY8100-1010

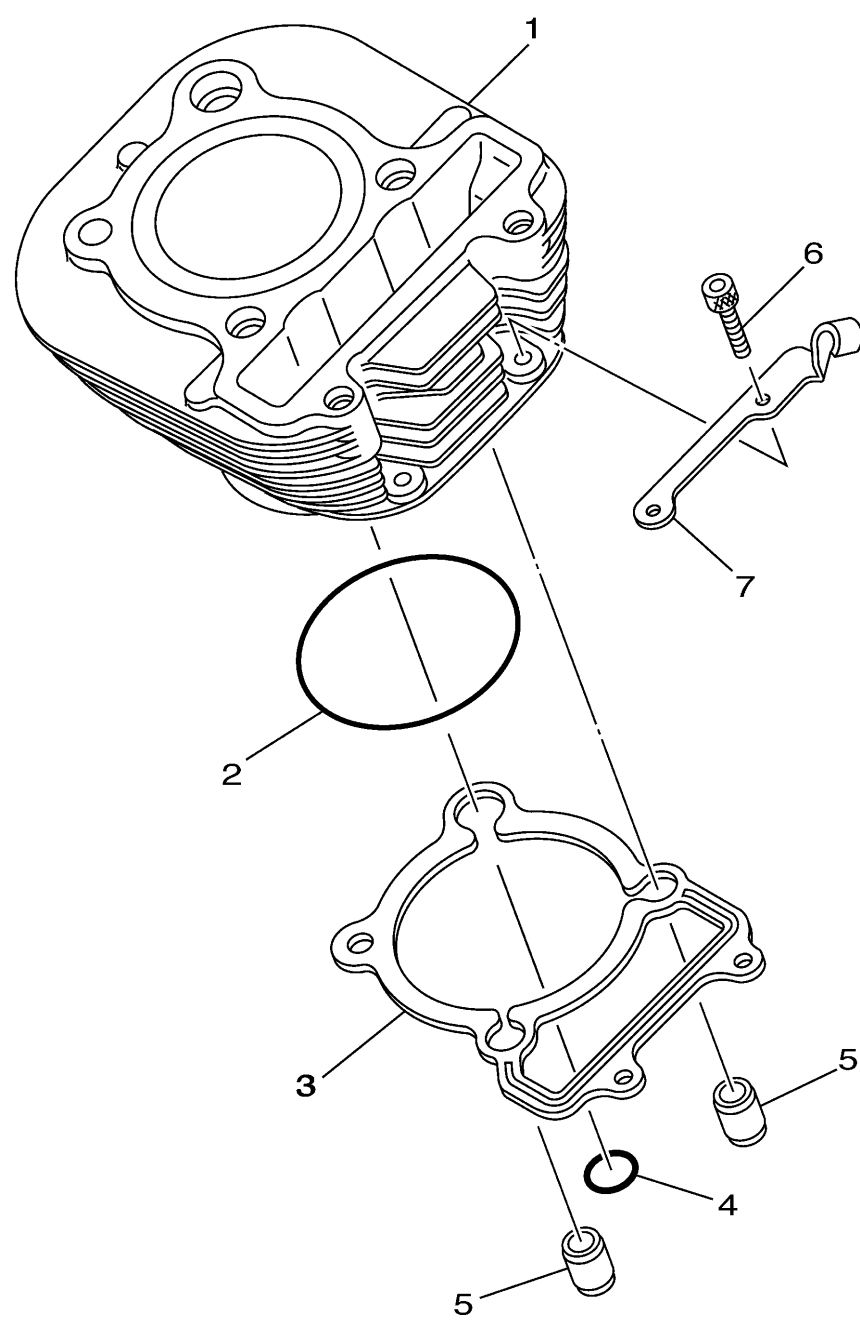

CYLINDER

Ref. No.	Part Number	Description	Qty	Remarks
1	47J-11310-00-00	CYLINDER	1	
2	93210-72529-00	O-RING	1	
3	5MP-11351-00-00	GASKET, CYLINDER	1	
4	93210-13361-00	.O-RING	1	
5	99530-14016-00	PIN, DOWEL	2	
6	91317-06030-00	BOLT	2	
7	15A-15441-00-00	HOLDER, CLUTCH CABLE ...	1	


5FY8100-1020

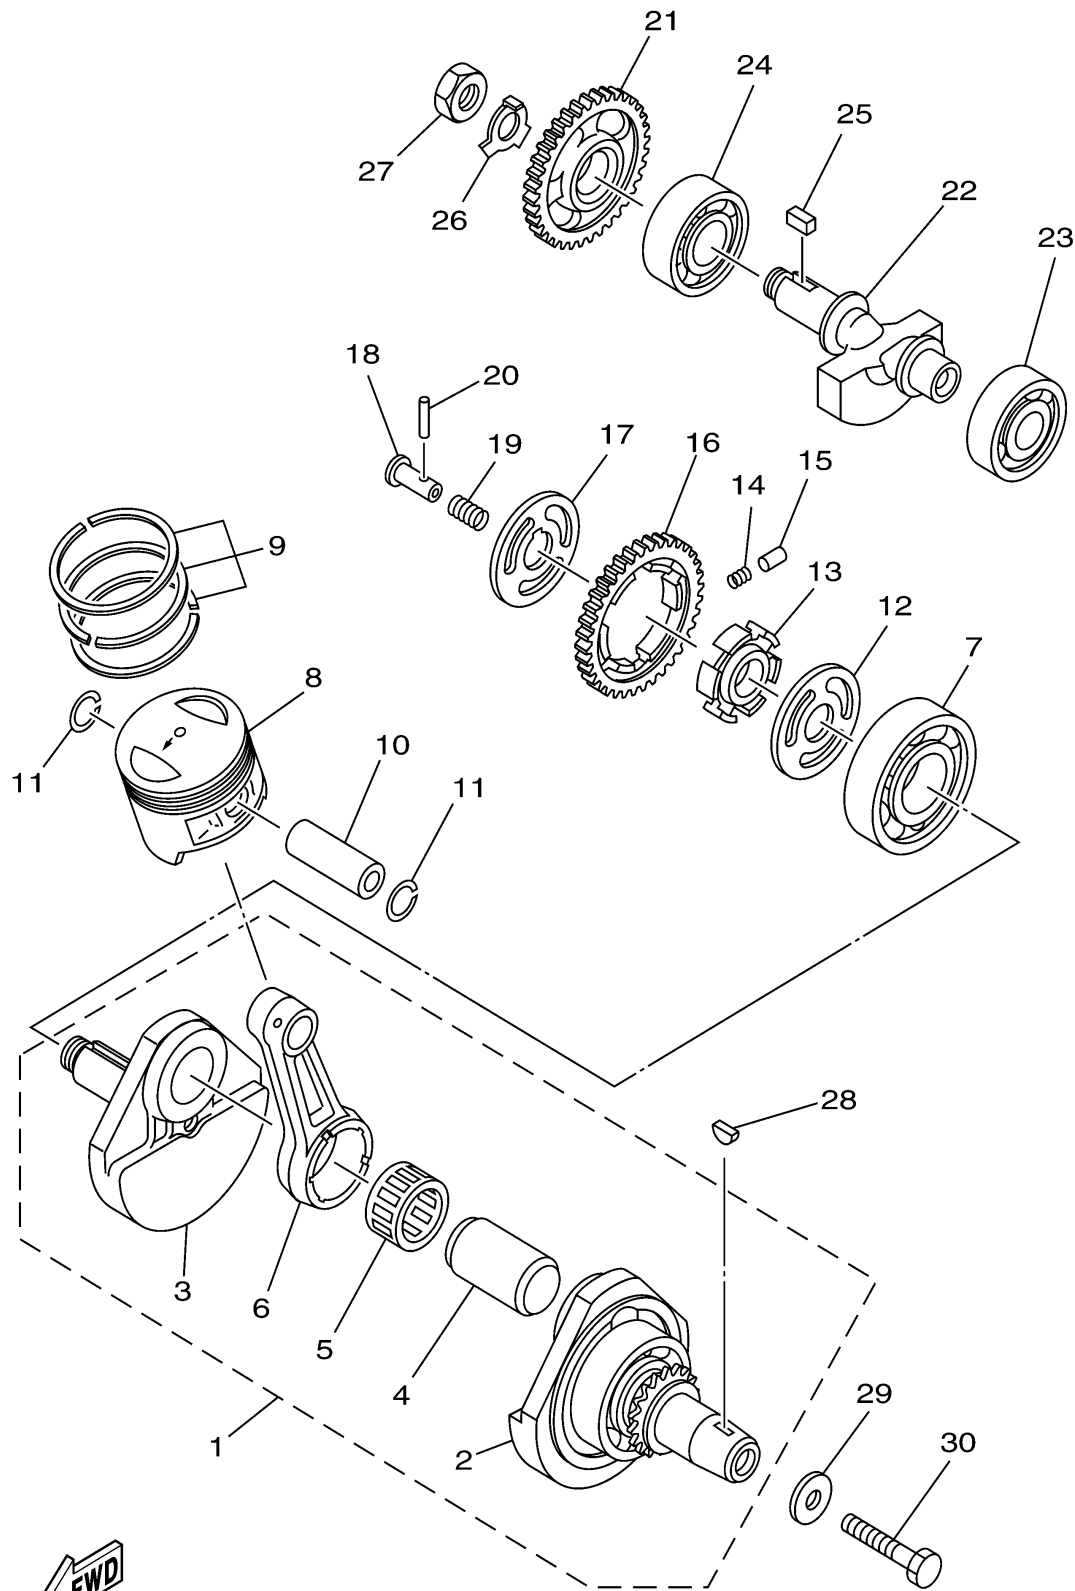


CRANKSHAFT. PISTON

Ref. No.	Part Number	Description	Qty	Remarks
1	5H0-11400-01-00	CRANKSHAFT ASSY	1	
2	5H0-11412-09-00	. CRANK 1	1	
3	5H0-11422-00-00	. CRANK 2	1	
4	5H0-11681-00-00	. PIN, CRANK 1	1	
5	93310-530J3-00	. BEARING	1	
6	15A-11651-00-00	. ROD, CONNECTING	1	
7	93306-30611-00	BEARING	1	
8	36X-11631-00-A0	PISTON (STD)	1	
	36X-11638-00-00	PISTON (1.00MM O/S)	1	AP
	36X-11636-00-00	PISTON (0.50MM O/S)	1	AP
9	15A-11603-00-00	PISTON RING SET (STD)	1	
	15A-11607-00-00	PISTON RING SET (1.00MM O/S)	1	AP
	15A-11605-00-00	PISTON RING SET (0.50MM O/S)	1	AP
10	15A-11633-00-00	PIN, PISTON	1	
11	93450-17044-00	CIRCLIP	2	
12	90201-201E4-00	WASHER, PLATE	1	
13	5H0-11496-00-00	BOSS, BUFFER	1	
14	90501-21133-00	SPRING, COMPRESSION	6	
15	93605-10090-00	PIN, DOWEL	3	
16	5H0-11536-00-00	GEAR, DRIVE (38T)	1	
17	90214-20023-00	WASHER, CLAW	1	
18	90240-07083-00	PIN, CLEVIS	1	
19	90501-07629-00	SPRING, COMPRESSION	1	
20	93602-13177-00	PIN, DOWEL	1	
21	5H0-11531-00-00	GEAR, BALANCE WEIGHT (38T)	1	
22	15A-11454-00-00	WEIGHT 1	1	
23	93306-30427-00	BEARING	1	

CONTINUED ON NEXT FRAME ➤


5FY5100-0030

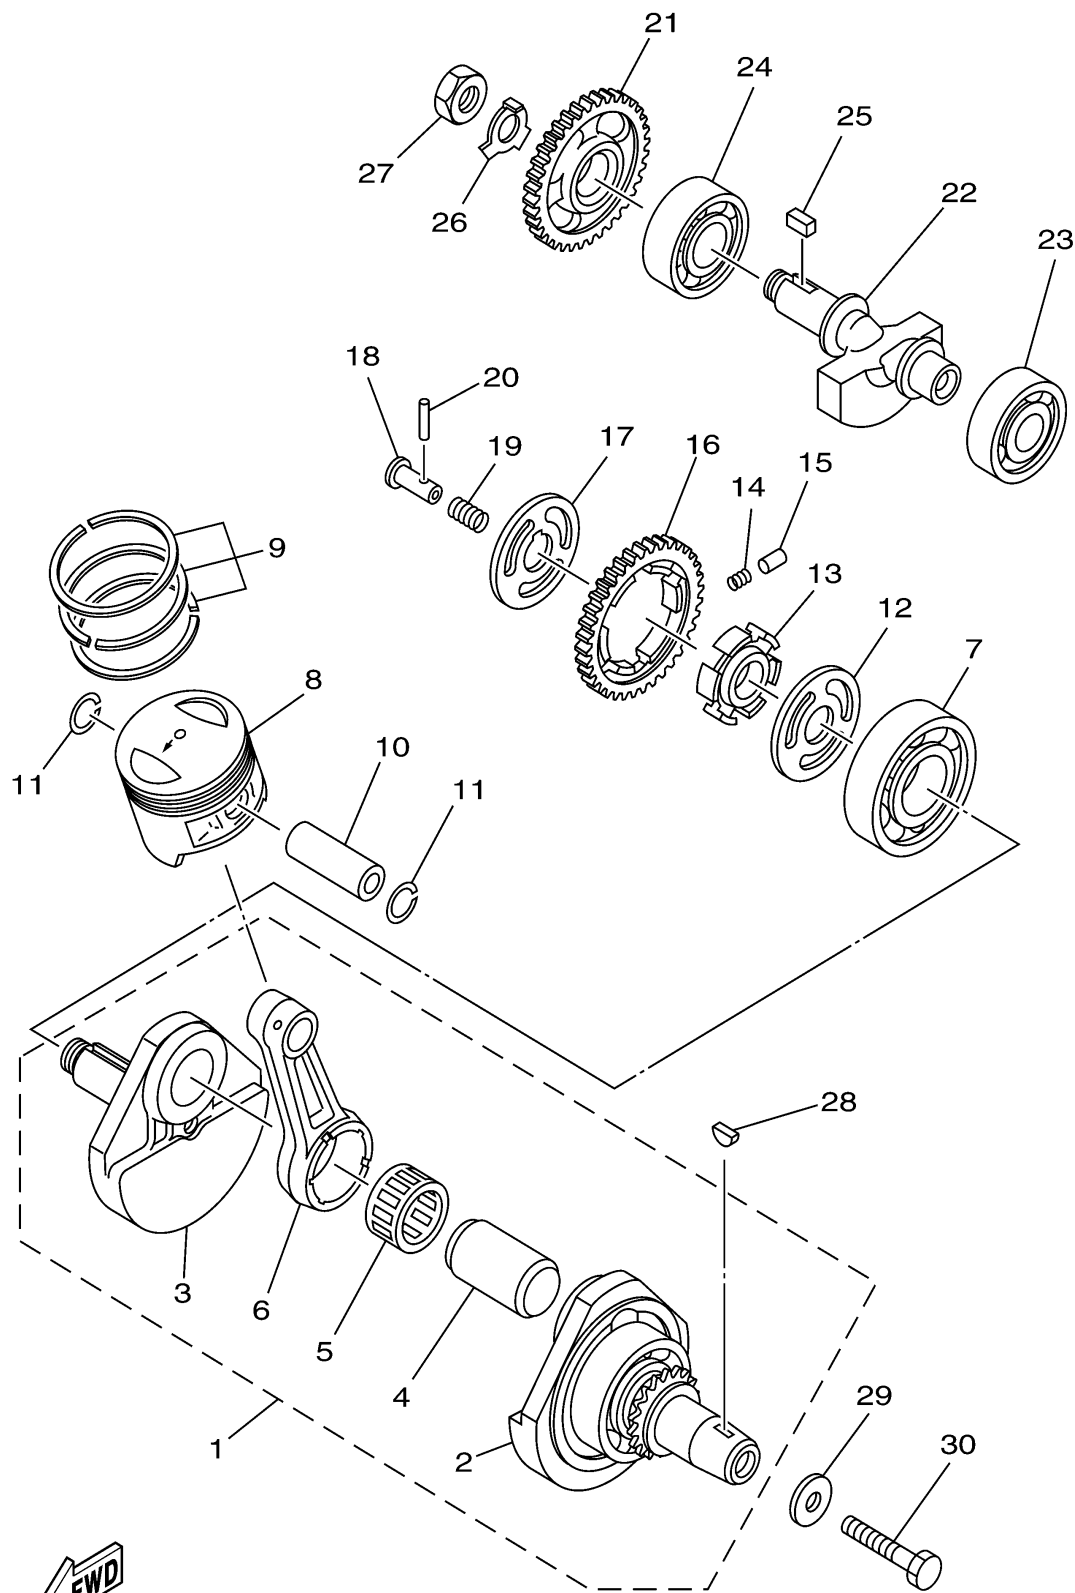

CRANKSHAFT. PISTON


Ref. No.	Part Number	Description	Qty	Remarks
24	93306-30427-00	BEARING	1	
25	90282-05013-00	KEY, STRAIGHT	1	
26	90215-14205-00	WASHER, LOCK	1	
27	90170-14284-00	NUT	1	
28	90280-05013-00	KEY, WOODRUFF	1	
29	90201-10508-00	WASHER, PLATE	1	
30	90101-10188-00	BOLT	1	

5FY5100-0030

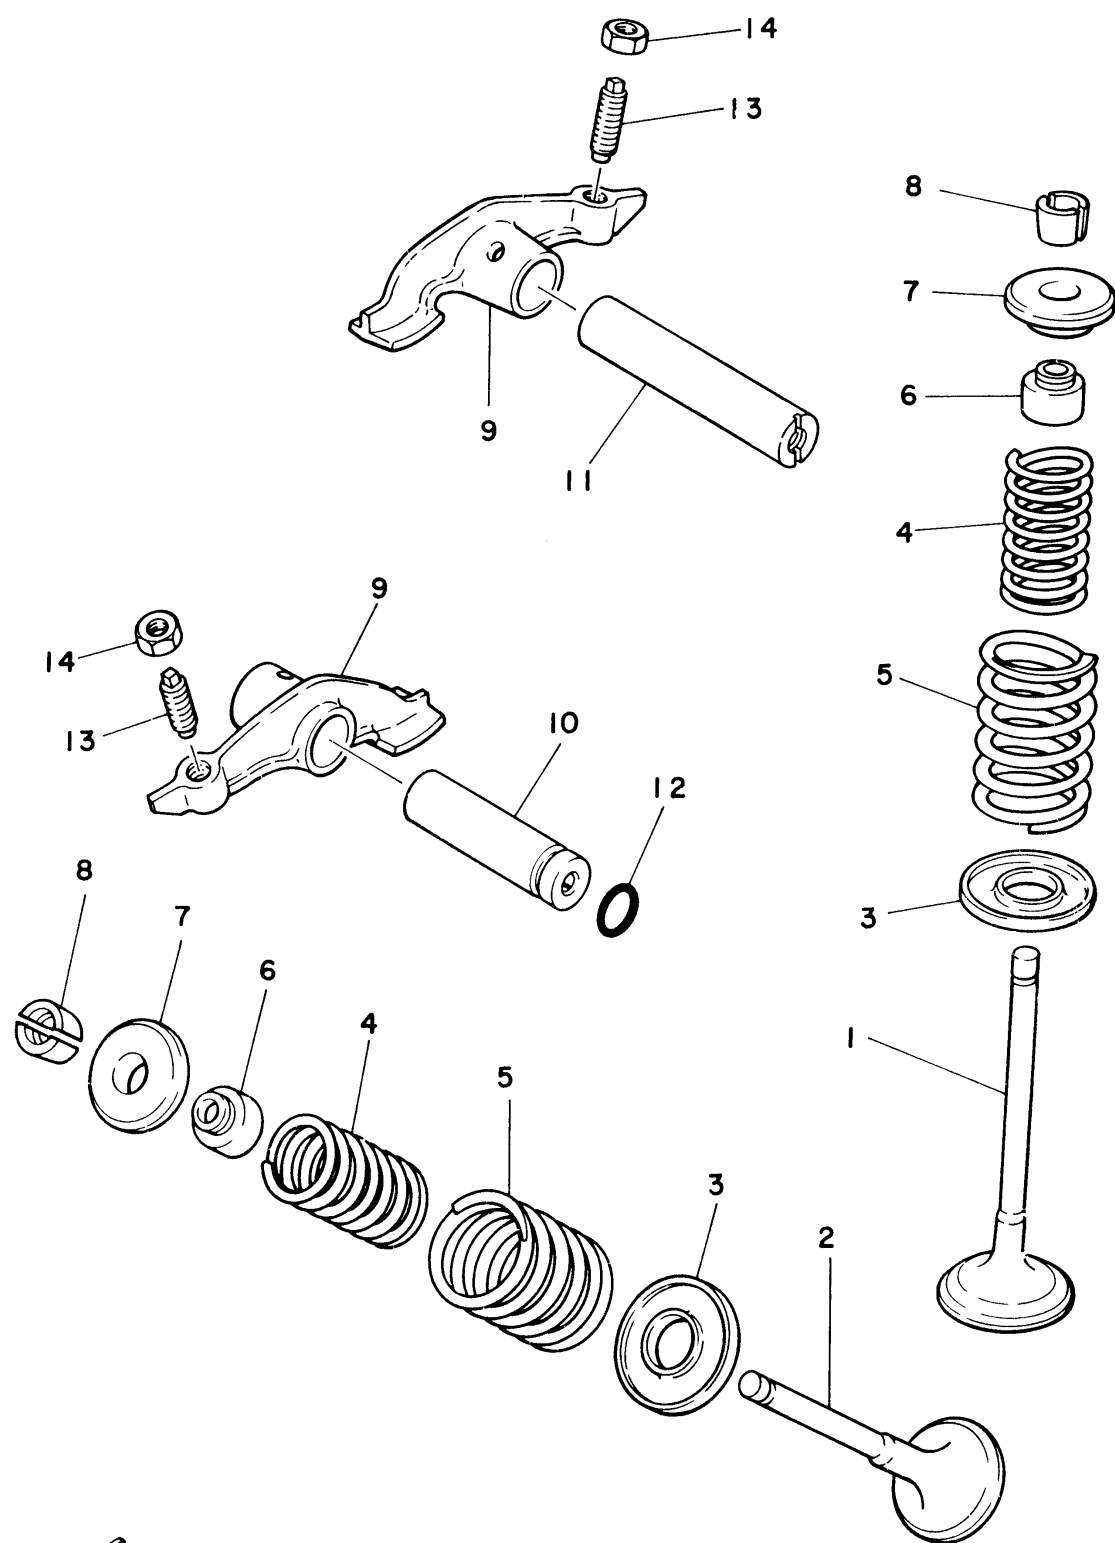

VALVE

Ref. No.	Part Number	Description	Qty	Remarks
1	5H0-12111-01-00	VALVE, INTAKE	1	
2	5H0-12121-01-00	VALVE, EXHAUST	1	
3	4G0-12116-01-00	SEAT, VALVE SPRING	2	
4	11H-12113-00-00	SPRING, VALVE INNER	2	
5	11H-12114-00-00	SPRING, VALVE OUTER	2	
6	5H0-12119-00-00	SEAL, VALVE STEM	2	
7	4G0-12117-00-00	RETAINER, VALVE SPRING ..	2	
8	4G0-12118-00-00	COTTER, VALVE	4	
9	36X-12151-00-00	ARM, VALVE ROCKER	2	
10	5H0-12156-00-00	SHAFT, ROCKER 2	1	
11	5H0-12146-00-00	SHAFT, ROCKER	1	
12	93210-09165-00	O-RING	1	
13	2NX-12159-00-00	SCREW, VALVE ADJUSTING ..	2	
14	90170-06128-00	NUT	2	

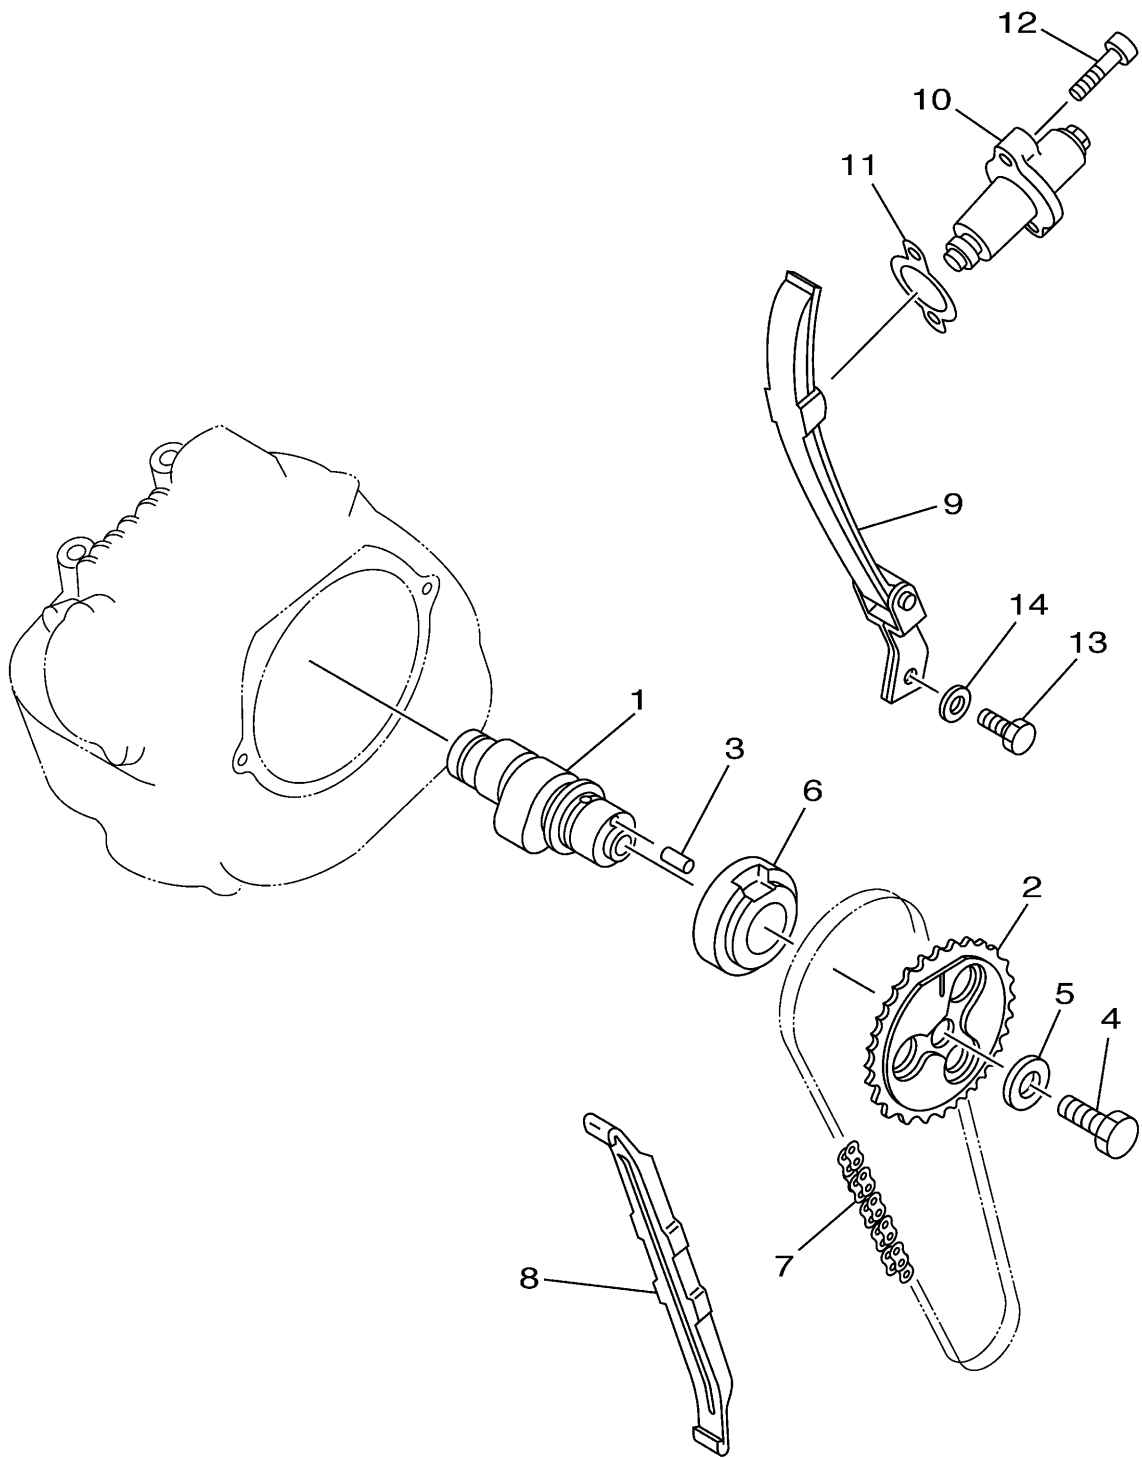

CAMSHAFT. CHAIN


Ref. No.	Part Number	Description	Qty	Remarks
1	36X-12171-00-00	CAMSHAFT 1	1	
2	1KH-12176-00-00	SPROCKET, CAM CHAIN	1	
3	93604-10011-00	PIN, DOWEL	1	
4	90101-10303-00	BOLT	1	
5	90201-10591-00	WASHER, PLATE	1	
6	90387-255F3-00	COLLAR	1	
7	94580-41104-00	CHAIN	1	
8	5H0-12231-00-00	GUIDE, STOPPER 1	1	
9	5N0-12241-00-00	GUIDE, STOPPER 2	1	
10	3GC-12210-10-00	TENSIONER ASSY, CAM CHAIN	1	
11	4FM-12213-00-00	GASKET, TENSIONER CASE ..	1	
12	91317-06025-00	BOLT, SOCKET HEAD	2	
13	97027-06016-00	BOLT	2	
14	92907-06600-00	WASHER, PLATE	2	




5FY8100-1050

OIL PUMP

Ref. No.	Part Number	Description	Qty	Remarks
1	5H0-13300-02-00	OIL PUMP ASSY	1	
2	5H0-13326-01-00	. GEAR, PUMP DRIVEN 2 (45T)	1	
3	93603-12030-00	. PIN, DOWEL	1	
4	4BE-13329-01-00	GASKET, PUMP COVER	1	
5	98707-06030-00	SCREW, FLAT HEAD	3	
6	51Y-13411-00-00	STRAINER, OIL	1	
7	90501-18576-00	SPRING, COMPRESSION	1	
8	5H0-15351-00-00	PLUG, DRAIN	1	
9	93210-347A1-00	O-RING	1	
10	5H0-13440-00-00	ELEMENT ASSY, OIL CLEANER	1	
11	3AW-13447-00-00	COVER, OIL ELEMENT	1	
12	93210-54175-00	O-RING	1	
13	90109-06419-00	BOLT	1	
14	93210-07135-00	O-RING	1	
15	95027-06025-00	BOLT, FLANGE	1	
16	90105-065A1-00	BOLT, FLANGE	1	

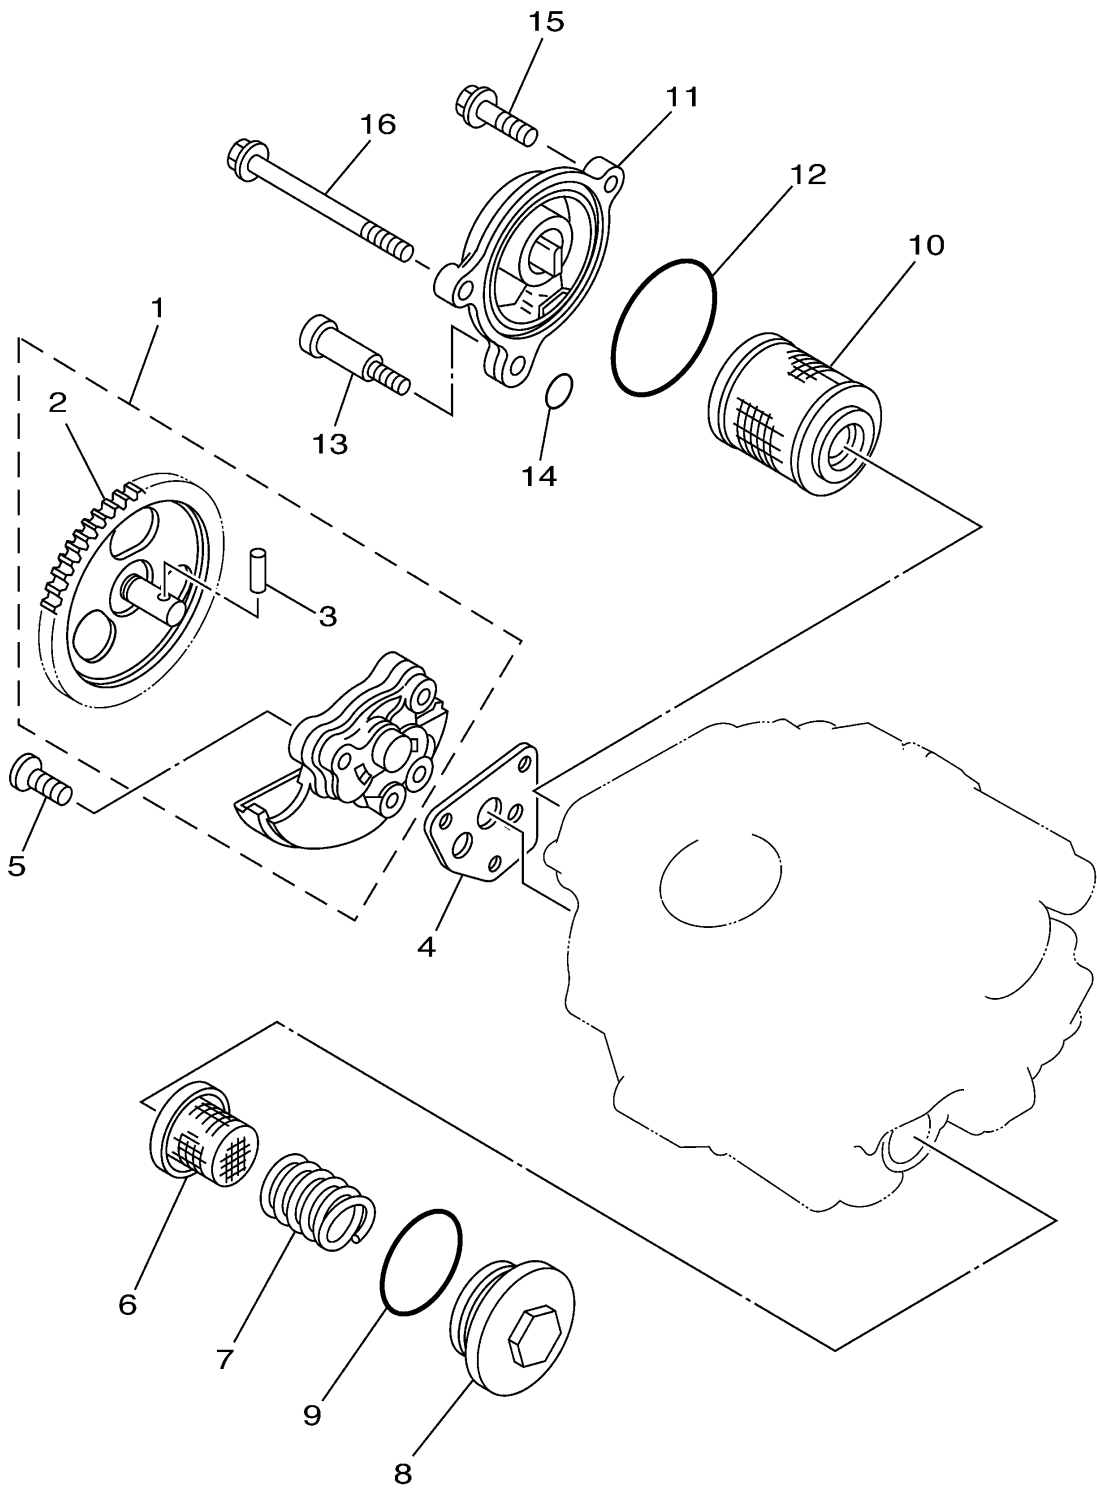

5FY8100-1060

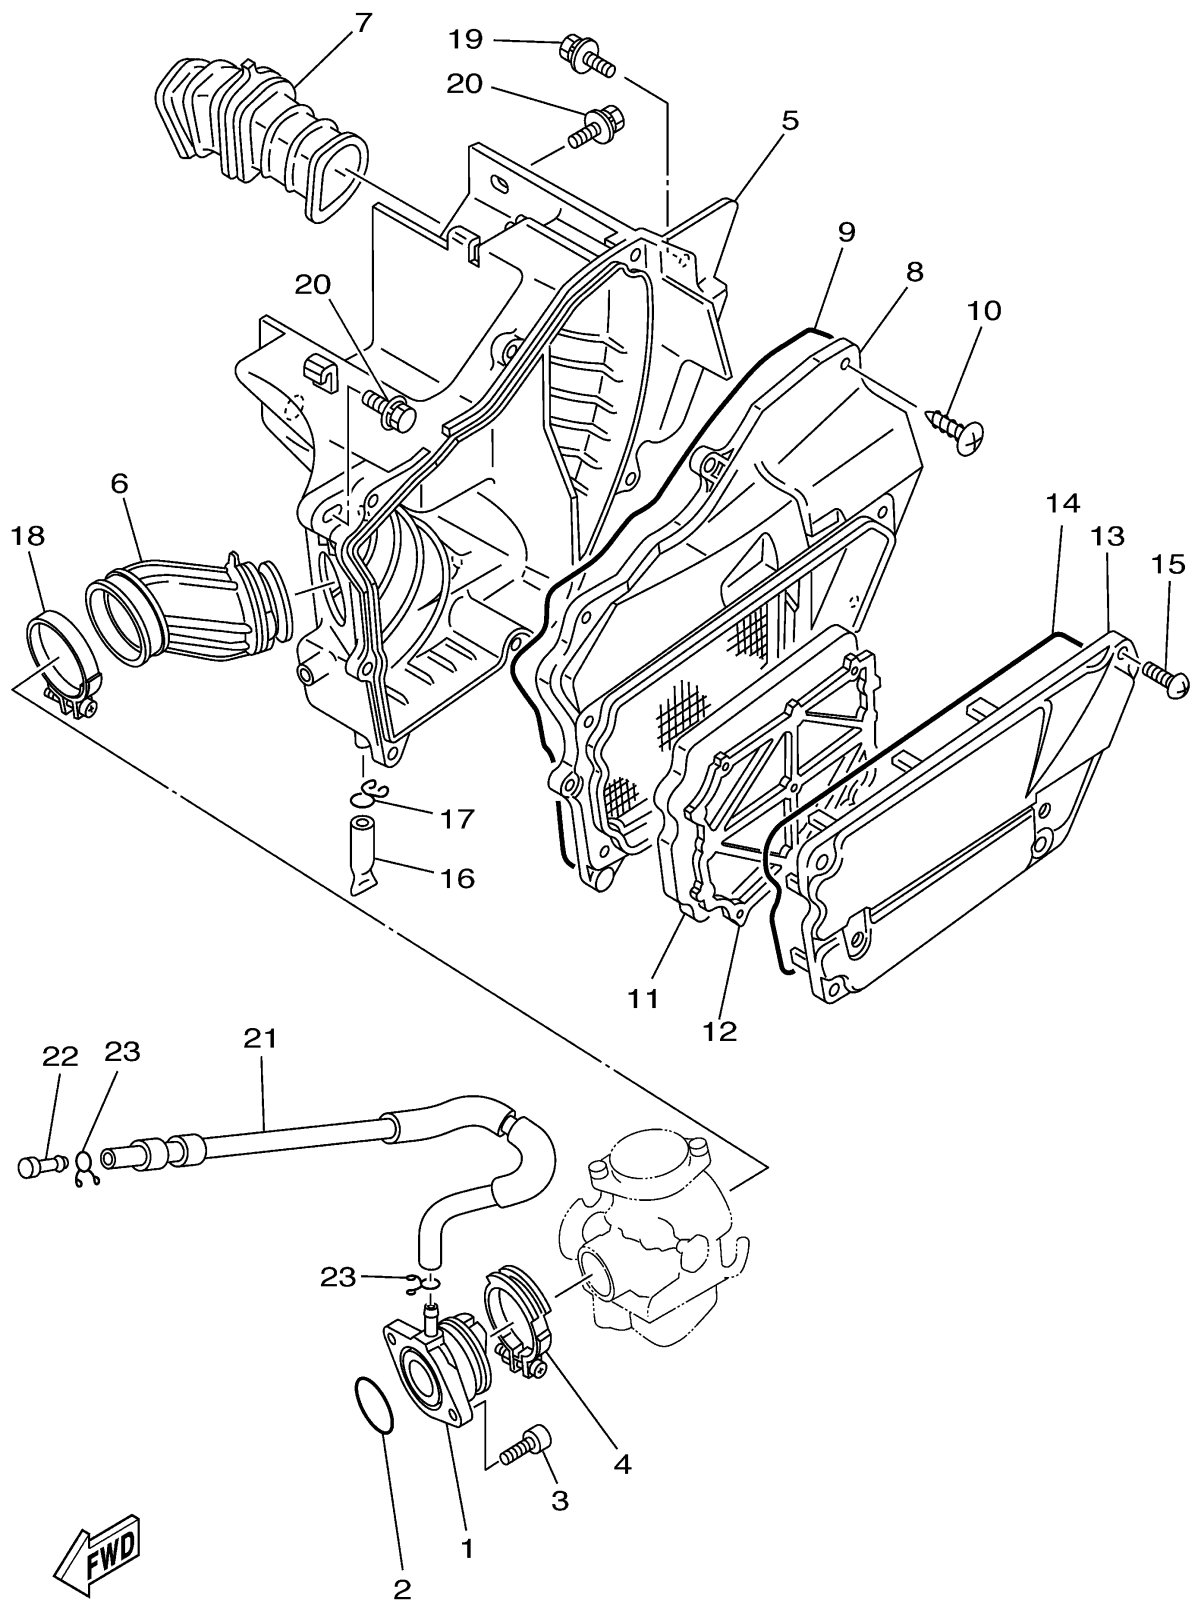


5LB1010-0080

INTAKE

Ref. No.	Part Number	Description	Qty	Remarks
1	5LB-13586-02-00	JOINT, CARBURETOR 1	1	
2	93210-35537-00	O-RING	1	
3	91317-06020-00	BOLT	2	
4	90450-44062-00	HOSE CLAMP ASSY	1	
5	2JX-14411-01-00	CASE, AIR CLEANER 1	1	
6	5LB-14453-10-00	JOINT, AIR CLEANER 1	1	
7	2JL-14437-00-00	DUCT	1	
8	2JX-14412-00-00	CAP, CLEANER CASE 1	1	
9	2JX-14452-00-00	SEAL	1	
10	97707-50520-00	SCREW, TAPPING	7	
11	2JX-14451-00-00	ELEMENT, AIR CLEANER	1	
12	2JX-14458-00-00	GUIDE	1	
13	2JX-14422-00-00	CAP, CLEANER CASE 2	1	
14	5U8-14457-00-00	SEAL	1	
15	90154-05005-00	SCREW, BINDING	4	
16	34X-1443E-00-00	PIPE, DRAIN	1	
17	90467-11106-00	CLIP	1	
18	90460-51059-00	CLAMP, HOSE	1	
19	90119-06056-00	BOLT, WITH WASHER	1	
20	90119-06063-00	BOLT, WITH WASHER	2	
21	5LB-13584-00-00	PIPE, INTAKE MANIFOLD	1	
22	90338-08007-00	PLUG	1	
23	90467-10041-00	CLIP, SCISSOR	2	


CARBURETOR

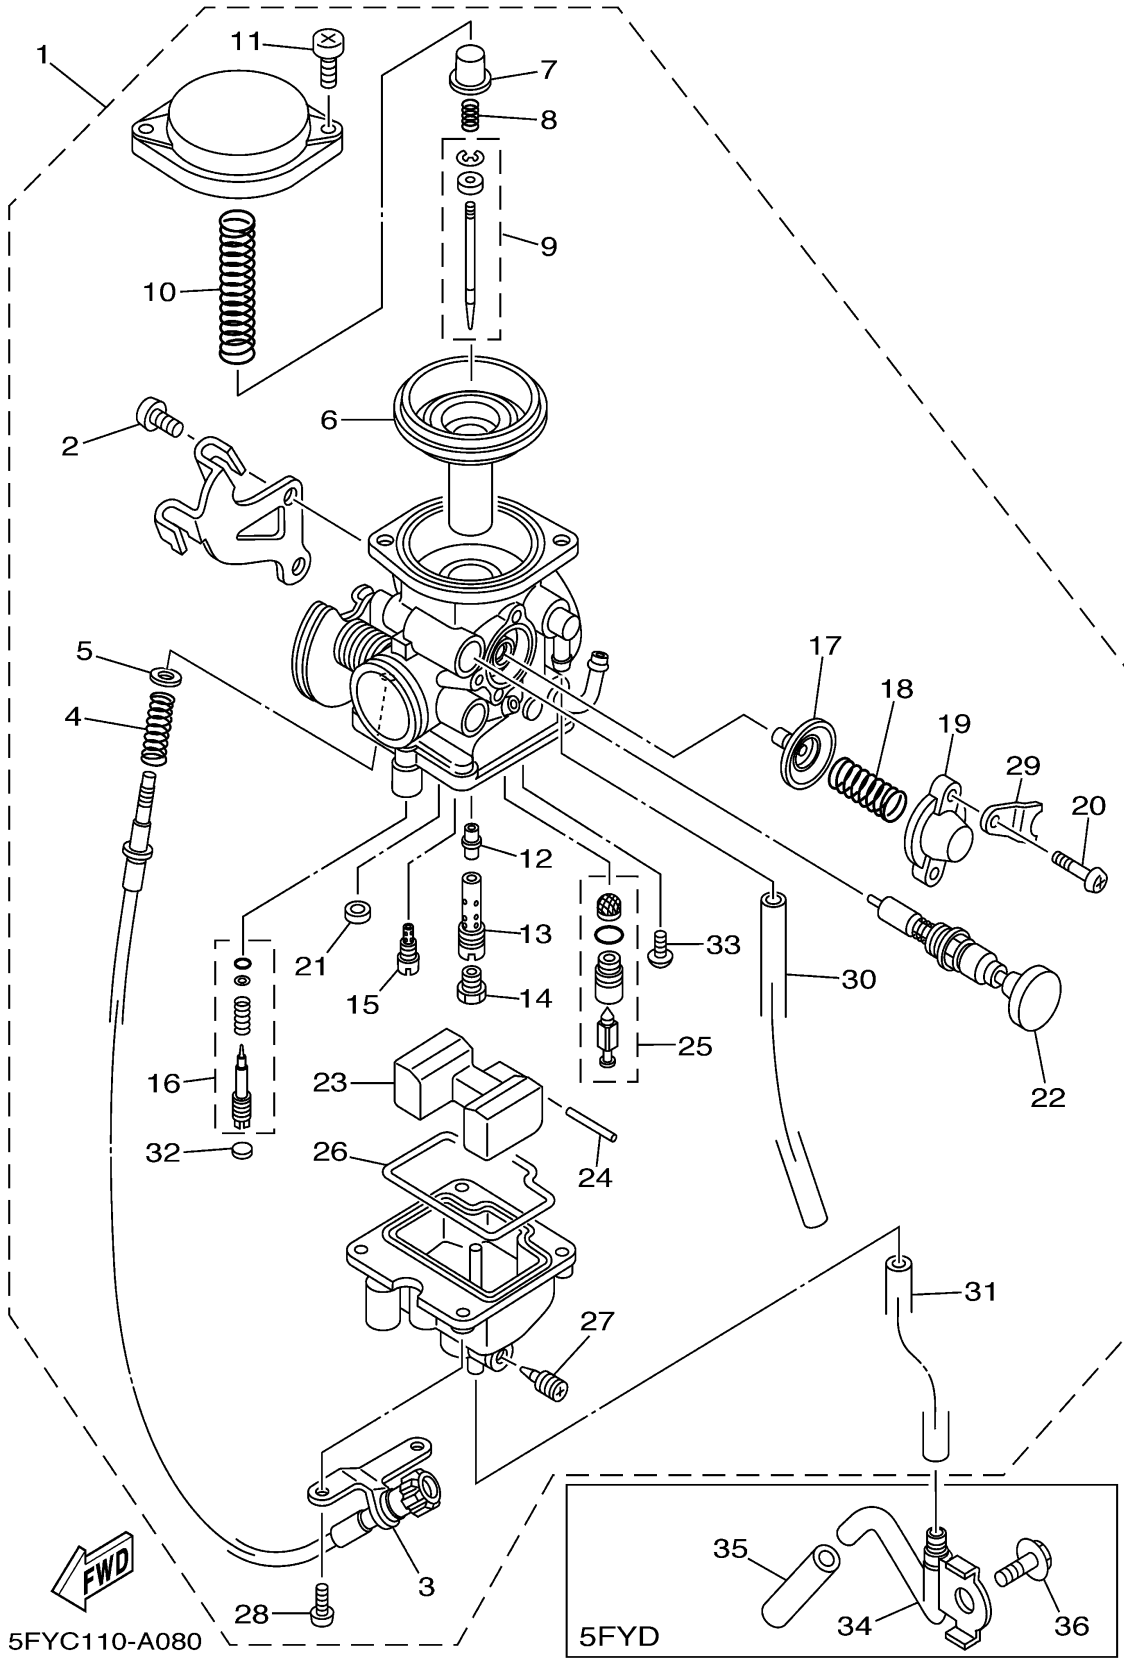


Ref. No.	Part Number	Description	Qty	Remarks
1	5FY-14301-10-00	CARBURETOR ASSY 1	1	(5FYC)
	5FY-14301-00-00	CARBURETOR ASSY 1	1	(5FYD)
2	97801-05010-00	. SCREW, PAN HEAD	2	
3	5LB-14321-00-00	. SCREW, THROTTLE	1	
4	2JX-14333-00-00	. SPRING, THROTTLE STOP	1	
5	5LB-14357-00-00	. WASHER, PLAIN	1	
6	5LB-1434A-00-00	. SUCTION PISTON ASSY	1	
7	5LB-14936-00-00	. SEAT, SPRING	1	
8	5LB-14275-00-00	. SPRING	1	
9	5FY-14336-00-00	. NEEDLE	1	
10	5LB-14286-00-00	. SPRING	1	
11	5LB-14216-00-00	. SCREW	2	
12	5LB-14341-00-00	. NOZZLE, MAIN	1	
13	5LB-14341-10-00	. BLEED, MAIN NOZZLE	1	
14	288-14343-63-00	. JET, MAIN (125)	1	(5FYC)
	288-14343-64-00	. JET, MAIN (128)	1	(5FYD)
15	5LB-14342-65-00	. JET, PILOT (31)	1	
16	5LB-14105-00-00	. PILOT SCREW SET	1	
17	5LB-14368-00-00	. DIAPHRAGM ASSY 1	1	
18	5LB-14589-00-00	. SPRING	1	
19	5LB-14293-00-00	. COVER 1	1	
20	214-24535-00-00	. SCREW, LEVER FITTING	2	
21	50M-14355-00-00	. PLUG	1	
22	5FY-14371-00-00	. PLUNGER, STARTER	1	
23	5LB-14385-00-00	. FLOAT	1	
24	5LB-14386-00-00	. PIN, FLOAT	1	
25	5LB-14390-00-00	. NEEDLE VALVE ASSY	1	
26	5LB-14384-00-00	. GASKET, FLOAT CHAMBER	1	
27	4JP-14323-00-00	. SCREW, AIR ADJUSTING	1	

CONTINUED ON NEXT FRAME ➤

CARBURETOR

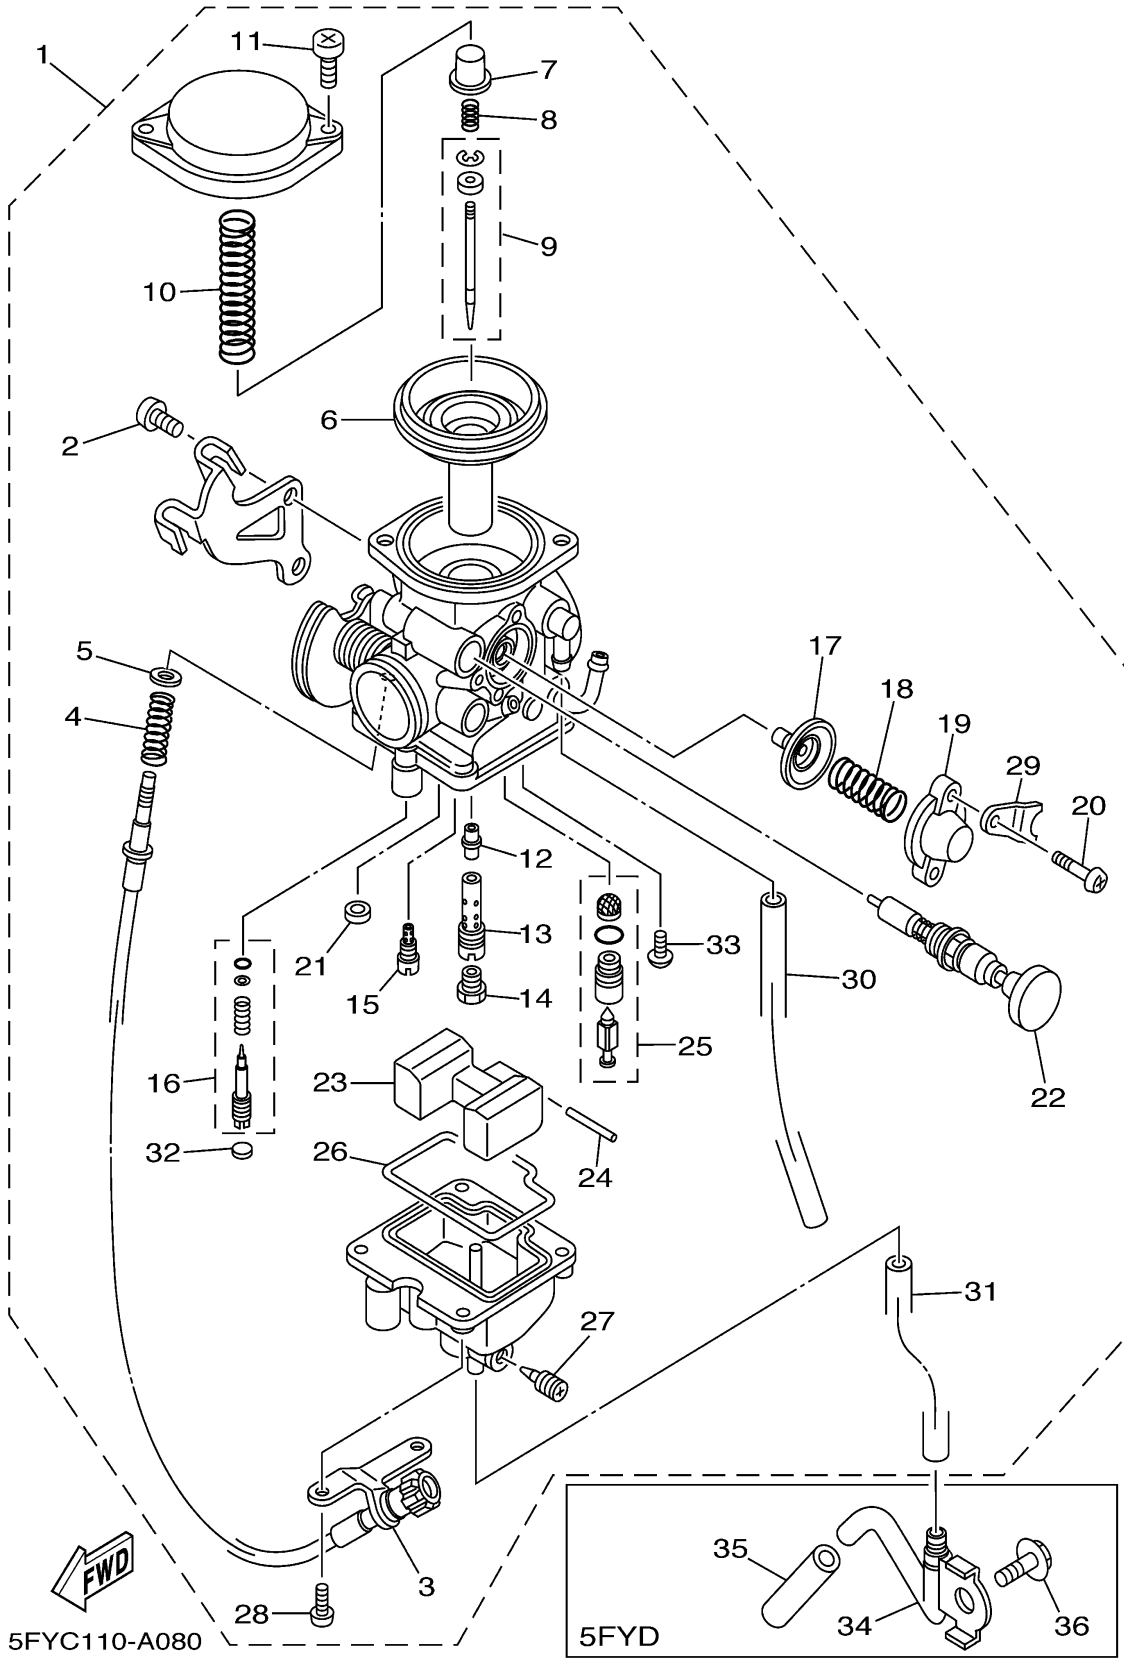


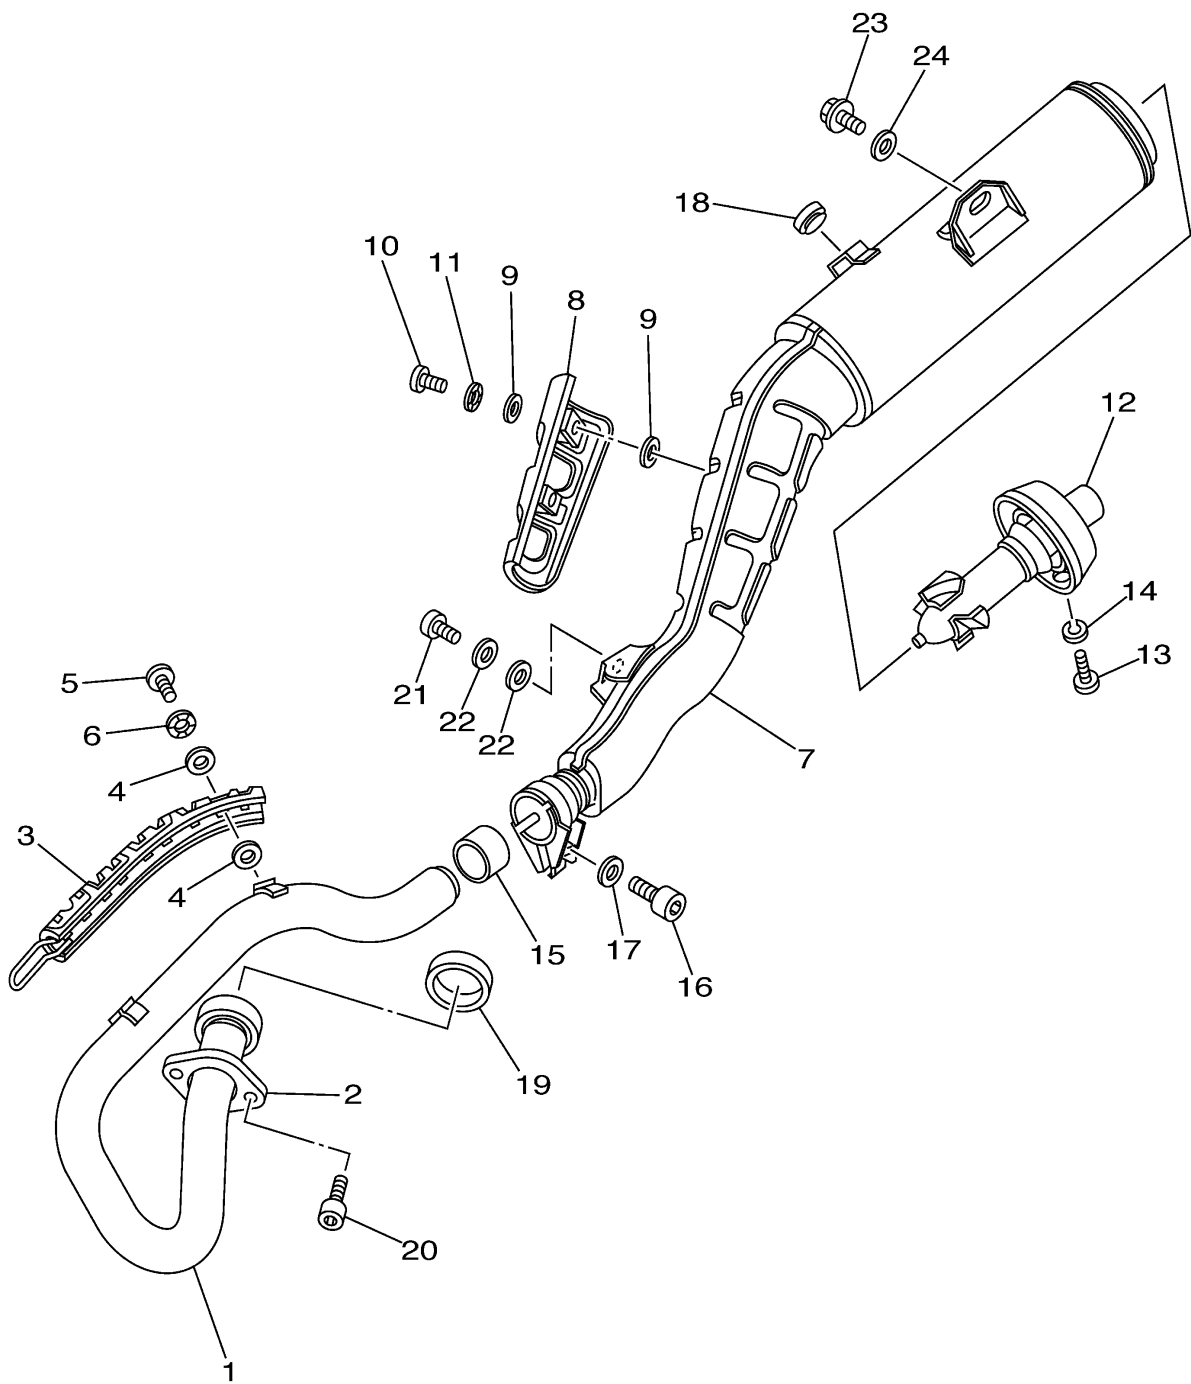

5FY8100-1090

EXHAUST


Ref. No.	Part Number	Description	Qty	Remarks
1	2JX-14611-01-00	PIPE, EXHAUST 1	1	
2	5H0-14612-00-00	NUT, RING	1	
3	5LB-14628-00-00	PROTECTOR, EXHAUST PIPE .	1	
4	4BD-14766-00-00	WASHER, PROTECTOR	4	
5	98907-06010-00	SCREW, BIND	2	
6	90206-06090-00	WASHER, WAVE	2	
7	2JX-14711-00-00	MUFFLER 1	1	
8	2JX-14728-00-00	PROTECTOR, MUFFLER 2	1	
9	90202-05191-00	WASHER, PLATE	4	
10	98907-06010-00	SCREW, BIND	2	
11	90206-06090-00	WASHER, WAVE	2	
12	1RH-14752-01-00	PIPE, OUTLET	1	
13	98507-06010-00	.SCREW, PAN HEAD	1	
14	92907-06600-00	WASHER, PLATE	1	
15	3YF-14714-00-00	GASKET, MUFFLER	1	
16	91317-08025-00	BOLT, HEXAGON SOCKET HEAD	1	
17	92907-08600-00	WASHER	1	
18	22W-24181-00-00	.DAMPER, LOCATING 1	1	
19	4BE-14613-00-00	GASKET, EXHAUST PIPE	1	
20	91317-06020-00	BOLT	2	
21	91317-08016-00	BOLT	1	
22	90201-08326-00	WASHER, PLATE	2	
23	95817-08016-00	BOLT, FLANGE	1	
24	90201-08326-00	WASHER, PLATE	1	

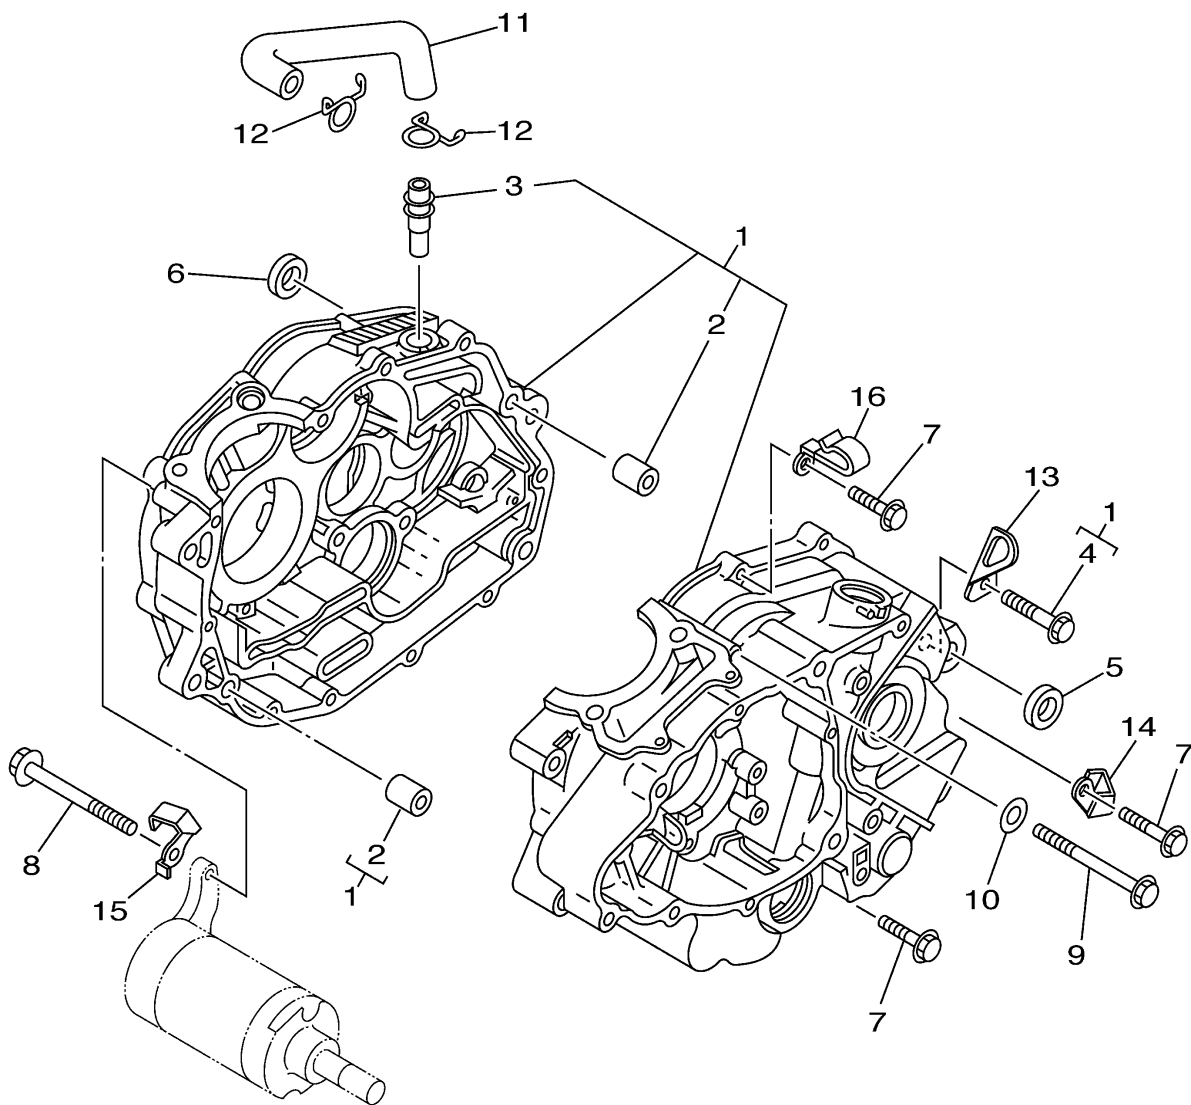

CRANKCASE

Ref. No.	Part Number	Description	Qty	Remarks
1	3AW-15100-03-00	CRANKCASE ASSY	1	
2	99530-12016-00	. .PIN, DOWEL	2	
3	371-11167-01-00	. PIPE, BREATHER 2	1	
4	98507-06040-00	. SCREW, PAN HEAD	2	
5	90387-125F1-00	COLLAR	1	
6	90387-125F1-00	COLLAR	1	
7	95027-06030-00	BOLT, FLANGE	7	
8	95027-06090-00	BOLT, FLANGE	2	
9	95027-06085-00	BOLT, FLANGE	1	
10	90430-06014-00	GASKET	1	
11	3Y1-11166-00-00	PIPE, BREATHER 1	1	
12	90467-14015-00	CLIP, SCISSOR	2	
13	90465-08020-00	CLAMP	1	
14	90462-08225-00	CLAMP	1	
15	90462-08224-00	CLAMP	1	
16	90465-08127-00	CLAMP	1	




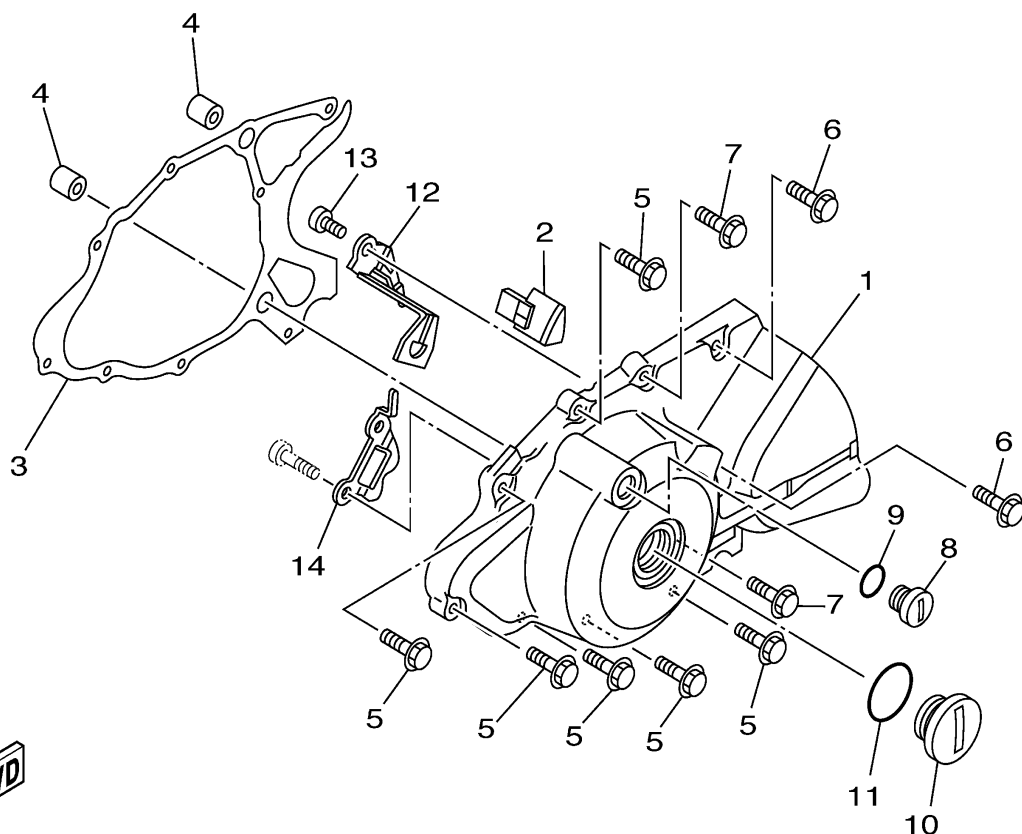

Ref. No.	Part Number	Description	Qty	Remarks
1	5FY-15410-00-00	CRANKCASE COVER ASSY 1	1	
2	2JX-15377-00-00	GUIDE, INLET	1	
3	3AW-15451-03-00	GASKET, CRANKCASE COVER 1	1	
4	99530-12016-00	.PIN, DOWEL	2	
5	95027-06025-00	BOLT, FLANGE	6	
6	90105-06017-00	BOLT, FLANGE	2	
7	90105-06014-00	BOLT, FLANGE	2	
8	90340-14128-00	PLUG, STRAIGHT SCREW	1	
9	93210-14369-00	O-RING	1	
10	90340-32123-00	PLUG, STRAIGHT SCREW	1	
11	93210-32172-00	O-RING	1	
12	90465-08364-00	CLAMP	1	
13	91317-06010-00	BOLT	1	
14	90465-16187-00	CLAMP	1	
15	3AW-15431-01-00	COVER, CRANKCASE 3	1	
16	4BE-15462-00-00	GASKET, CRANKCASE COVER 3	1	
17	99530-12016-00	.PIN, DOWEL	2	
18	95027-06025-00	BOLT, FLANGE	5	
19	95027-06035-00	BOLT, FLANGE	3	
20	95027-06045-00	BOLT, FLANGE	2	
21	3Y1-15363-00-00	PLUG, OIL	1	
22	93210-19123-00	O-RING	1	
23	3Y1-15361-00-00	GAUGE, LEVEL	1	
24	90462-08225-00	CLAMP	1	
25	55X-15167-00-00	PLUG, BLIND 1	1	




5FY8100-1110

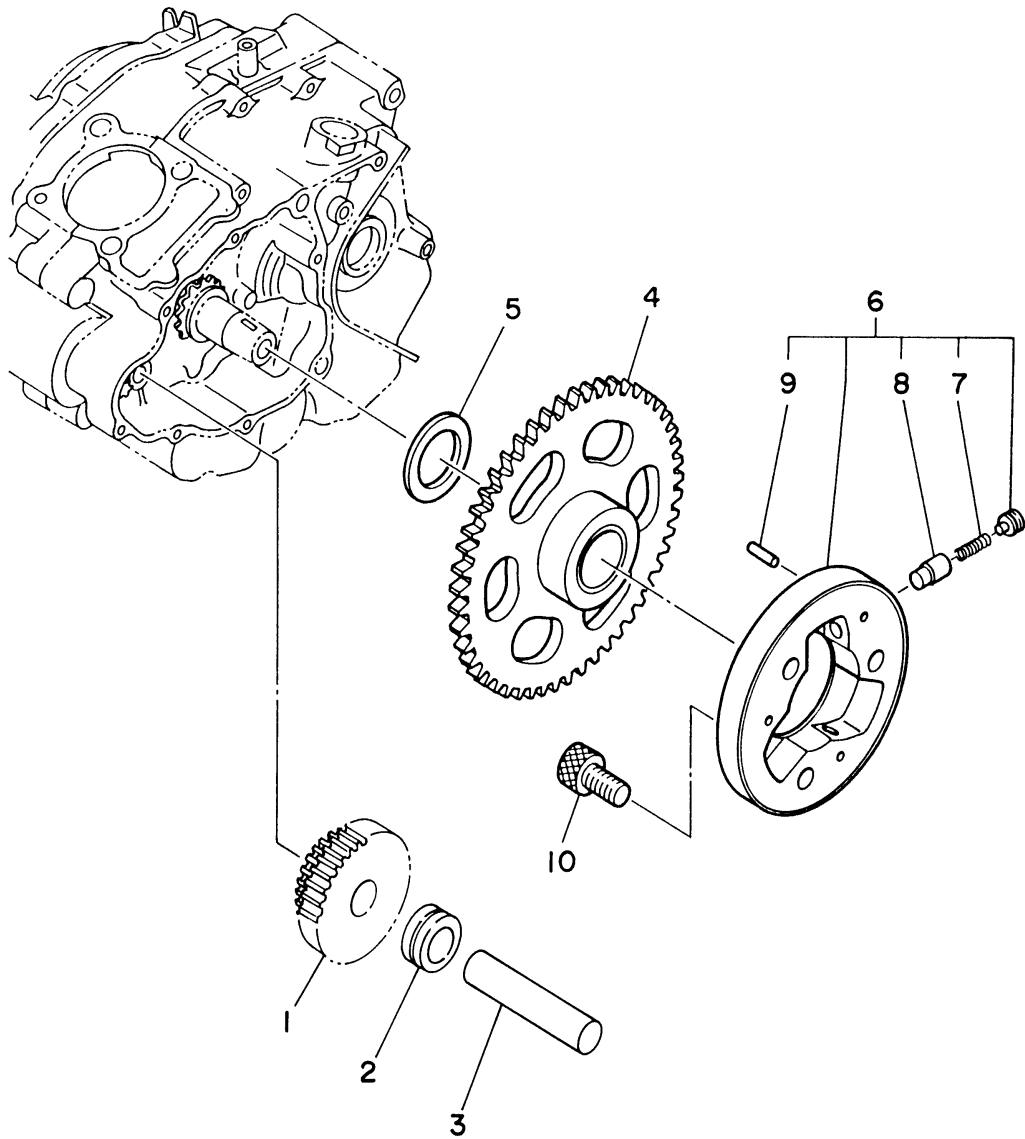

STARTER

Ref. No.	Part Number	Description	Qty	Remarks
1	2HT-15512-00-00	GEAR, IDLER 1	1	
2	90387-125Y0-00	COLLAR	1	
3	5H0-15521-00-00	SHAFT 1	1	
4	5H0-15517-00-00	GEAR, IDLER 2 (56T)	1	
5	90201-25290-00	WASHER, PLATE	1	
6	4H7-15580-10-00	STARTER CLUTCH OUTER ASSY	1	
7	90501-04596-00	. SPRING, COMPRESSION	3	
8	1J7-15583-01-00	. CAP, STARTER CLUTCH SPRING	3	
9	93615-12088-00	. PIN, DOWEL	3	
10	91317-08020-00	BOLT	3	




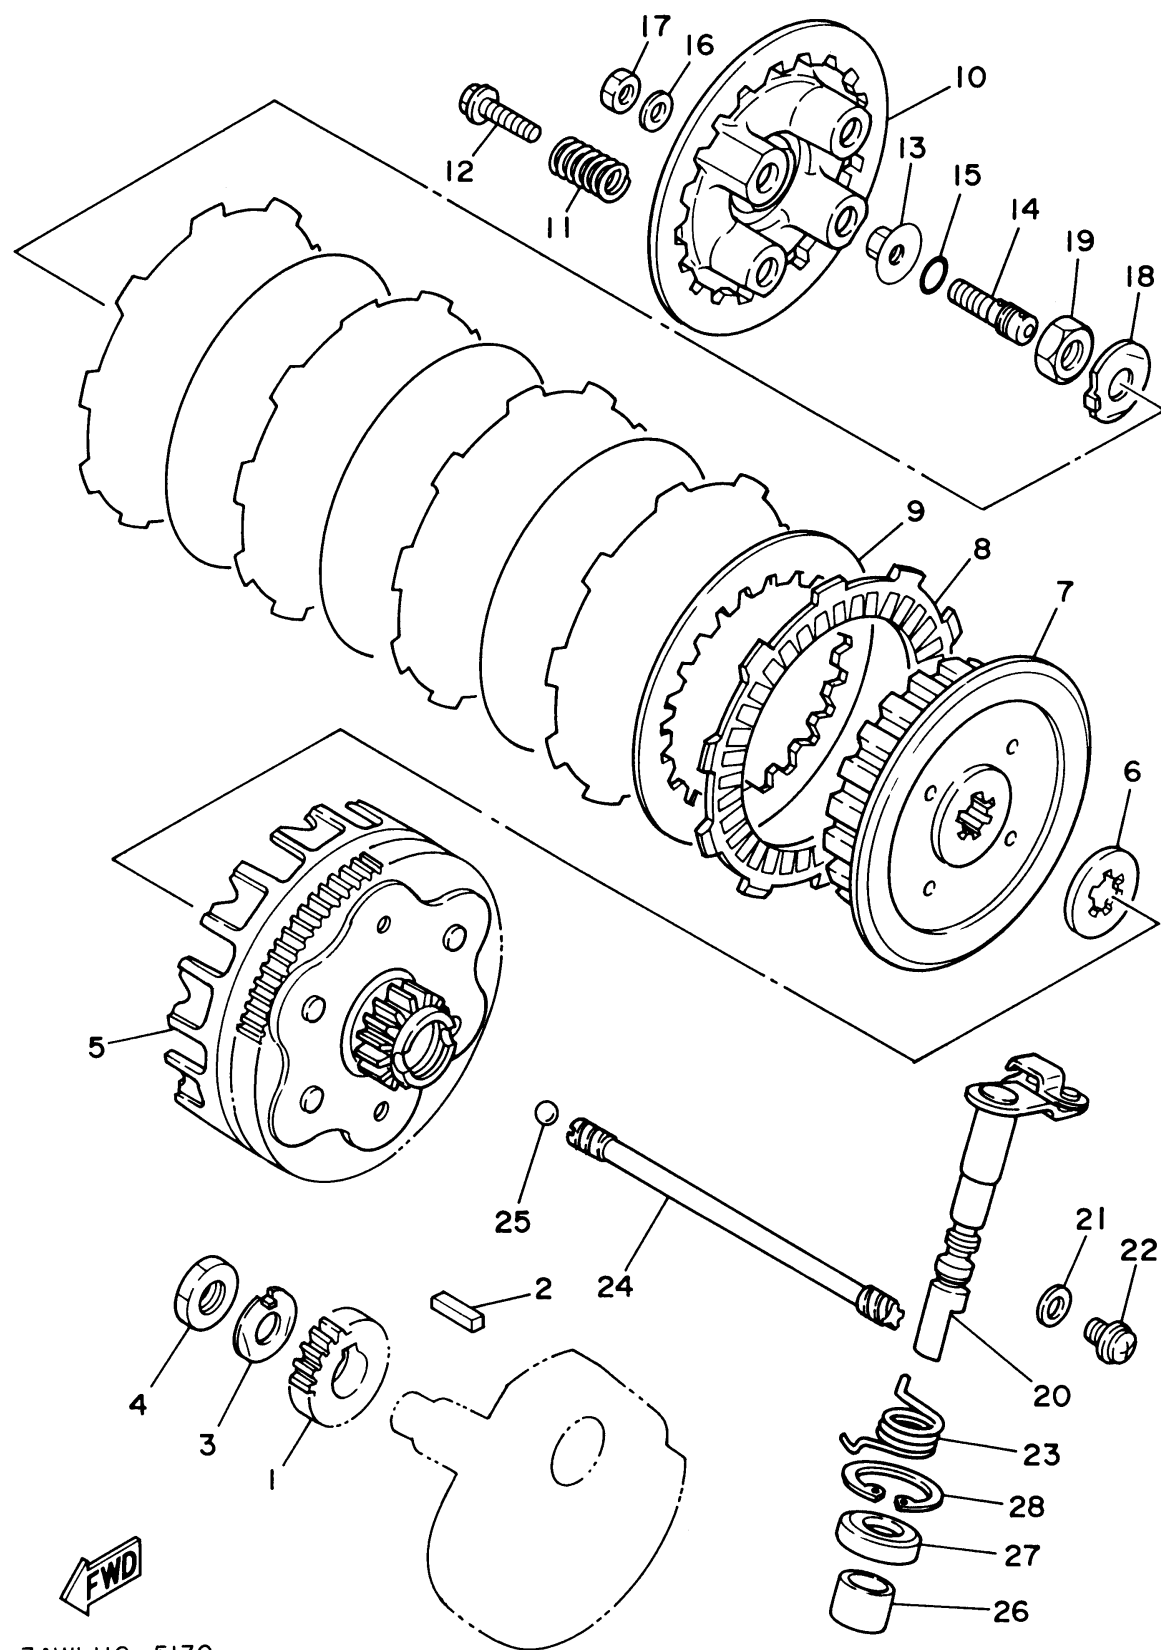

3AWL110-5130

CLUTCH


Ref. No.	Part Number	Description	Qty	Remarks
1	5H0-16111-00-00	GEAR, PRIMARY DRIVE (22T)	1	
2	90282-05043-00	KEY, STRAIGHT	1	
3	90215-14205-00	WASHER, LOCK	1	
4	90170-14284-00	NUT	1	
5	15A-16150-00-00	PRIMARY DRIVEN GEAR COMP.73/ 7	1	
6	5H0-16154-00-00	PLATE, THRUST 1	1	
7	2JX-16371-00-00	BOSS, CLUTCH	1	
8	537-16321-00-00	PLATE, FRICTION	5	
9	137-16324-00-00	PLATE, CLUTCH 1	4	
10	5H0-16351-00-00	PLATE, PRESSURE 1	1	
11	90501-23700-00	SPRING, COMPRESSION	4	
12	90159-05011-00	SCREW, WITH WASHER	4	
13	1W1-16358-01-00	PLATE, PUSH	1	
14	2JX-16356-00-00	ROD, PUSH 1	1	
15	93210-48364-00	O-RING	1	
16	92907-06200-00	WASHER	1	
17	95307-06600-00	NUT	1	
18	90215-14186-00	WASHER, LOCK	1	
19	90170-14284-00	NUT	1	
20	15A-16380-00-00	PUSH LEVER ASSY	1	
21	90430-08119-00	.GASKET	1	
22	90149-08067-00	SCREW	1	
23	90508-18537-00	SPRING, TORSION	1	
24	5H0-16357-00-00	ROD, PUSH 2	1	
25	93505-16006-00	BALL	1	
26	90386-14103-00	BUSH	1	
27	93102-14209-00	OIL SEAL, SD TYPE	1	
28	93420-28055-00	CIRCLIP	1	

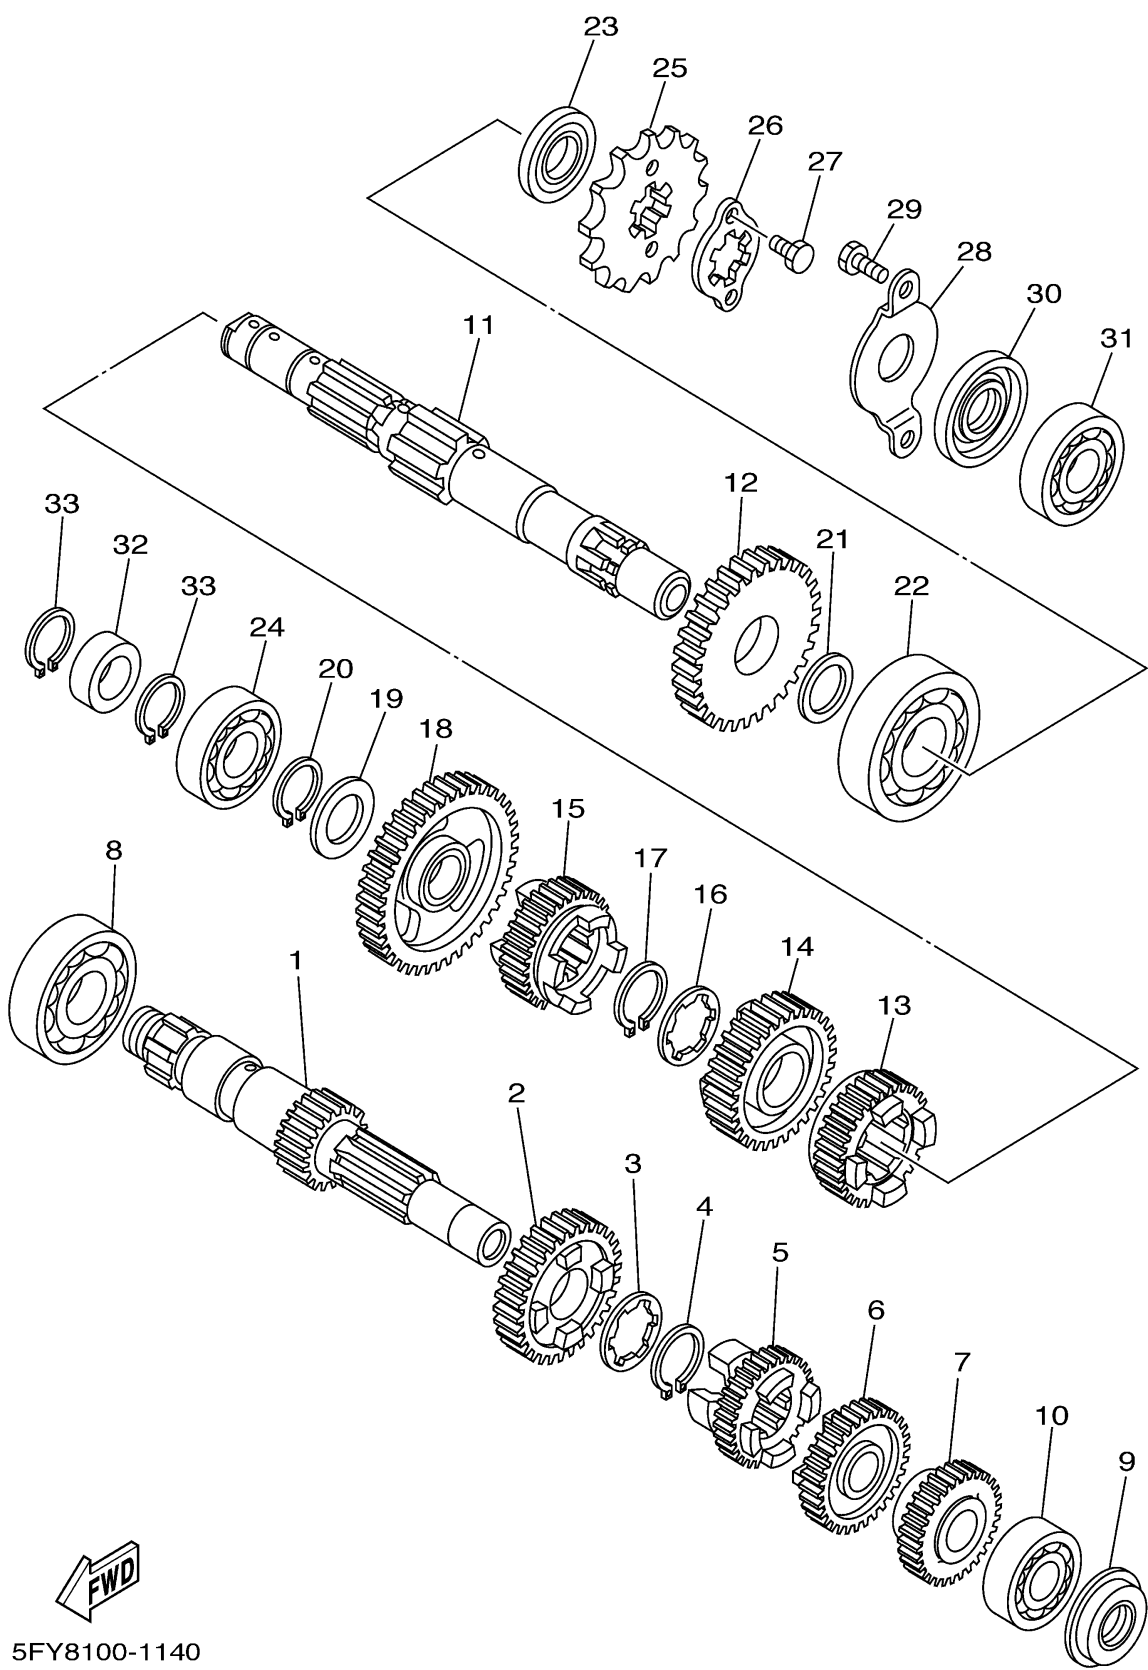

TRANSMISSION

Ref. No.	Part Number	Description	Qty	Remarks
1	15A-17411-01-00	AXLE, MAIN	1	
2	15A-17151-01-00	GEAR, 5TH PINION (28T)	1	
3	90209-16209-00	WASHER	1	
4	93410-20038-00	.CIRCLIP	1	
5	5H0-17121-01-00	GEAR, 2ND PINION (22T)	1	
6	15A-17141-00-00	GEAR, 4TH PINION (25T)	1	
7	15A-17121-00-00	GEAR, 2ND PINION (19T)	1	
8	93306-20401-00	BEARING (B6204)	1	
9	93101-15101-00	OIL SEAL	1	
10	93306-20201-00	BEARING (B6202)	1	
11	2JX-17402-00-00	DRIVE AXLE ASSY	1	
12	15A-17221-00-00	GEAR, 2ND WHEEL (34T)	1	
13	15A-17241-00-00	GEAR, 4TH WHEEL (26T)	1	
14	15A-17231-00-00	GEAR, 3RD WHEEL (29T)	1	
15	1EV-17251-00-00	GEAR, 5TH WHEEL (23T)	1	
16	90209-18208-00	WASHER	1	
17	93410-22039-00	CIRCLIP	1	
18	15A-17211-01-00	GEAR, 1ST WHEEL (34T)	1	
19	90201-17257-00	WASHER, PLATE	1	
20	99009-17400-00	CIRCLIP	1	
21	90201-220J8-00	WASHER, PLATE	1	
22	93306-20580-00	BEARING	1	
23	93102-22389-00	OIL SEAL	1	
24	93306-20332-00	BEARING	1	
25	93823-14149-00	SPROCKET, DRIVE (14T)	1	
26	2JX-17456-00-00	HOLDER, SPROCKET	1	
27	97007-05010-00	BOLT	2	
28	2JX-17471-00-00	PLATE, COVER	1	
29	98507-06010-00	.SCREW, PAN HEAD	2	

CONTINUED ON NEXT FRAME ►

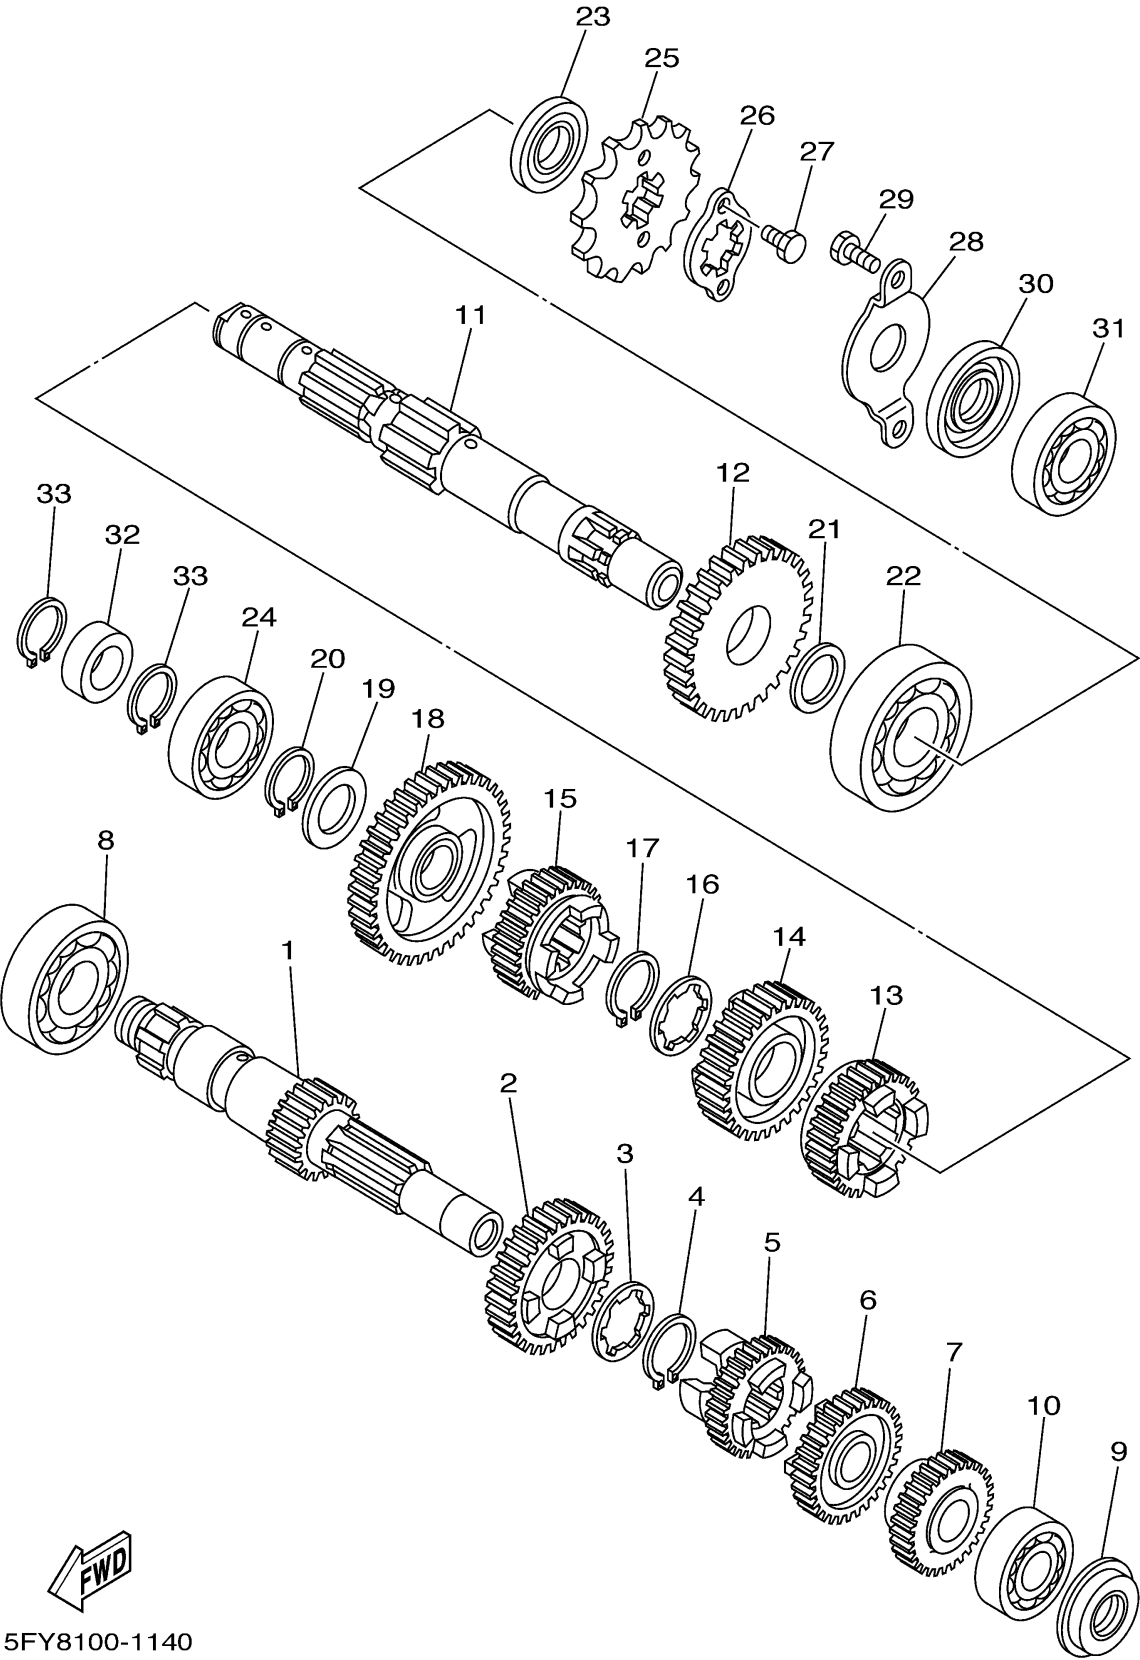


TRANSMISSION

Ref. No.	Part Number	Description	Qty	Remarks
30	93102-17187-00	OIL SEAL	1	
31	93306-20313-00	BEARING (B6203C4)	1	
32	90560-17368-00	SPACER	1	
33	99009-17400-00	CIRCLIP	2	

5FY8100-1140




5N0010-0170

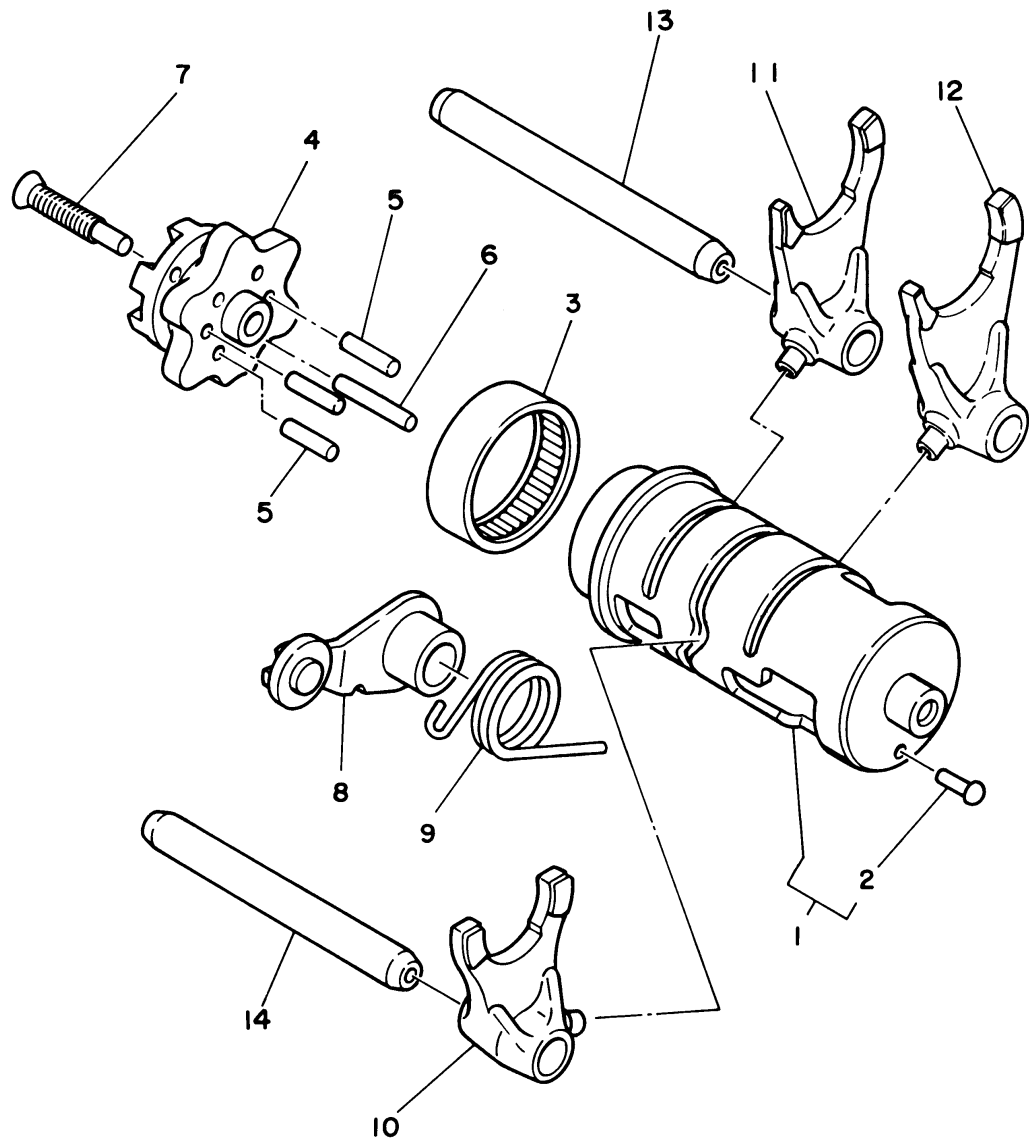

SHIFT CAM. FORK

Ref. No.	Part Number	Description	Qty	Remarks
1	5N0-18540-00-00	SHIFT CAM ASSY	1	
2	136-18542-00-00	. .POINT, NEUTRAL	1	
3	93315-23607-00	BEARING	1	
4	1RH-18185-00-00	SEGMENT	1	
5	93604-16092-00	.PIN, DOWEL	3	
6	93604-20156-00	PIN, DOWEL	1	
7	90151-06013-00	.SCREW, COUNTERSUNK	1	
8	1RH-18140-00-00	STOPPER LEVER ASSY	1	
9	90508-26539-00	SPRING, TORSION	1	
10	4JG-18511-00-00	FORK, SHIFT 1	1	
11	4JG-18512-01-00	FORK, SHIFT 2	1	
12	4JG-18513-00-00	FORK, SHIFT 3	1	
13	3GX-18531-00-00	BAR, SHIFT FORK GUIDE 1 ...	1	
14	3GX-18535-00-00	BAR, SHIFT FORK GUIDE 2 ...	1	

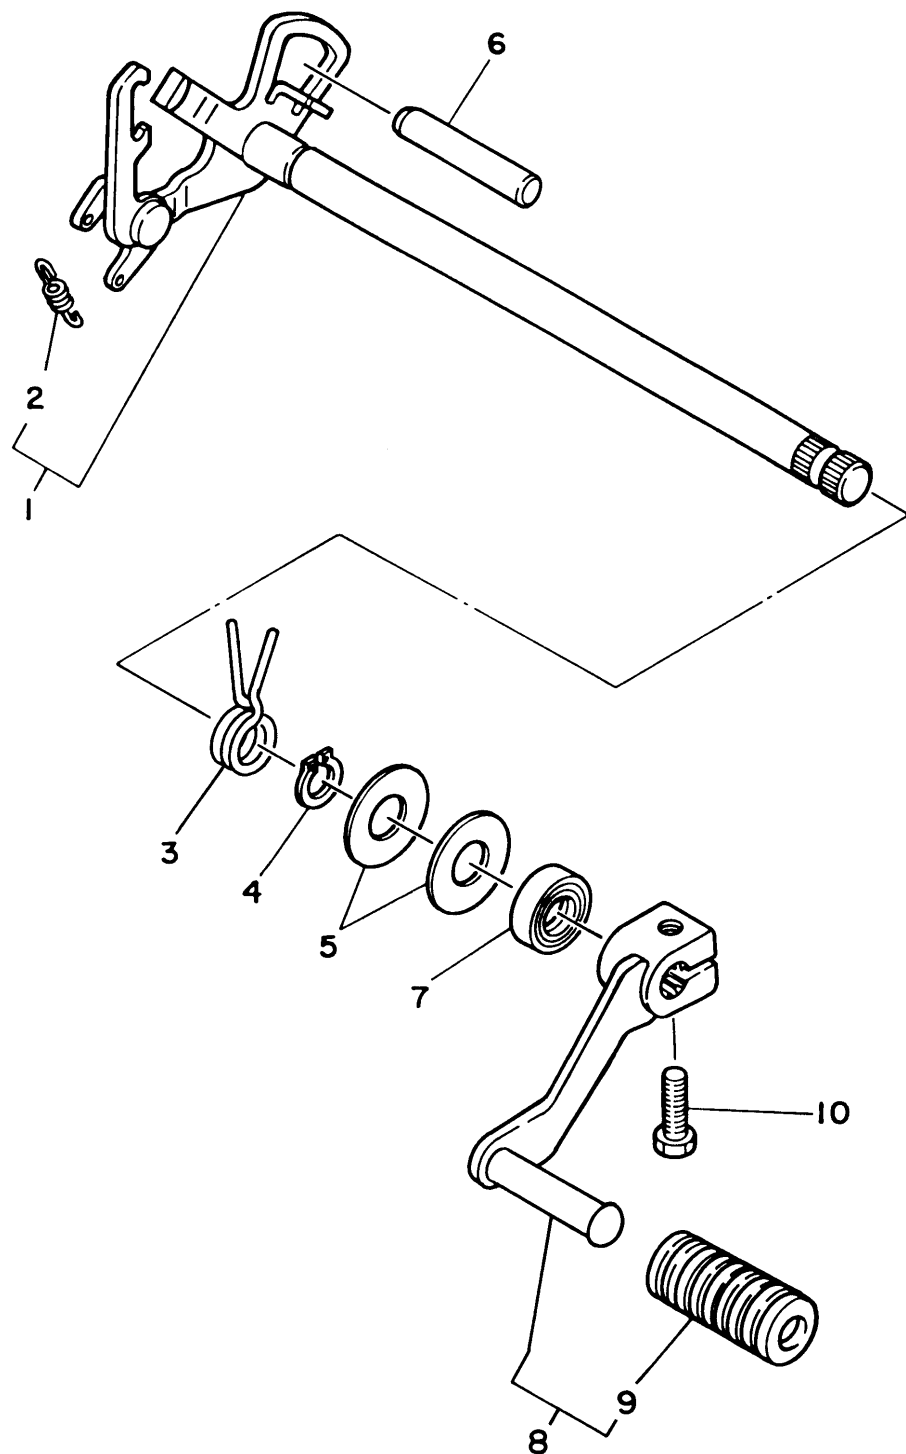


SHIFT SHAFT

Ref. No.	Part Number	Description	Qty	Remarks
1	5H0-18120-02-00	SHIFT LEVER ASSY	1	
2	90506-08227-00	. .SPRING, TENSION	1	
3	90508-29540-00	SPRING, TORSION	1	
4	99001-10600-00	.CIRCLIP	1	
5	90201-12588-00	WASHER, PLATE	2	
6	93608-50158-00	PIN, DOWEL	1	
7	93102-12106-00	OIL SEAL (SD 12-22-5 HS)	1	
8	1RL-18110-00-00	SHIFT PEDAL ASSY	1	
9	132-18113-01-00	COVER, SHIFT PEDAL	1	
10	97027-06020-00	BOLT	1	



25A310-3170

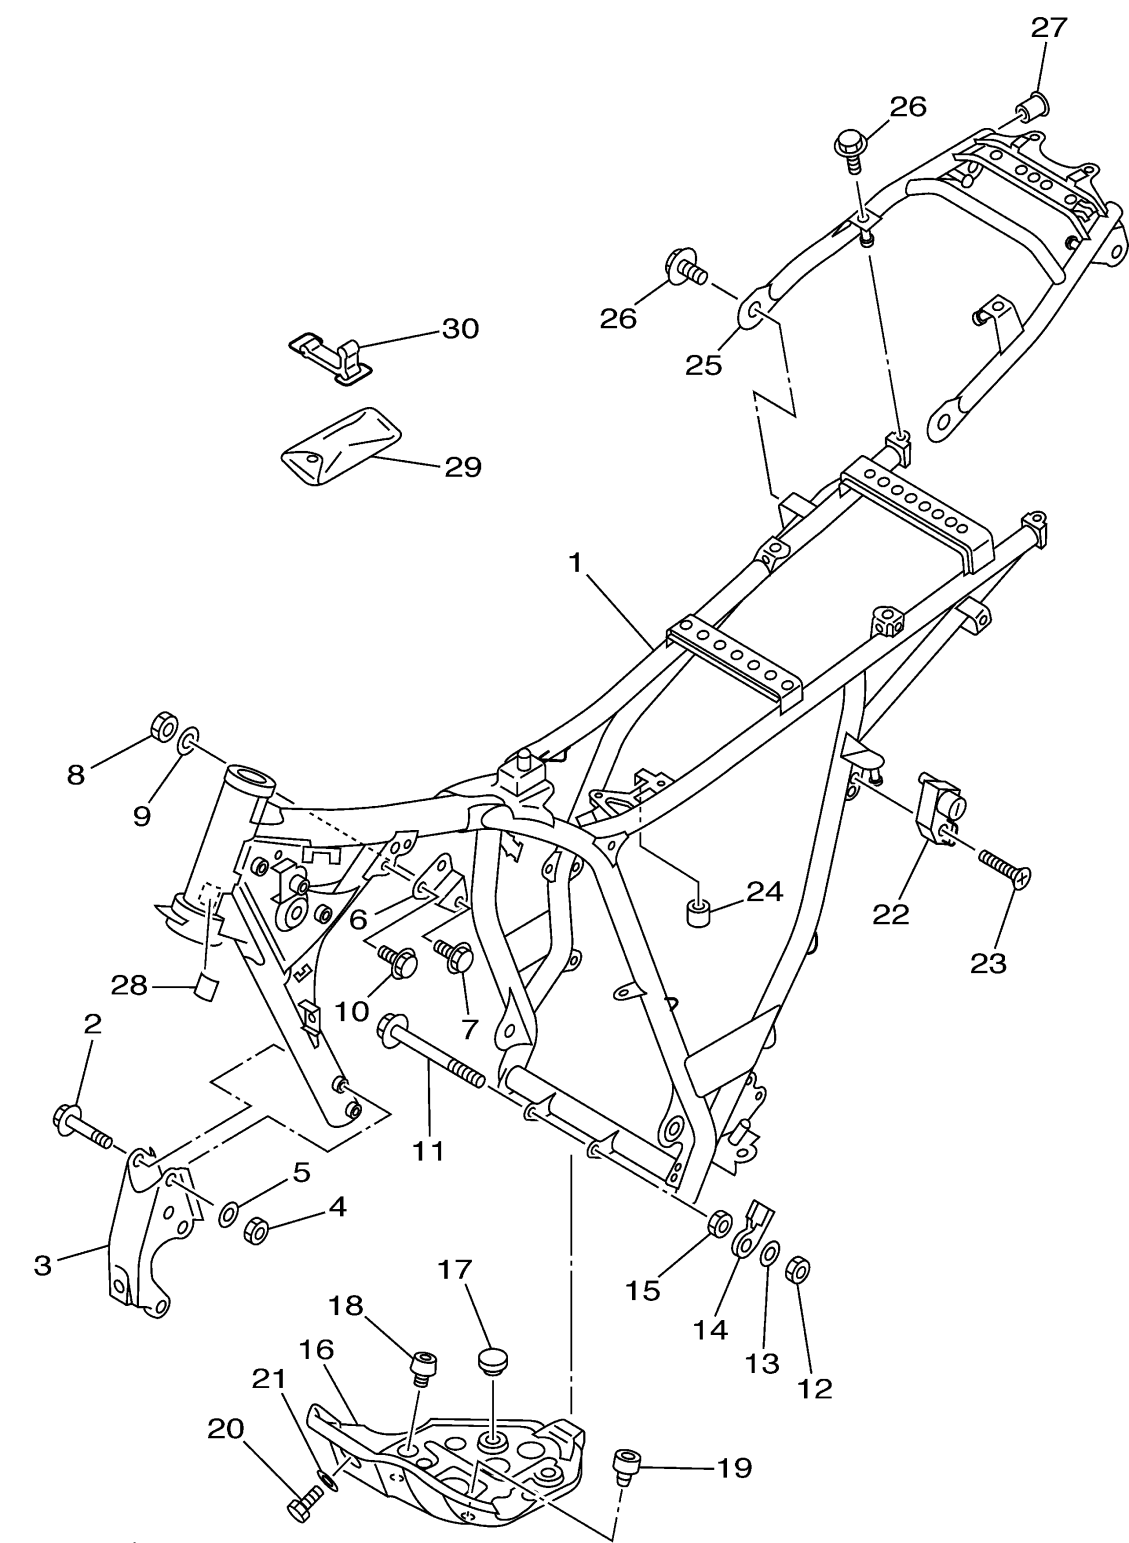


5FY8100-1170

FRAME

Ref. No.	Part Number	Description	Qty	Remarks
1	5FY-21110-20-00	FRAME COMP.	1	(5FYC)
	5FY-21110-30-00	FRAME COMP.	1	(5FYD)
2	95817-08065-00	BOLT, FLANGE	4	
3	1RL-21316-00-P1	STAY, ENGINE 2	1	DPBMC(5FYC)
	2JX-21316-01-P0	STAY, ENGINE 2	1	DPBMC (5FYD)
4	90185-08089-00	NUT, SELF-LOCKING	4	
5	90201-08366-00	WASHER, PLATE	4	
6	2JX-21315-00-00	STAY, ENGINE 2	1	
7	95817-08050-00	BOLT, FLANGE	1	
8	90185-08089-00	NUT, SELF-LOCKING	1	
9	90201-08366-00	WASHER, PLATE	1	
10	90105-08066-00	BOLT, FLANGE	2	
11	95817-08120-00	BOLT, FLANGE	1	
12	90185-08089-00	NUT, SELF-LOCKING	1	
13	90201-08366-00	WASHER, PLATE	1	
14	1RL-21337-00-00	CLAMP, CABLE	1	
15	90185-08055-00	NUT, SELF-LOCKING	1	
16	1RL-21471-00-35	PROTECTOR, ENGINE	1	SL
17	128-27114-00-00	STOPPER, MAIN STAND	2	
18	34L-21485-00-00	DAMPER, RUBBER 1	1	
19	4N0-27114-00-00	STOPPER, MAIN STAND	1	
20	97007-06016-00	BOLT	1	
21	92907-06600-00	WASHER, PLATE	1	
22	4R8-21308-00-00	HELMET HANGER ASSY	1	
23	90151-06038-00	SCREW, COUNTERSUNK	1	
24	90480-12299-00	GROMMET	1	
25	2JX-21190-00-P0	REAR FRAME COMP.	1	DPBMC
26	95827-06012-00	BOLT, FLANGE	4	
27	90338-12081-00	PLUG	2	


CONTINUED ON NEXT FRAME ➤

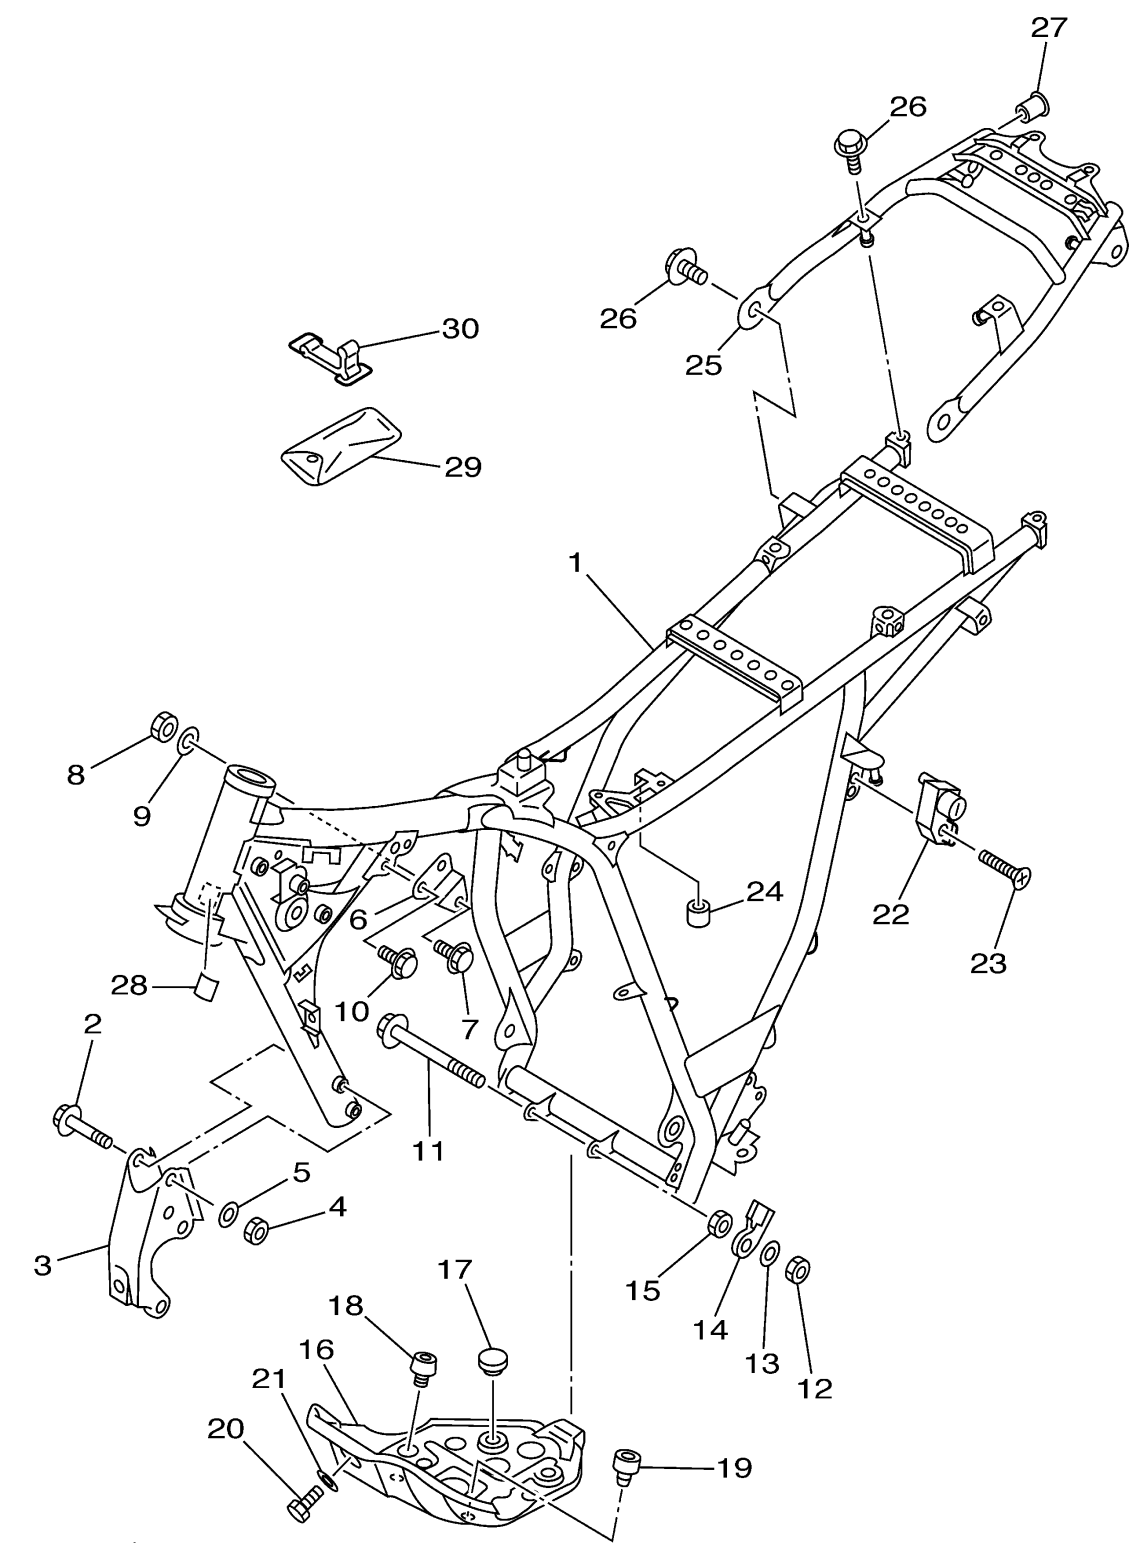

FRAME

Ref. No.	Part Number	Description	Qty	Remarks
28	3MA-27491-00-00	PROTECTOR	1	
29	2JX-28100-00-00	TOOL KIT	1	
30	3TJ-82131-00-00	BAND, BATTERY	1	


 5FY8100-1170

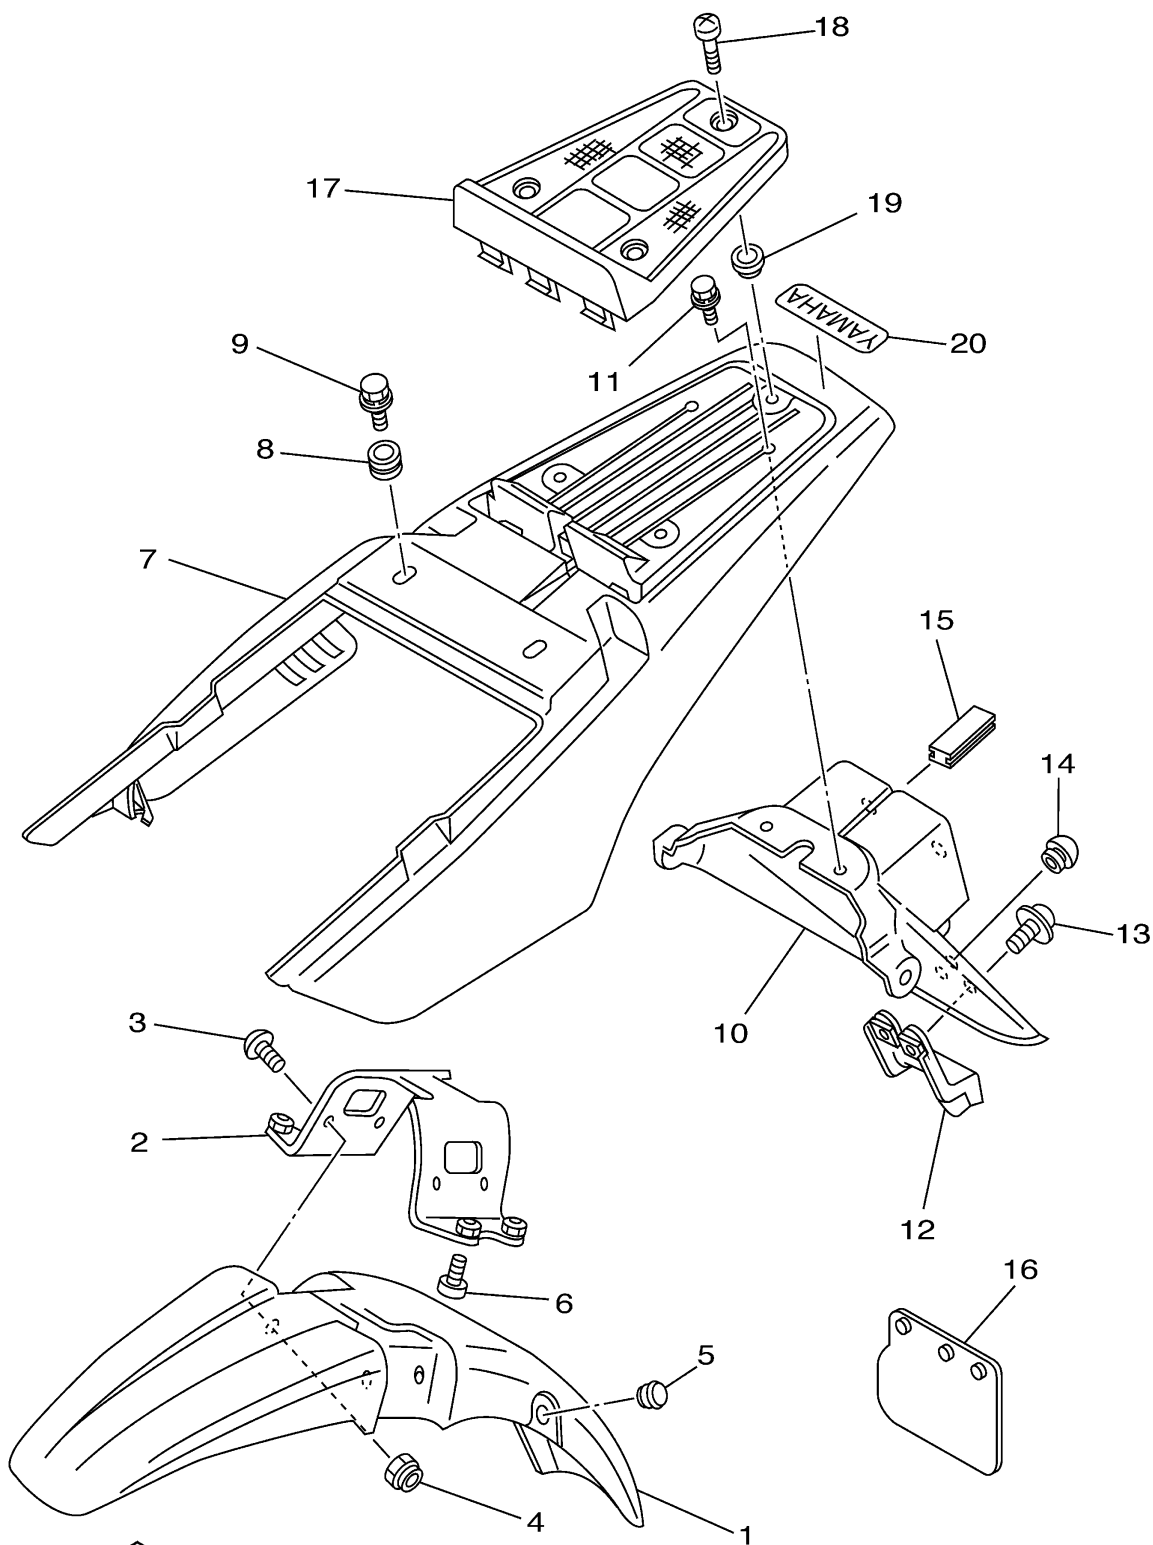

5FY8100-1180

FENDER


Ref. No.	Part Number	Description	Qty	Remarks
1	3AW-21511-20-00	FENDER, FRONT	1	
2	2JX-21512-00-00	BRACKET, FENDER	1	
3	90154-05004-00	SCREW, BINDING	4	
4	95607-05200-00	.NUT, U FLANGE	4	
5	90338-12192-00	PLUG	1	
6	91317-06020-00	BOLT	4	
7	3AW-21611-20-00	FENDER, REAR	1	
8	90480-12053-00	GROMMET	2	
9	90119-06063-00	BOLT, WITH WASHER	4	
10	2JX-21685-00-00	BRACKET, LICENSE	1	
11	90119-06056-00	BOLT, WITH WASHER	2	
12	2JX-21641-00-00	BRACKET, REFLECTOR	1	
13	90159-05028-00	SCREW, WITH WASHER	2	
14	4G0-21639-00-00	.DAMPER 2	1	
15	2JX-21669-00-00	SEAL	1	
16	34X-21691-00-00	FLAP	1	
17	2JX-21651-00-00	COVER, REAR FENDER	1	
18	95027-06014-00	BOLT, FLANGE	3	
19	90387-06681-00	COLLAR	3	
20	99247-00080-00	EMBLEM, YAMAHA	1	

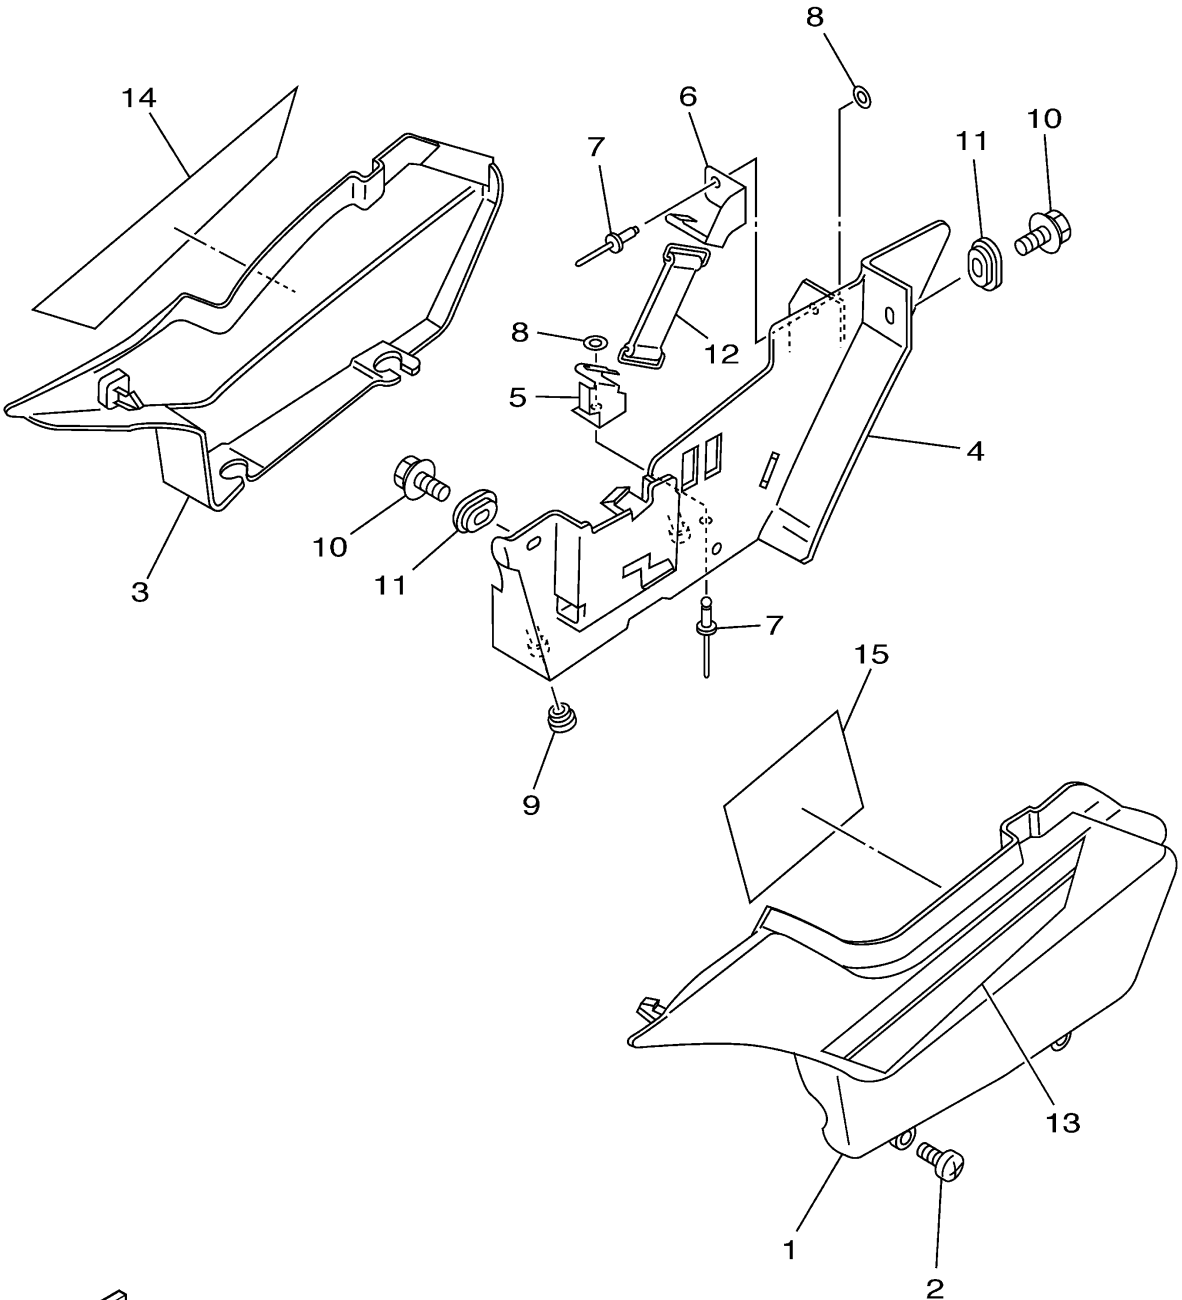

SIDE COVER

Ref. No.	Part Number	Description	Qty	Remarks
1	3AW-21711-20-0X	COVER, SIDE 1	1	LGB
2	90154-05013-00	SCREW, BINDING	2	
3	3AW-21721-20-0X	COVER, SIDE 2	1	LGB
4	5EK-2177A-00-00	BOX	1	
5	5EK-2175T-00-00	BRACKET 1	1	
6	5EK-2175U-00-00	BRACKET 2	1	
7	90267-40075-00	RIVET, BLIND	2	
8	90201-04018-00	WASHER, PLATE	2	
9	90480-13197-00	GROMMET	2	
10	90119-06056-00	BOLT, WITH WASHER	2	
11	90480-01141-00	GROMMET	2	
12	116-82131-00-00	BAND, BATTERY	1	
13	5FY-2173E-20-00	GRAPHIC 1	1	
14	5FY-2173F-20-00	GRAPHIC 2	1	
15	5FY-2179V-30-00	PLATE, EPA 1(NON CALIFORNIA)	1	(5FYC)
	5FY-2179N-30-00	PLATE, EPA 2(CALIFORNIA) ..	1	(5FYD)



5FY8100-1190

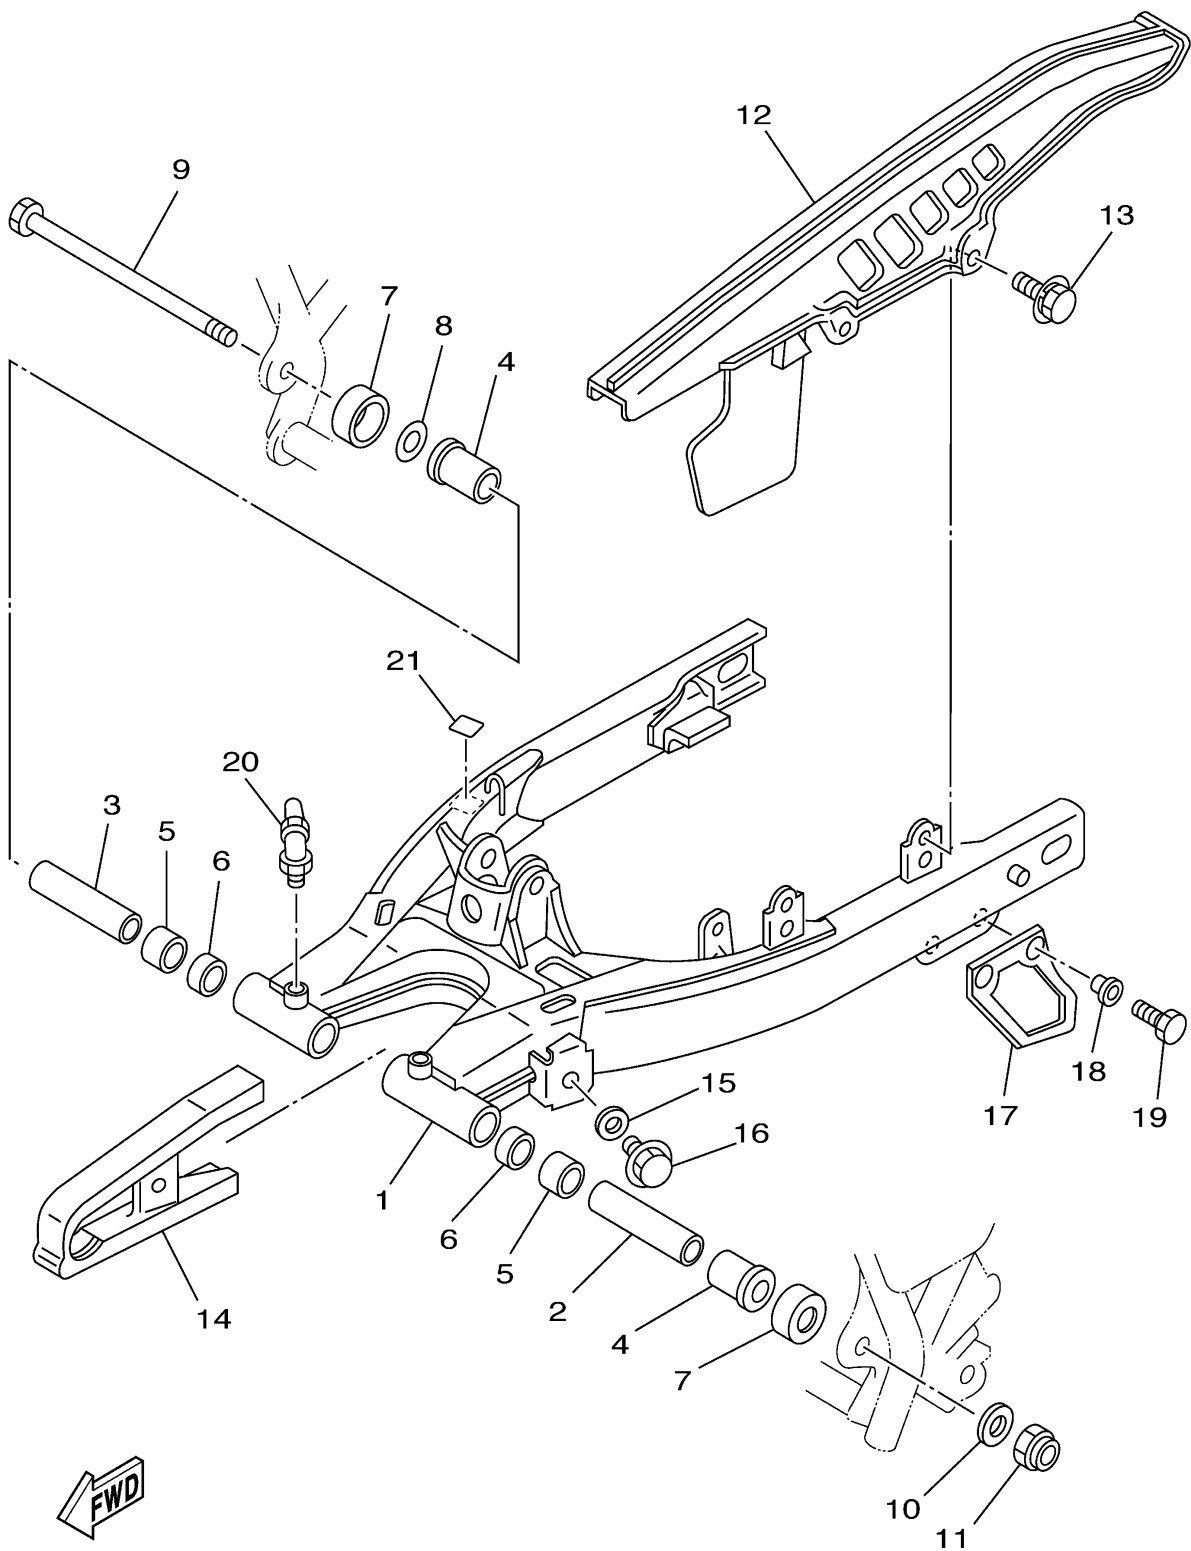

5EK5300-1200

REAR ARM


Ref. No.	Part Number	Description	Qty	Remarks
1	2JX-22110-00-35	REAR ARM COMP.	1	SL
2	2JX-22123-00-00	BUSH 1	1	
3	2JX-22124-00-00	BUSH 2	1	
4	90386-18146-00	BUSH	2	
5	90380-18139-00	BUSH, SOLID	2	
6	93109-18020-00	OIL SEAL	2	
7	401-22128-01-00	SEAL, GUARD	2	
8	401-22127-00-00	SHIM	1	
9	2JX-22141-00-00	SHAFT, PIVOT	1	
10	90201-120E8-00	WASHER, PLATE	1	
11	90185-12134-00	NUT, SELF-LOCKING	1	
12	34X-22311-00-00	CASE, CHAIN	1	
13	90119-05059-00	BOLT, WITH WASHER	2	
14	34X-22151-01-00	SEAL, GUARD	1	
15	90209-06187-00	WASHER	1	
16	90119-05062-00	BOLT, WITH WASHER	1	
17	38V-22199-00-00	SUPPORT, CHAIN	1	
18	90387-06737-00	COLLAR	2	
19	97007-06020-00	BOLT	2	
20	93700-06009-00	NIPPLE, GREASE	2	
21	3MA-27491-00-00	PROTECTOR	1	

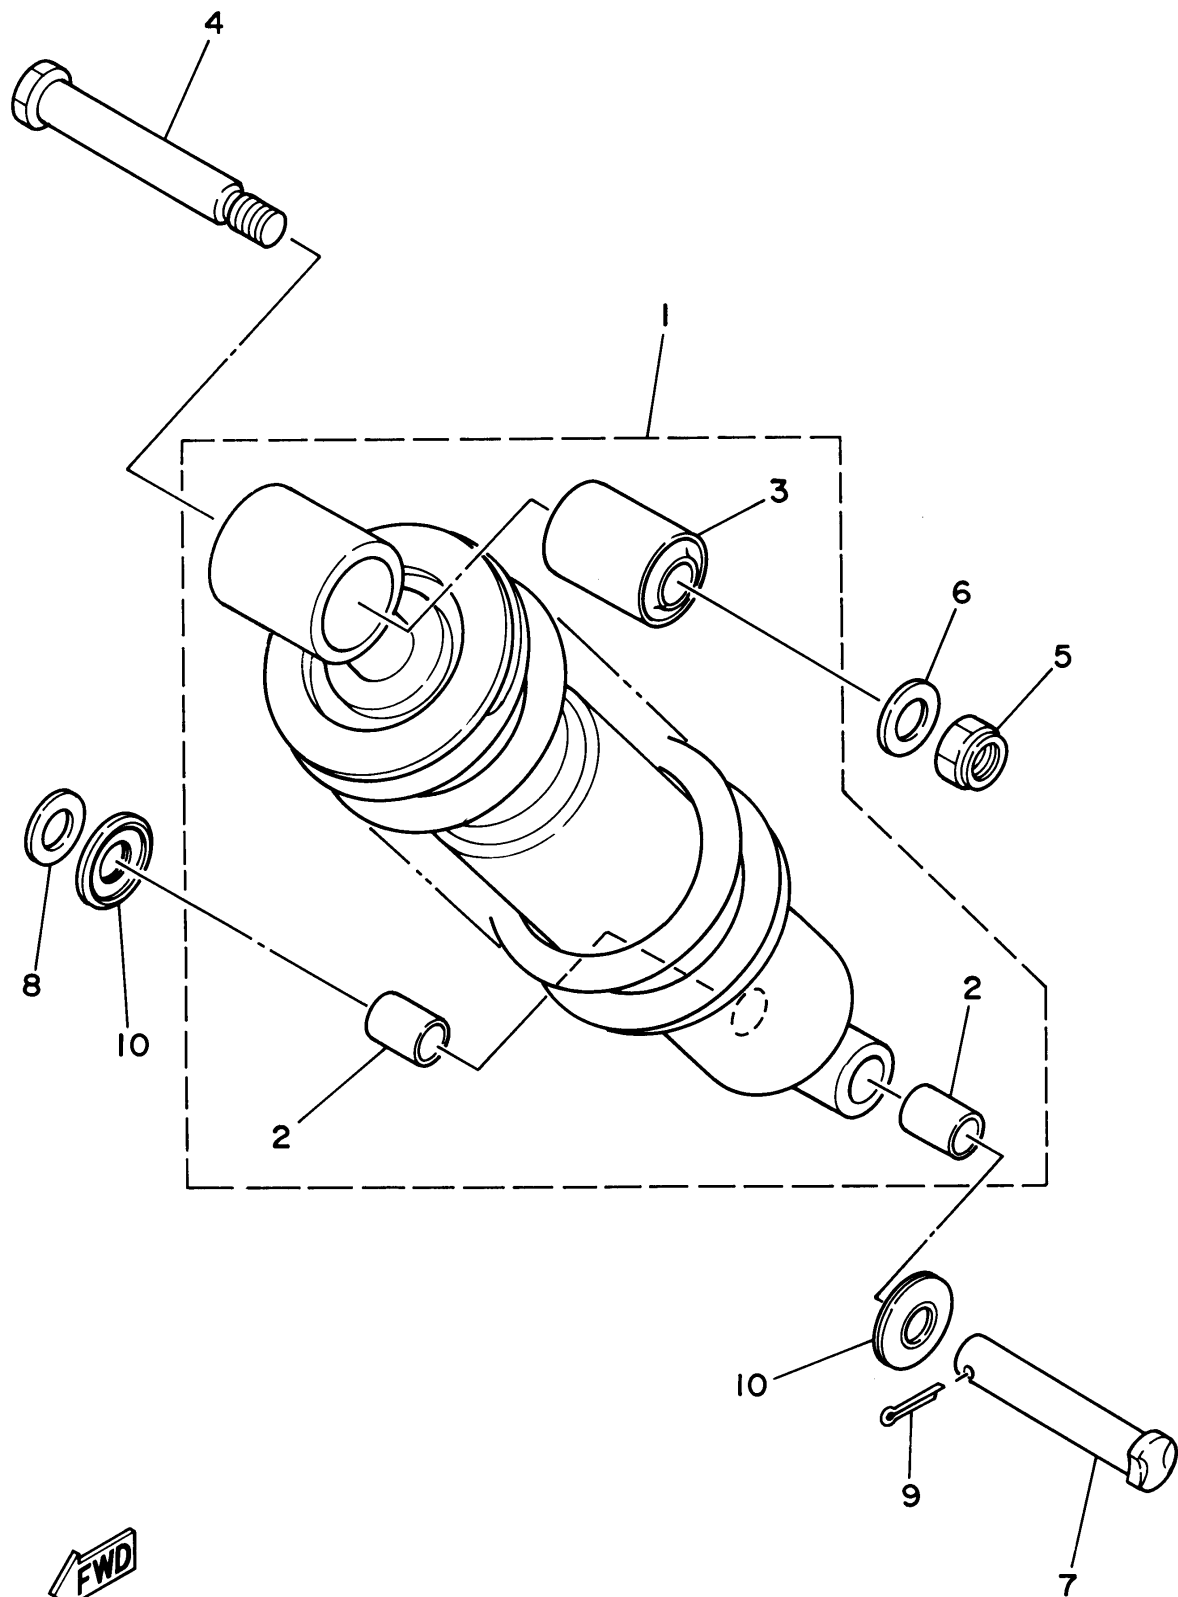

2JY110-7210

REAR SUSPENSION


Ref. No.	Part Number	Description	Qty	Remarks
1	5FY-22210-00-P0	SHOCK ABSORBER ASSY, REAR	1	LRYs1
2	90380-12051-00	. BUSH, SOLID	2	
3	1M1-22216-00-00	. BUSH, REAR SHOCK ABSORBER	1	
4	90109-100E2-00	BOLT	1	
5	95617-10100-00	NUT, U	1	
6	90201-100E9-00	WASHER, PLATE	1	
7	90240-12075-00	PIN, CLEVIS	1	
8	90201-12175-00	WASHER, PLATE	1	
9	91401-30025-00	PIN, COTTER	1	
10	30X-22129-00-00	COVER, THRUST 2	2	

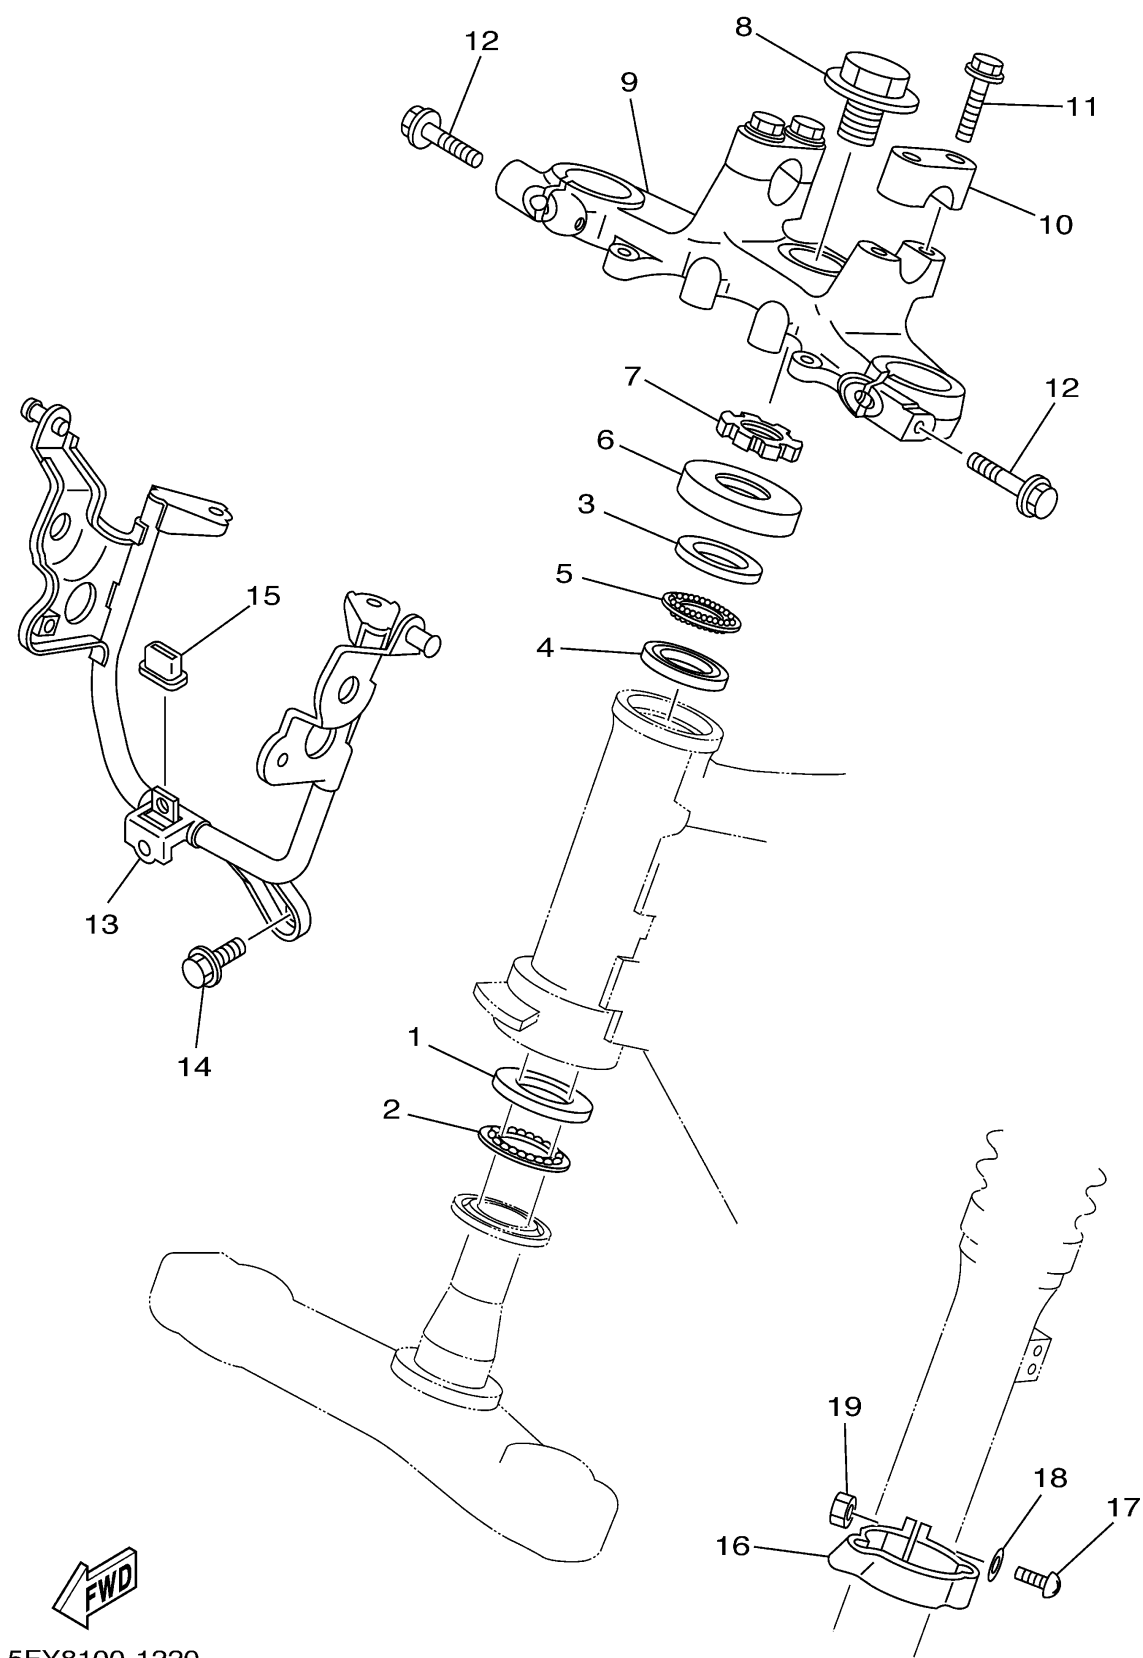

STEERING

Ref. No.	Part Number	Description	Qty	Remarks
1	156-23412-00-00	RACE, BALL 2	1	
2	156-2341E-00-00	RETAINER, BALL BEARING ..	1	
3	22F-23411-01-00	RACE, BALL 1	1	
4	22F-23412-01-00	RACE, BALL 2	1	
5	22F-2341E-00-00	RETAINER, BALL BEARING ..	1	
6	36X-23416-00-00	COVER, BALL RACE 2	1	
7	90179-25033-00	NUT, SPEC'L SHAPE	1	
8	90105-14102-00	BOLT, FLANGE	1	
9	2JX-23435-00-35	CROWN, HANDLE	1	SL
10	1E6-23441-10-35	HOLDER, HANDLE UPPER ...	2	SL
11	95824-08035-00	BOLT, FLANGE	4	
12	95024-08050-00	BOLT, FLANGE	2	
13	5FY-23174-00-00	STAY, HEADLIGHT	1	
14	95807-06012-00	BOLT, FLANGE	1	
15	30X-23445-00-00	DAMPER	1	
16	34X-23317-00-00	HOLDER, CABLE	1	
17	98507-05018-00	.SCREW, PAN HEAD	1	
18	92907-05600-00	WASHER	1	
19	95307-05600-00	NUT	1	


5FY8100-1220

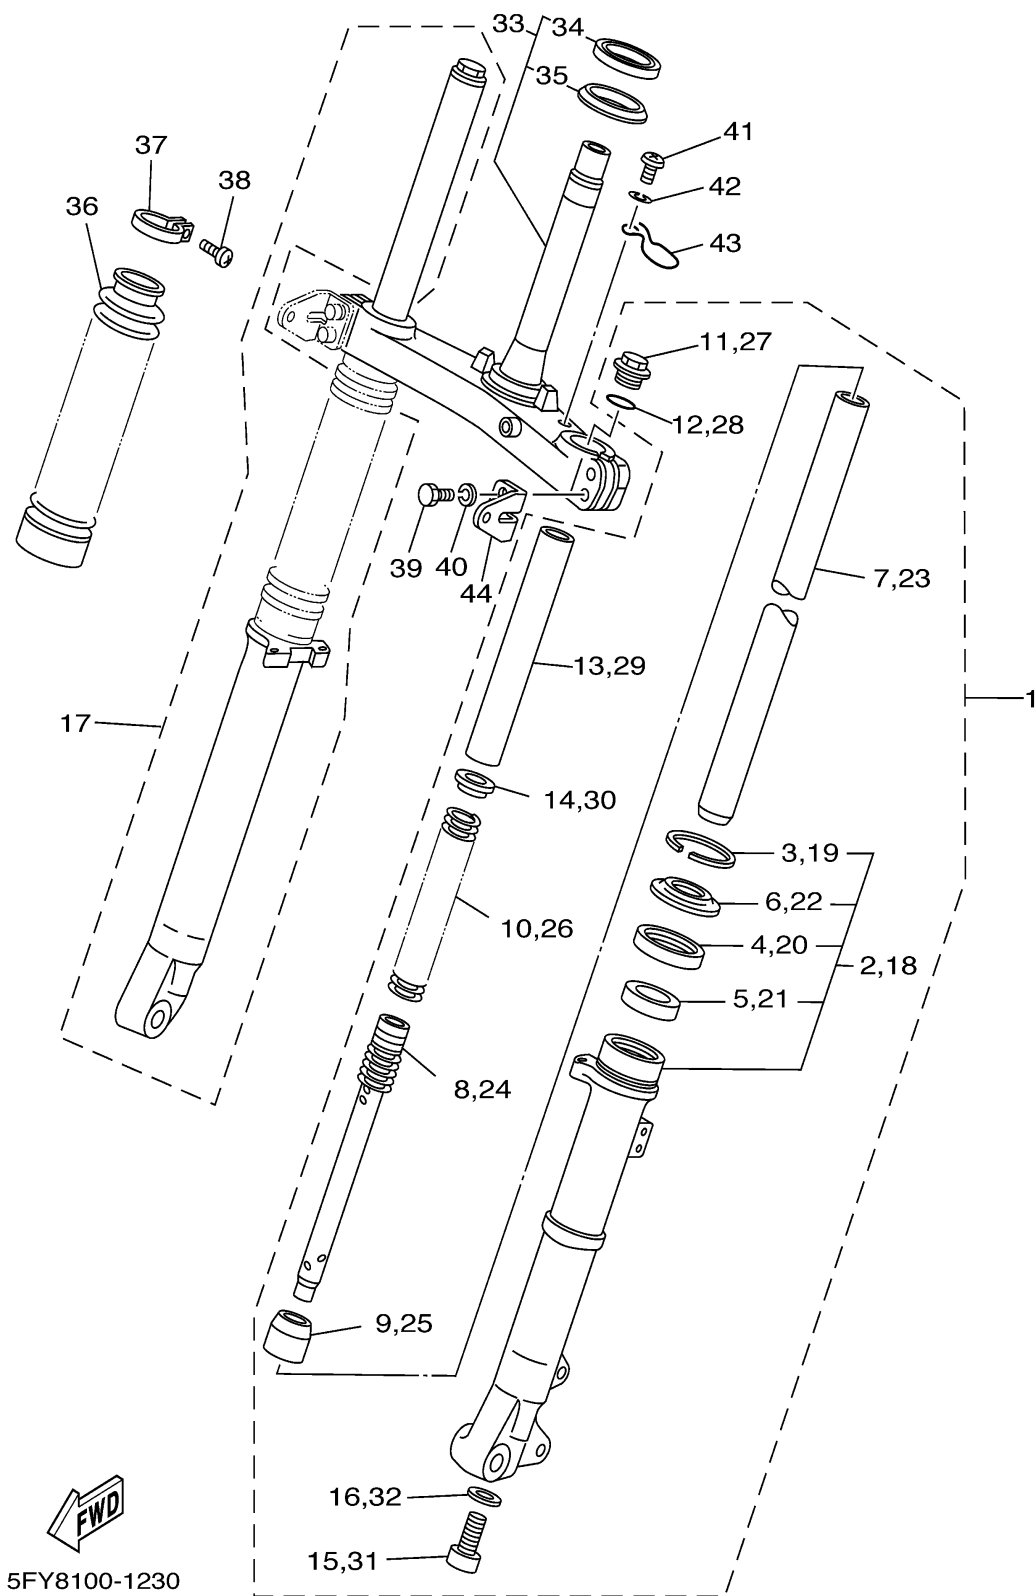

FRONT FORK

Ref. No.	Part Number	Description	Qty	Remarks
1	5FY-23102-00-00	FRONT FORK ASSY (L.H)	1	
2	5EK-23126-00-00	. TUBE, OUTER (LEFT)	1	
3	22W-23153-L0-00	. . RING, SNAP	1	
4	22W-23145-L0-00	. . OIL SEAL	1	
5	51Y-23125-00-00	. . METAL, SLIDE 1	1	
6	54G-23144-00-00	. . SEAL, DUST	1	
7	2JX-23110-00-00	. INNER TUBE COMP 1	1	
8	2JX-23170-00-00	. CYLINDER COMP., FRONT FORK	1	
9	3R6-23173-L0-00	. SPINDLE, TAPER	1	
10	2JX-23141-00-00	. SPRING, FRONT FORK	1	
11	2JN-23111-00-00	. BOLT, CAP	1	
12	3J2-23114-00-00	. O-RING	1	
13	22U-23118-01-00	. SPACER	1	
14	3DM-23149-10-00	. WASHER, SPRING UPPER . .	1	
15	278-23181-50-00	. BOLT, HEXAGON SOCKET HEAD	1	
16	509-23158-L0-00	. GASKET	1	
17	5FY-23103-00-00	FRONT FORK ASSY (R.H)	1	
18	5EK-23136-00-00	. TUBE, OUTER (RIGHT)	1	
19	22W-23153-L0-00	. . RING, SNAP	1	
20	22W-23145-L0-00	. . OIL SEAL	1	
21	51Y-23125-00-00	. . METAL, SLIDE 1	1	
22	54G-23144-00-00	. . SEAL, DUST	1	
23	2JX-23110-00-00	. INNER TUBE COMP 1	1	
24	2JX-23170-00-00	. CYLINDER COMP., FRONT FORK	1	
25	3R6-23173-L0-00	. SPINDLE, TAPER	1	
26	2JX-23141-00-00	. SPRING, FRONT FORK	1	
27	2JN-23111-00-00	. BOLT, CAP	1	

CONTINUED ON NEXT FRAME ►

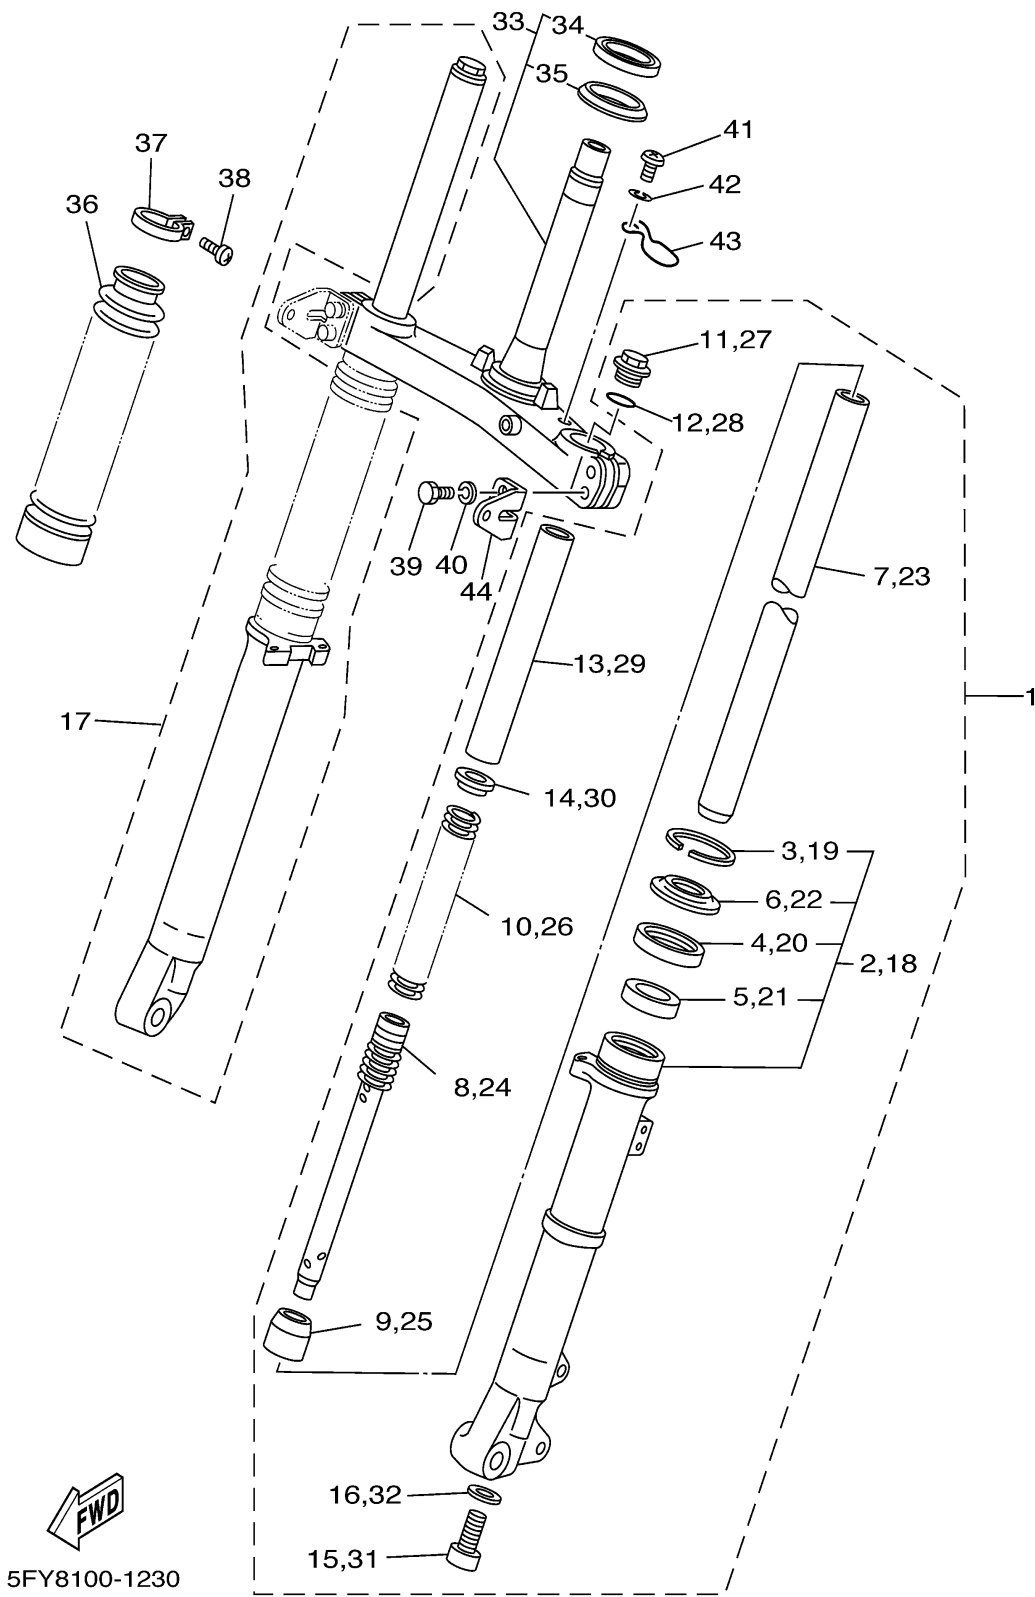


FRONT FORK

Ref. No.	Part Number	Description	Qty	Remarks
28	3J2-23114-00-00	. O-RING	1	
29	22U-23118-01-00	. SPACER	1	
30	3DM-23149-10-00	. WASHER, SPRING UPPER ..	1	
31	278-23181-50-00	. BOLT, HEXAGON SOCKET HEAD	1	
32	509-23158-L0-00	. GASKET	1	
33	5LB-23340-00-00	UNDER BRACKET COMP.	1	
34	156-23411-00-00	. RACE, BALL 1	1	
35	164-23462-00-00	. SEAL, STEERING	1	
36	4CS-23191-20-00	BOOT	2	
37	2K5-23192-00-00	BAND	2	
38	1W4-23194-L0-00	SCREW, BOOT BAND	2	
39	97321-08035-00	BOLT	4	
40	92901-08100-00	WASHER, SPRING	4	
41	98501-06012-00	SCREW, PAN HEAD	1	
42	92990-06100-00	WASHER, SPRING	1	
43	10V-2331E-02-00	GUIDE, CABLE	1	
44	49R-85112-00-00	BRACKET, REFLECTOR 1	2	


5FY8100-1230

FUEL TANK

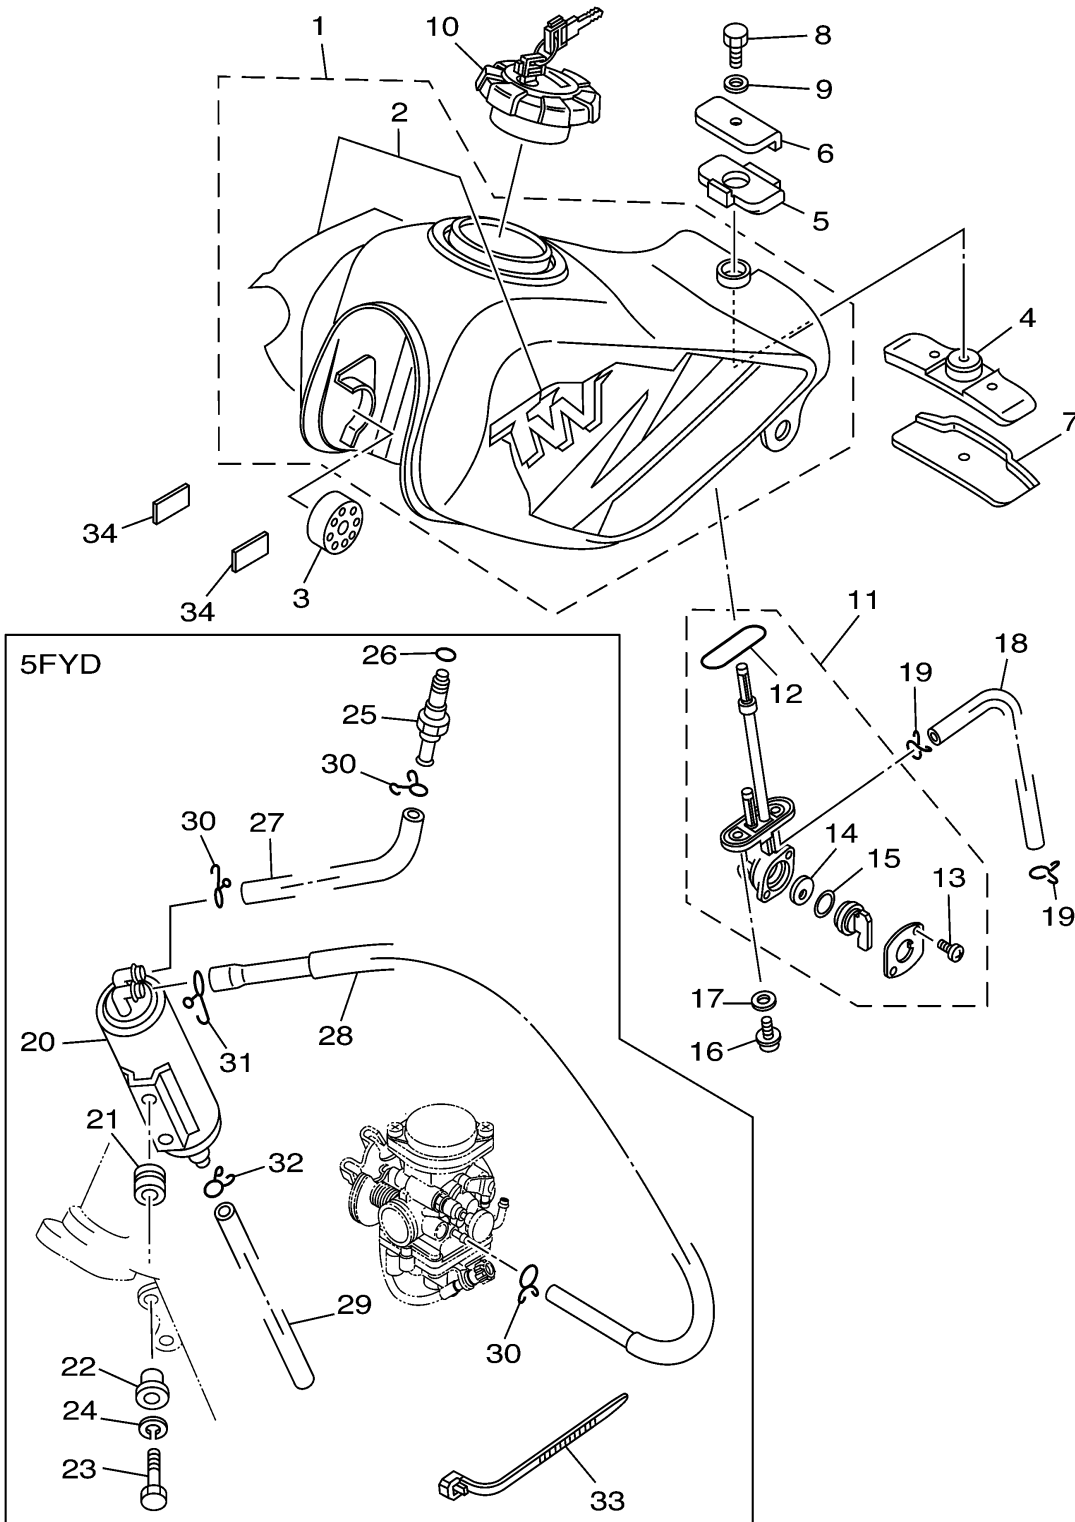


Ref. No.	Part Number	Description	Qty	Remarks
1	2JY-Y2410-10-0B	FUEL TANK COMP.	1	PWS1(5FYC)
	2JX-Y2410-10-02	FUEL TANK COMP.	1	PWS1 (5FYD)
2	5FY-24240-20-00	. GRAPHIC SET	1	
3	4L0-24181-00-00	DAMPER, LOCATING 1	2	
4	30X-24182-01-00	DAMPER, LOCATING 2	1	
5	30X-24183-01-00	DAMPER, LOCATING 3	1	
6	30X-24186-01-00	WASHER, SPECIAL	1	
7	30X-24187-00-00	WASHER, SPECIAL	1	
8	97007-06012-00	.BOLT	1	
9	92907-06600-00	WASHER, PLATE	1	
10	48Y-24602-00-00	CAP ASSY	1	(5FYC)
	56R-24602-00-00	CAP ASSY	1	(5FYD)
11	23F-24500-01-00	FUEL COCK ASSY 1	1	
12	4X8-24512-00-00	. GASKET	1	
13	97801-03008-00	. .SCREW, PAN HEAD	2	
14	3AJ-24523-00-00	. .VALVE PACKING	1	
15	3AJ-24534-00-00	. .SEAL, COCK	1	
16	90149-06011-00	SCREW, SPEC'L SHAPE	2	
17	90202-05193-00	WASHER, PLATE	2	
18	90445-10007-00	HOSE (L110)	1	
19	90467-09006-00	CLIP, SCISSOR	2	
20	4BE-24170-00-00	CANISTER ASSY	1	(5FYD)
21	90480-15342-00	GROMMET	2	(5FYD)
22	90387-063G3-00	COLLAR	2	(5FYD)
23	97007-06025-00	BOLT	2	(5FYD)
24	92907-06600-00	WASHER, PLATE	2	(5FYD)
25	20K-24180-00-00	ROLL OVER VALVE ASSY ...	1	(5FYD)
26	93210-10166-00	O-RING	1	(5FYD)
27	90445-10017-00	HOSE	1	(5FYD)

CONTINUED ON NEXT FRAME ➤


5FYC100-A240

FUEL TANK

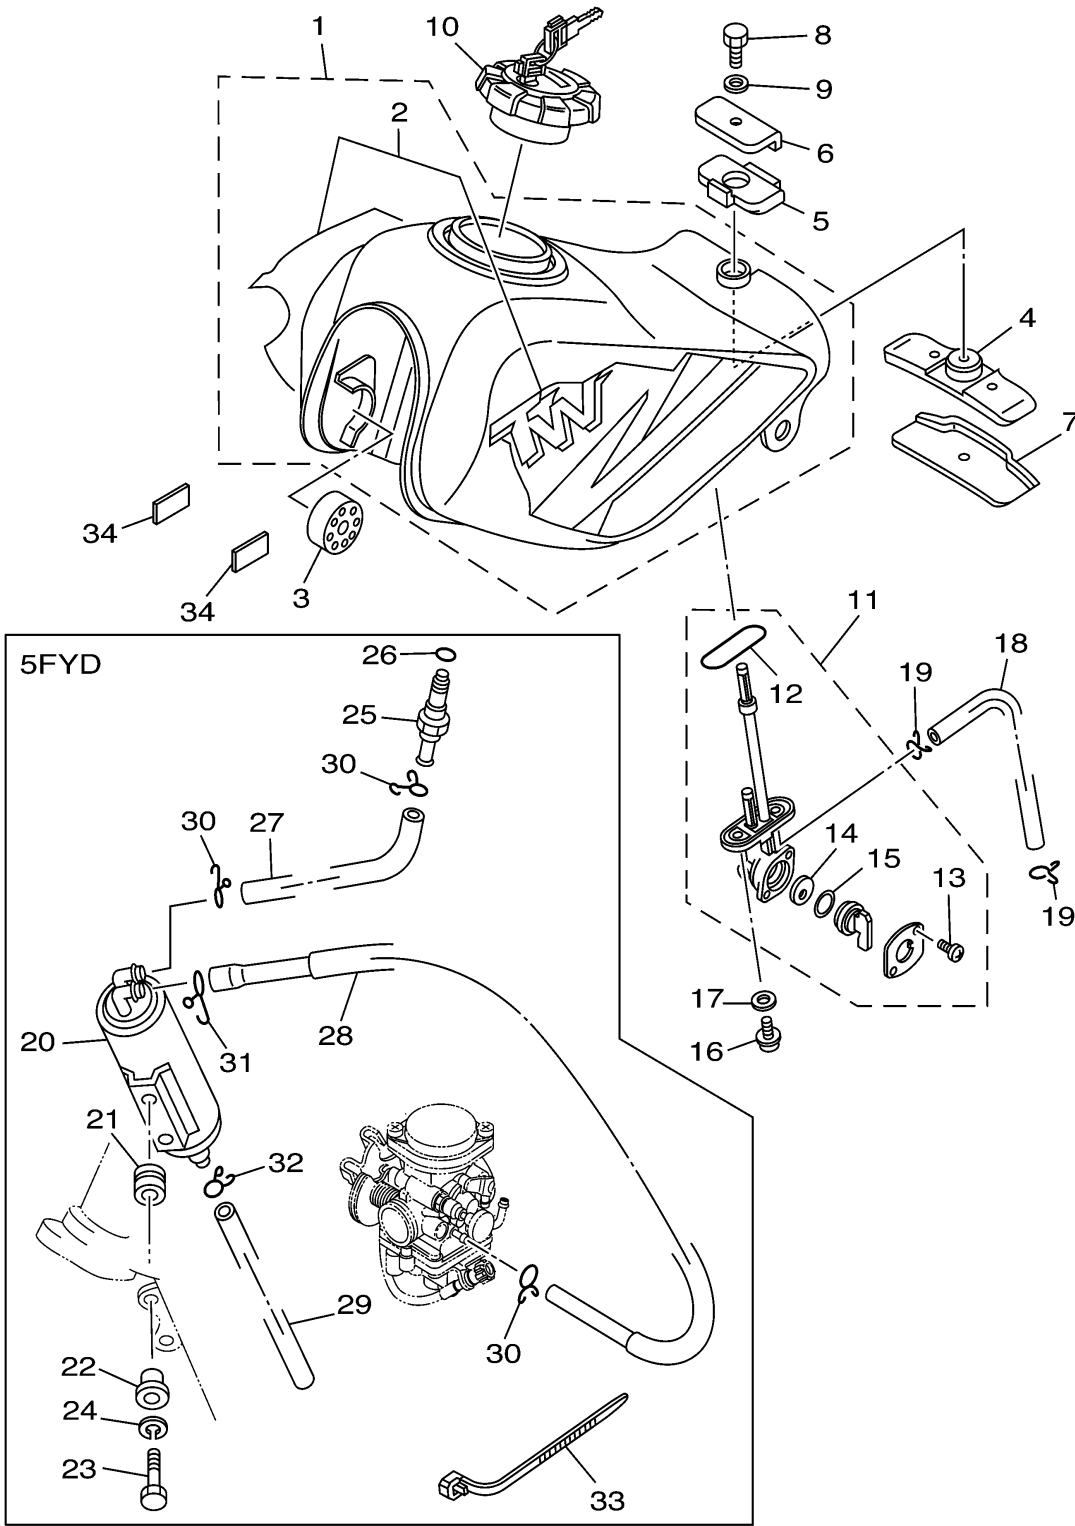


Ref. No.	Part Number	Description	Qty	Remarks
28	90445-10018-00	HOSE	1	(5FYD)
29	90445-11M27-00	HOSE (L240)	1	(5FYD)
30	90467-09006-00	CLIP, SCISSOR	3	(5FYD)
31	90467-10008-00	CLIP, SCISSOR	1	(5FYD)
32	90467-11106-00	CLIP	1	(5FYD)
33	90464-13073-00	CLAMP	1	(5FYD)
34	2JX-24141-00-00	PROTECTOR, FUEL TANK ...	2	



5FYC100-A240

SEAT

Ref. No.	Part Number	Description	Qty	Remarks
1	2JX-24770-90-00	SEMI-DOUBLE SEAT ASSY ...	1	
2	2JX-24731-90-00	. COVER, SEAT	1	
3	2JX-24734-60-00	. BAND, SEAT	1	
4	90201-06059-00	. WASHER, PLATE	2	
5	97007-06020-00	. BOLT	2	
6	92907-06100-00	. WASHER, SPRING	2	
7	18A-24723-00-00	. DAMPER, SEAT	1	
8	1L9-24741-A0-00	. PAD, SEAT	1	
9	90119-06063-00	BOLT, WITH WASHER	2	

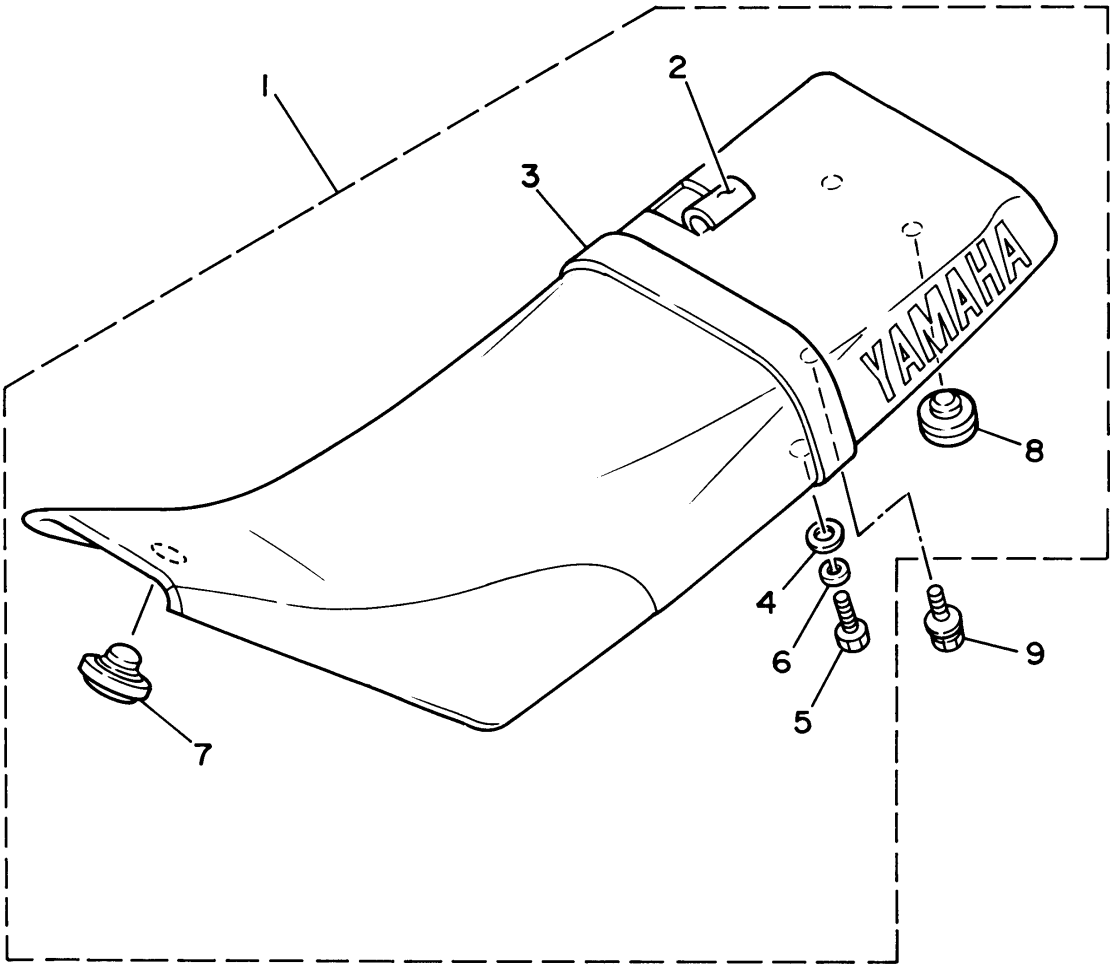


2JY110-7250

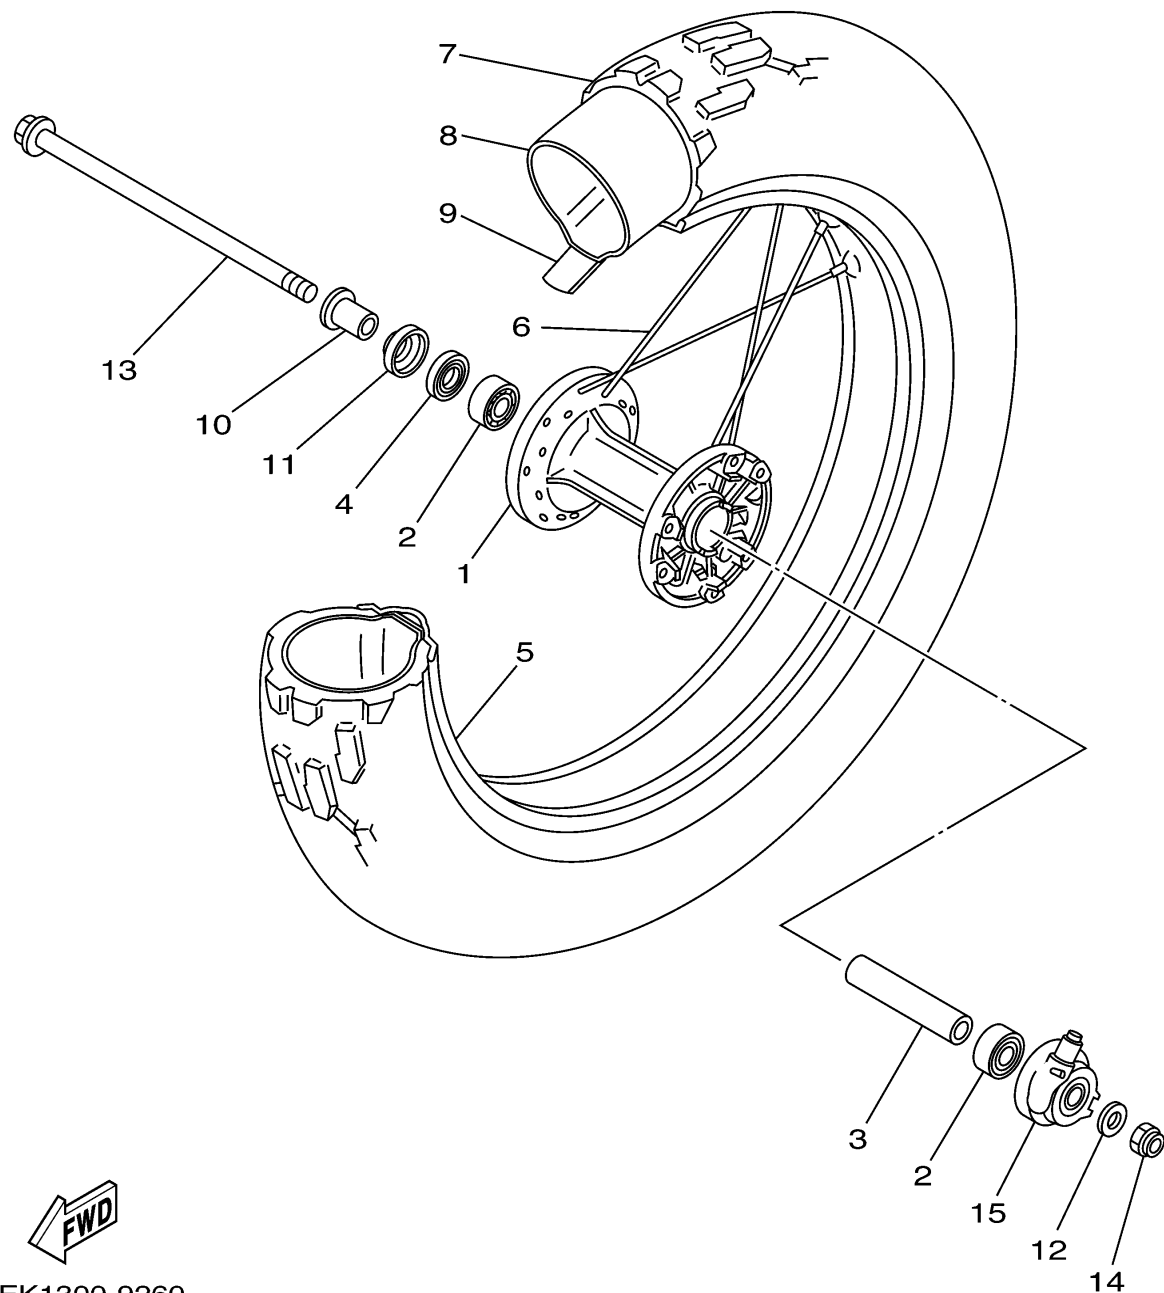

5EK1300-9260

FRONT WHEEL


Ref. No.	Part Number	Description	Qty	Remarks
1	5EK-25111-00-00	HUB, FRONT	1	
2	93306-20203-00	BEARING (B6202RS)	2	
3	90560-15312-00	SPACER	1	
4	93102-20281-00	OIL SEAL (SD 20-35-5)	1	
5	94425-18603-00	RIM (2.50-18)	1	
6	4TP-25304-10-00	SPOKE SET, REAR	1	
7	94113-184R7-00	TIRE (66P 130/80-18 TW31 AM)	1	BRIDGESTONE
8	94213-18232-00	TUBE (130/80-18 TR4)	1	BRIDGESTONE
9	94340-18086-00	BAND, RIM (4.00-18)	1	BRIDGESTONE
10	90387-15600-00	COLLAR	1	
11	322-25118-00-00	COVER, HUB DUST	1	
12	90201-14740-00	WASHER, PLATE	1	
13	2JX-25181-10-00	AXLE, WHEEL	1	
14	95607-14100-00	NUT, U	1	
15	5EK-25190-00-00	GEAR UNIT ASSY	1	

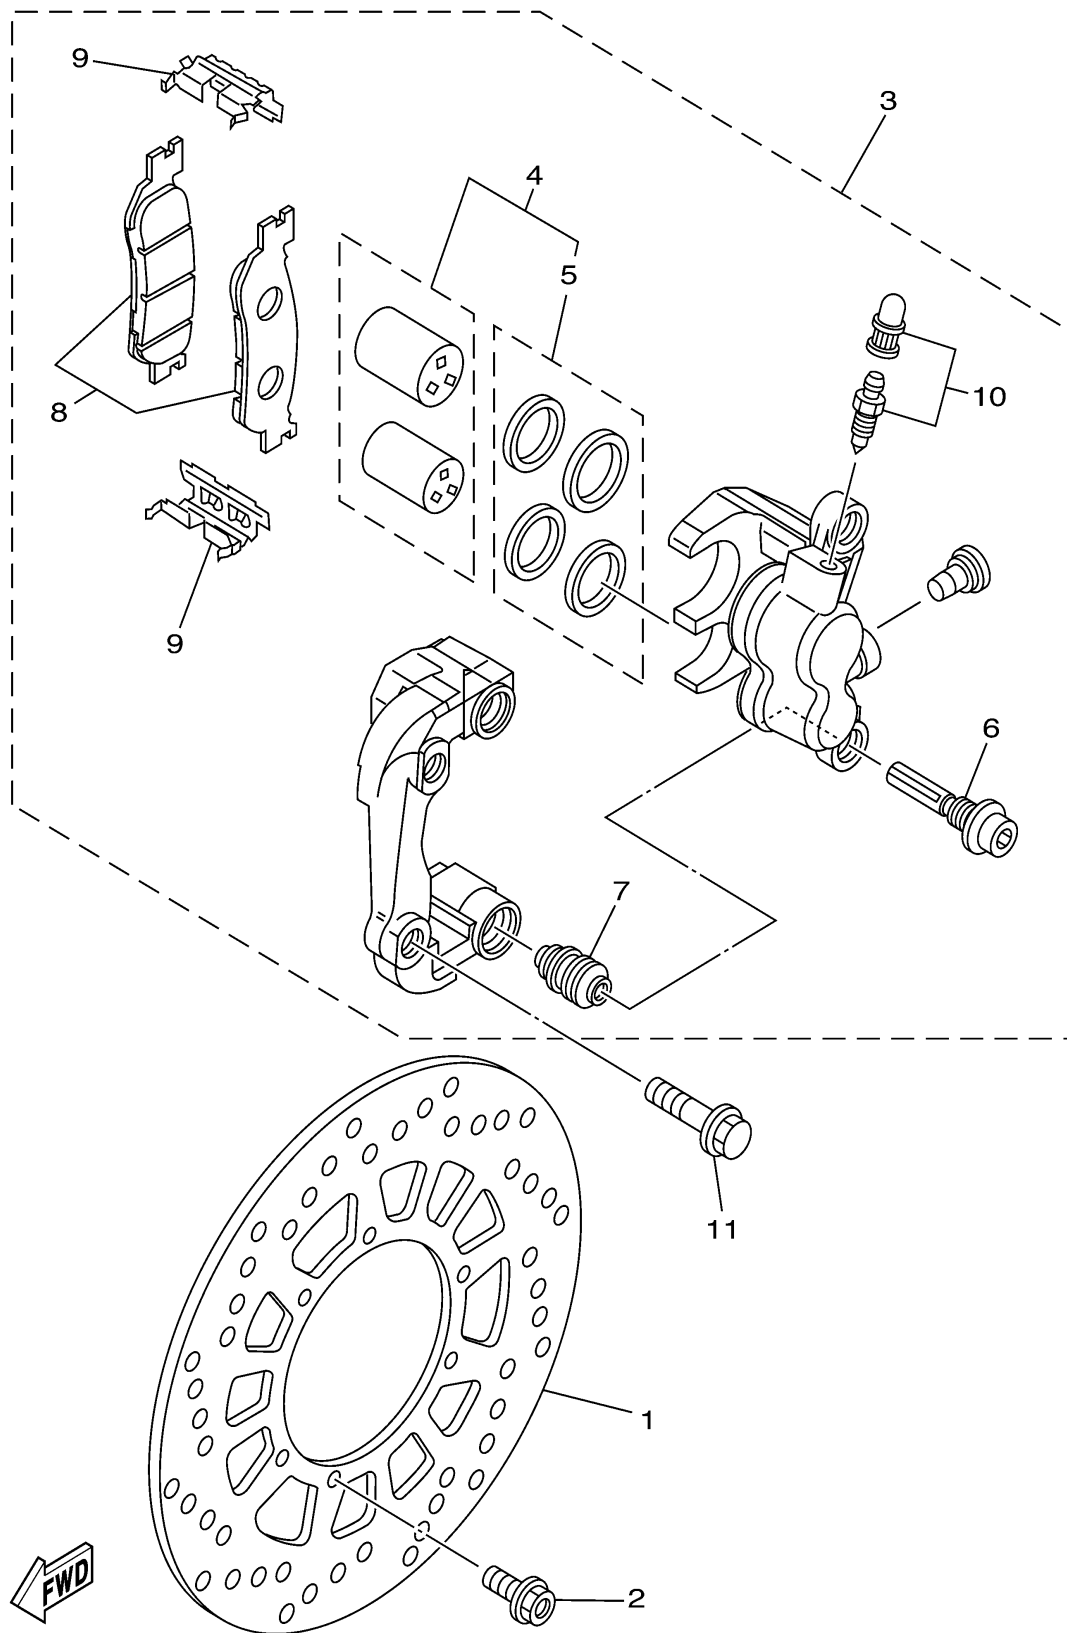

FRONT BRAKE CALIPER

Ref. No.	Part Number	Description	Qty	Remarks
1	4JG-2582T-10-00	DISC, BRAKE	1	
2	90109-065G4-00	BOLT	6	
3	5LB-2580T-00-00	CALIPER ASSY (LEFT)	1	
4	4JG-W0057-00-00	.PISTON ASSY, CALIPER ...	1	
5	4JG-W0047-00-00	...CALIPER SEAL KIT	1	
6	5JW-25914-00-00	.PIN, SLIDE	2	
7	4TT-25937-00-00	.BOOT 2	2	
8	5LB-W0045-00-00	. BRAKE PAD KIT	1	
9	4TT-25919-00-00	.SUPPORT, PAD	2	
10	51L-W0048-00-00	.BLEED SCREW KIT	1	
11	90105-10638-00	BOLT, WASHER BASED	2	

5EK1300-9270

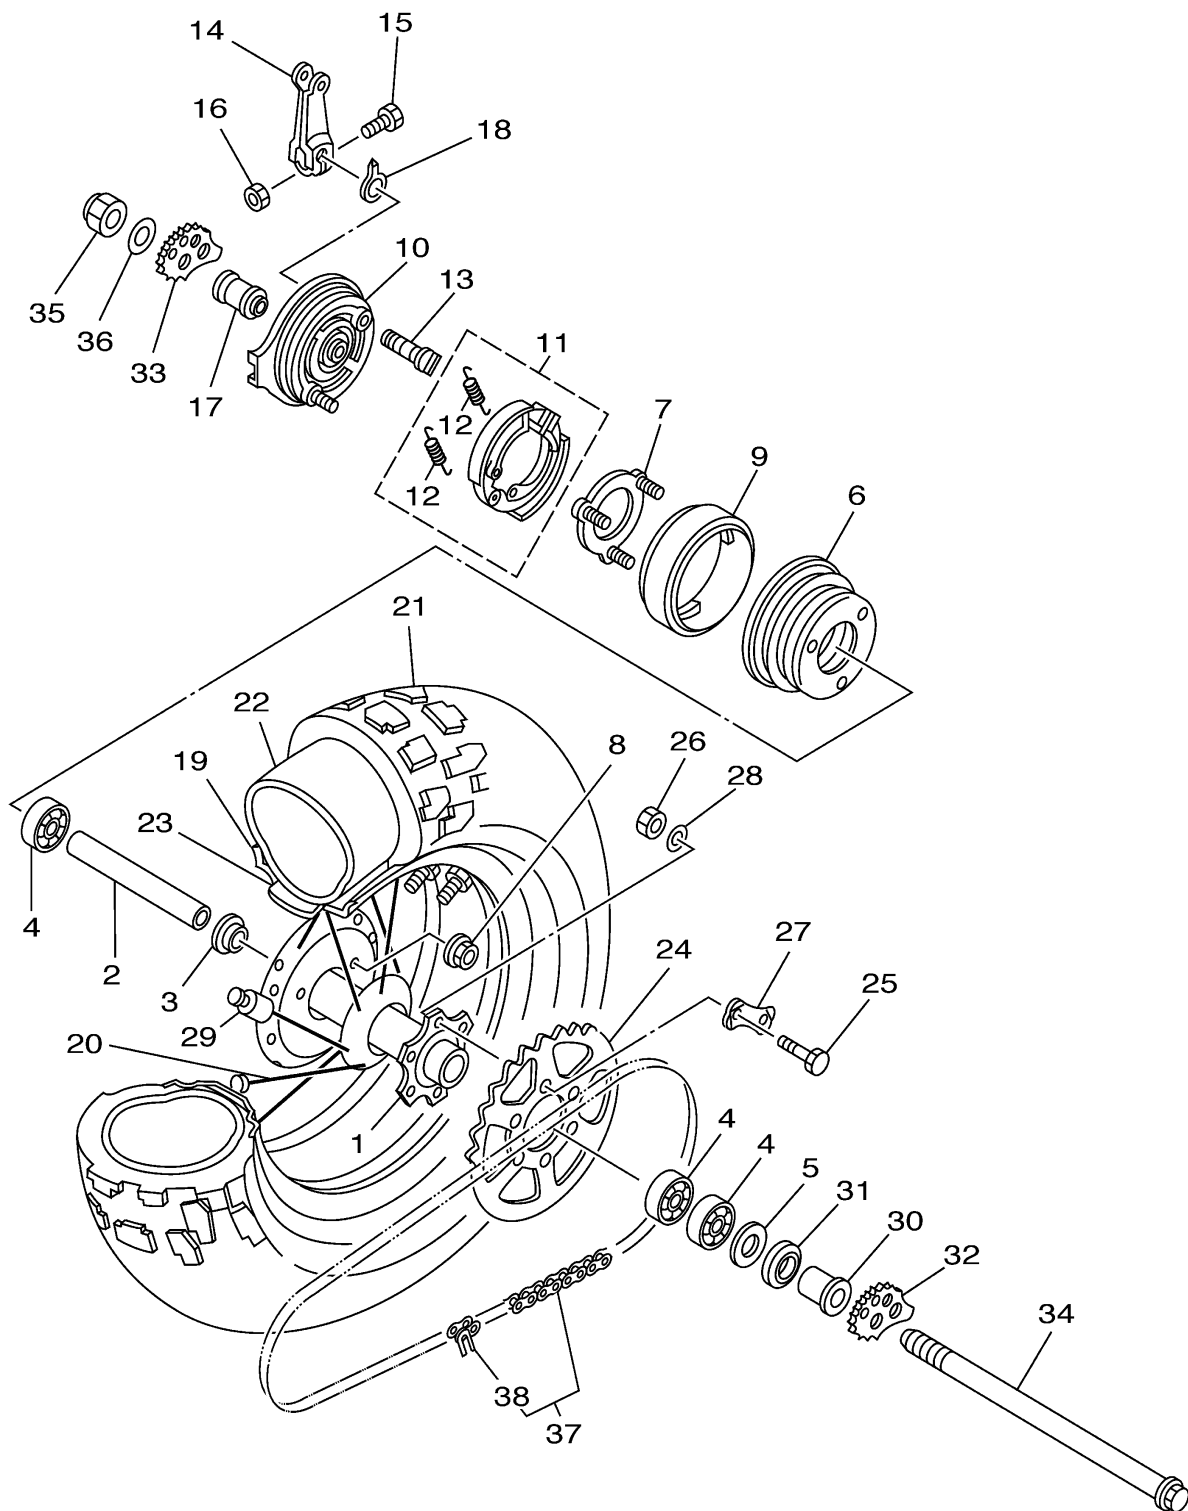


REAR WHEEL

Ref. No.	Part Number	Description	Qty	Remarks
1	2JX-25311-00-00	HUB, REAR	1	
2	90560-17305-00	SPACER	1	
3	152-25115-00-00	FLANGE, SPACER 1	1	
4	93306-20348-00	BEARING	3	
5	93102-25311-00	OIL SEAL (FPJ 25-44-8 TS) ...	1	
6	5V7-2511E-00-35	DRUM, BRAKE	1	SL
7	54G-25185-00-00	RING 1	1	
8	90179-08410-00	NUT	3	
9	2JX-25336-00-00	RING 2	1	
10	2JX-25321-02-35	PLATE, BRAKE SHOE	1	SL
11	4KN-W253E-11-00	BRAKE SHOE KIT	1	
12	90506-15260-00	. SPRING, TENSION	2	
13	3Y6-25351-00-00	CAMSHAFT	1	
14	2N3-25155-00-00	LEVER, CAMSHAFT 1	1	
15	90101-06278-00	BOLT	1	
16	95307-06600-00	NUT	1	
17	90387-171T1-00	COLLAR	1	
18	2JX-2533A-00-00	PLATE, INDICATOR	1	
19	94445-14479-00	RIM	1	
20	2JX-25304-10-00	SPOKE SET, REAR	1	
21	94118-145U1-00	TIRE (180/80-14M/C78P)	1	BRIDGESTONE
22	94218-14251-00	TUBE (180/80-14 TR4)	1	BRIDGESTONE
23	94318-14149-00	BAND, RIM (4.50-14)	1	BRIDGESTONE
24	15A-25450-20-00	SPROCKET, DRIVEN (50T) ...	1	
25	90109-08618-00	BOLT	6	
26	90185-08089-00	NUT, SELF-LOCKING	6	
27	90215-08160-00	WASHER, LOCK	3	
28	90201-086P8-00	WASHER, PLATE	6	
29	156-25398-00-00	BALANCER, WHEEL	1	UN

CONTINUED ON NEXT FRAME ➤



5FY8100-1280

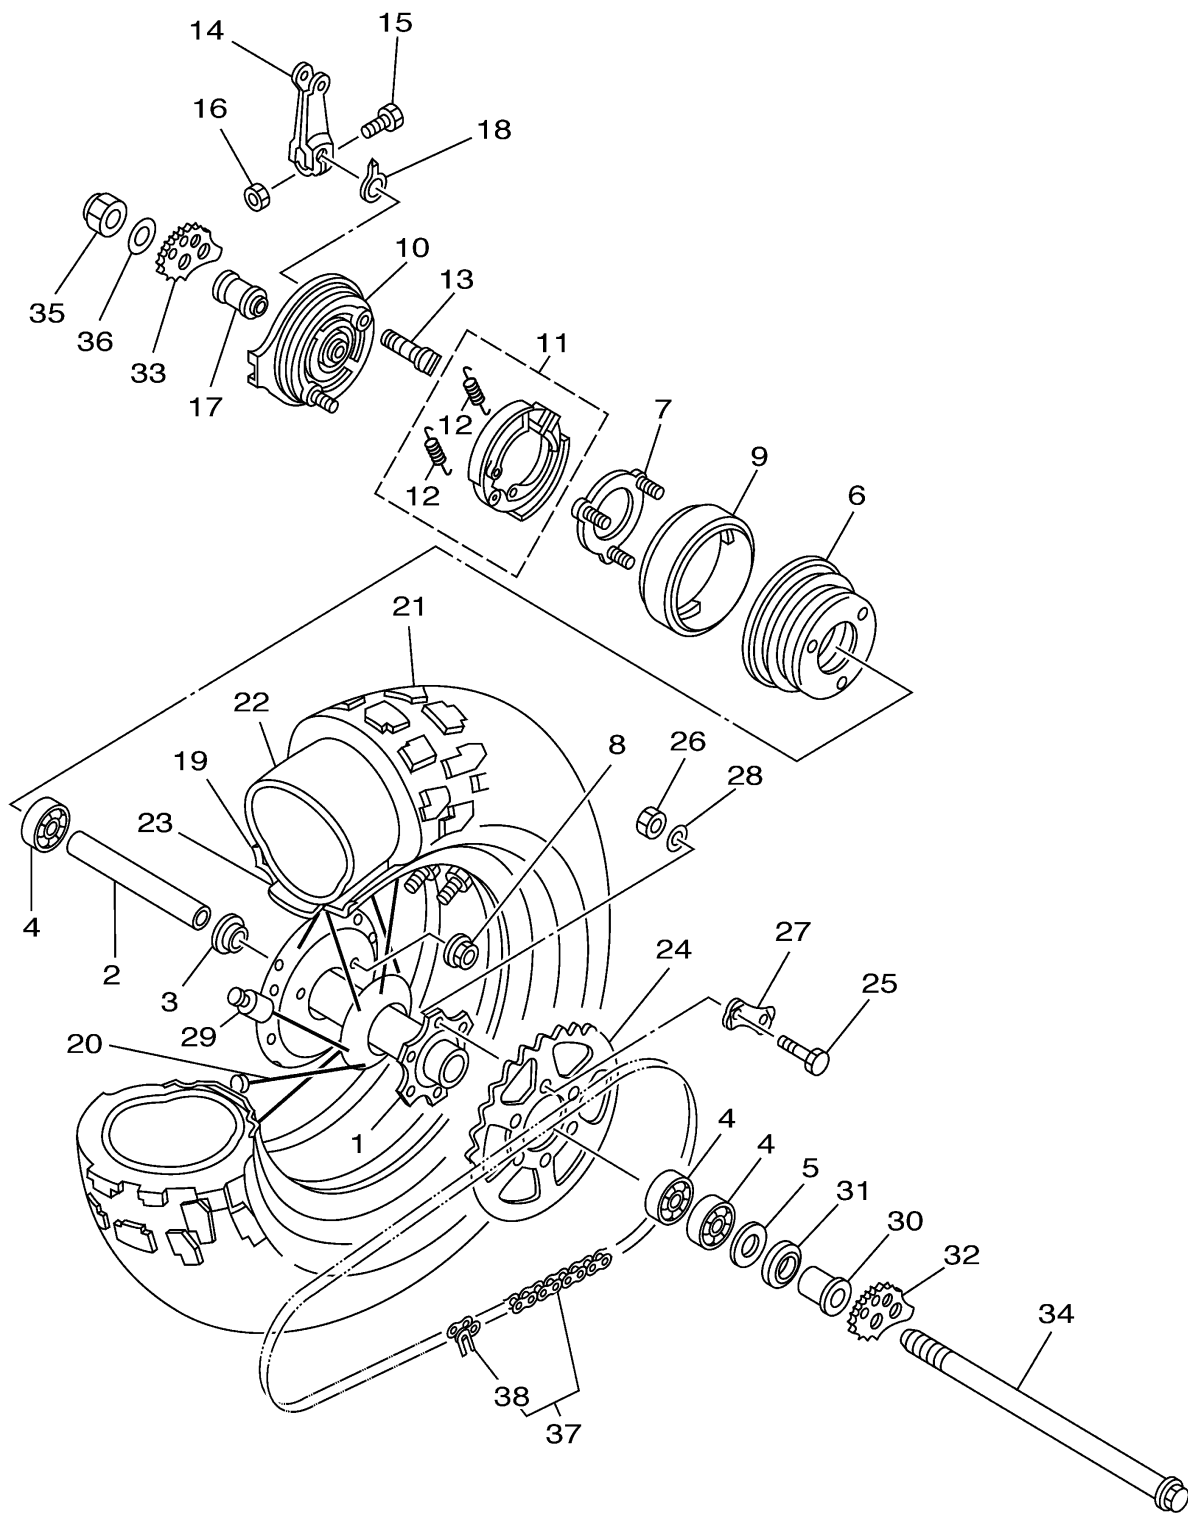


REAR WHEEL

Ref. No.	Part Number	Description	Qty	Remarks
30	90387-171T2-00	COLLAR	1	
31	36R-25367-00-00	COVER, HUB DUST	1	
32	3Y1-25388-01-00	PULLER, CHAIN 1	1	
33	3Y1-25389-00-00	PULLER, CHAIN 2	1	
34	2JX-25381-10-00	AXLE, WHEEL	1	
35	90185-16127-00	NUT, SELF-LOCKING	1	
36	90201-164H4-00	WASHER, PLATE	1	
37	94580-88122-00	CHAIN (DID 428HG-122L)	1	
38	94680-88001-00	. JOINT, CHAIN (DID 428HG) ..	1	




5FY8100-1280

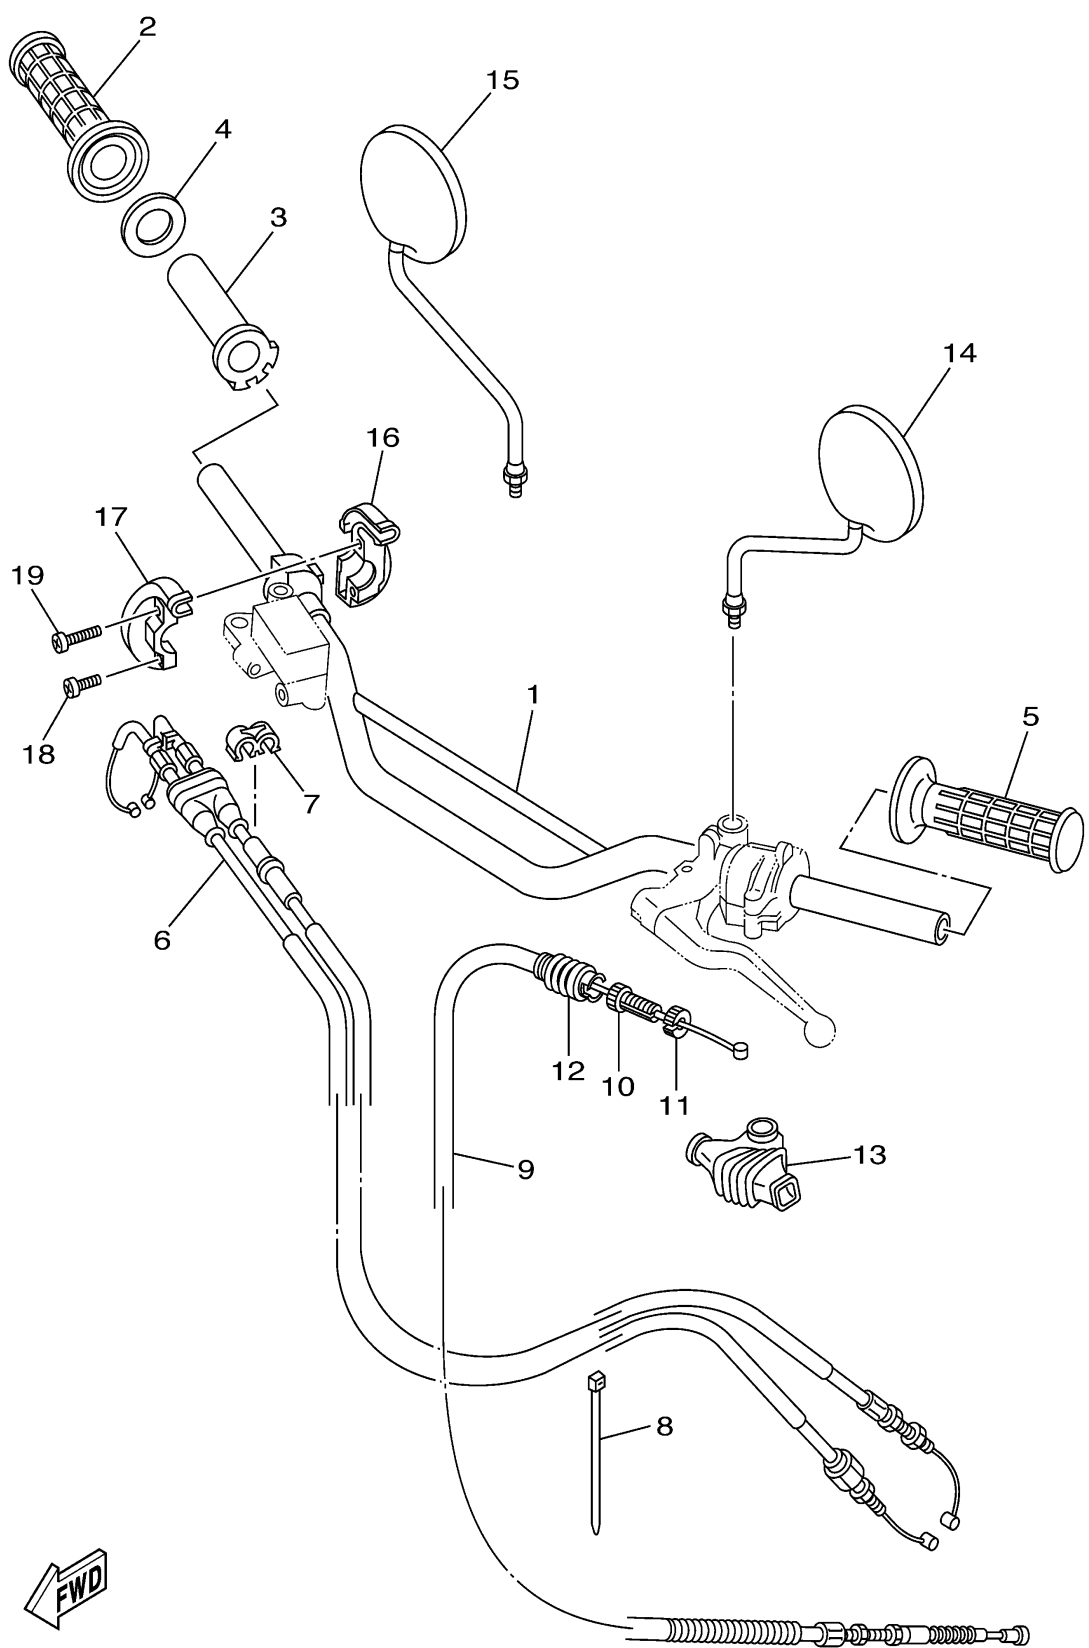

STEERING HANDLE. CABLE

Ref. No.	Part Number	Description	Qty	Remarks
1	5LB-26111-00-00	HANDLEBAR	1	
2	1LX-26242-01-00	GRIP (RIGHT)	1	
3	5BE-26243-00-00	TUBE, THROTTLE GUIDE	1	
4	3Y1-26249-00-00	.RING, LEAF	1	
5	1LX-26241-01-00	GRIP (LEFT)	1	
6	5LB-26302-01-00	THROTTLE CABLE ASSY	1	
7	90464-06214-00	CLAMP	1	
8	90465-13152-00	CLAMP	1	
9	5EK-26335-00-00	CABLE, CLUTCH	1	
10	90123-08046-00	.BOLT	1	
11	90179-08148-00	.NUT	1	
12	1E6-26342-00-00	BOOT, CABLE	1	
13	1E6-26372-00-00	COVER, HANDLE LEVER 1 ...	1	
14	3Y1-26290-10-00	BACK MIRROR ASSY (L.H) ...	1	
15	3Y1-26290-00-00	BACK MIRROR ASSY (R.H) ...	1	
16	3LN-26281-01-00	CAP, GRIP UPPER	1	
17	3LN-26282-01-00	CAP, GRIP LOWER	1	
18	98507-05020-00	SCREW, PAN HEAD	1	
19	98507-05025-00	SCREW, PAN HEAD	1	


 5FYC110-A290

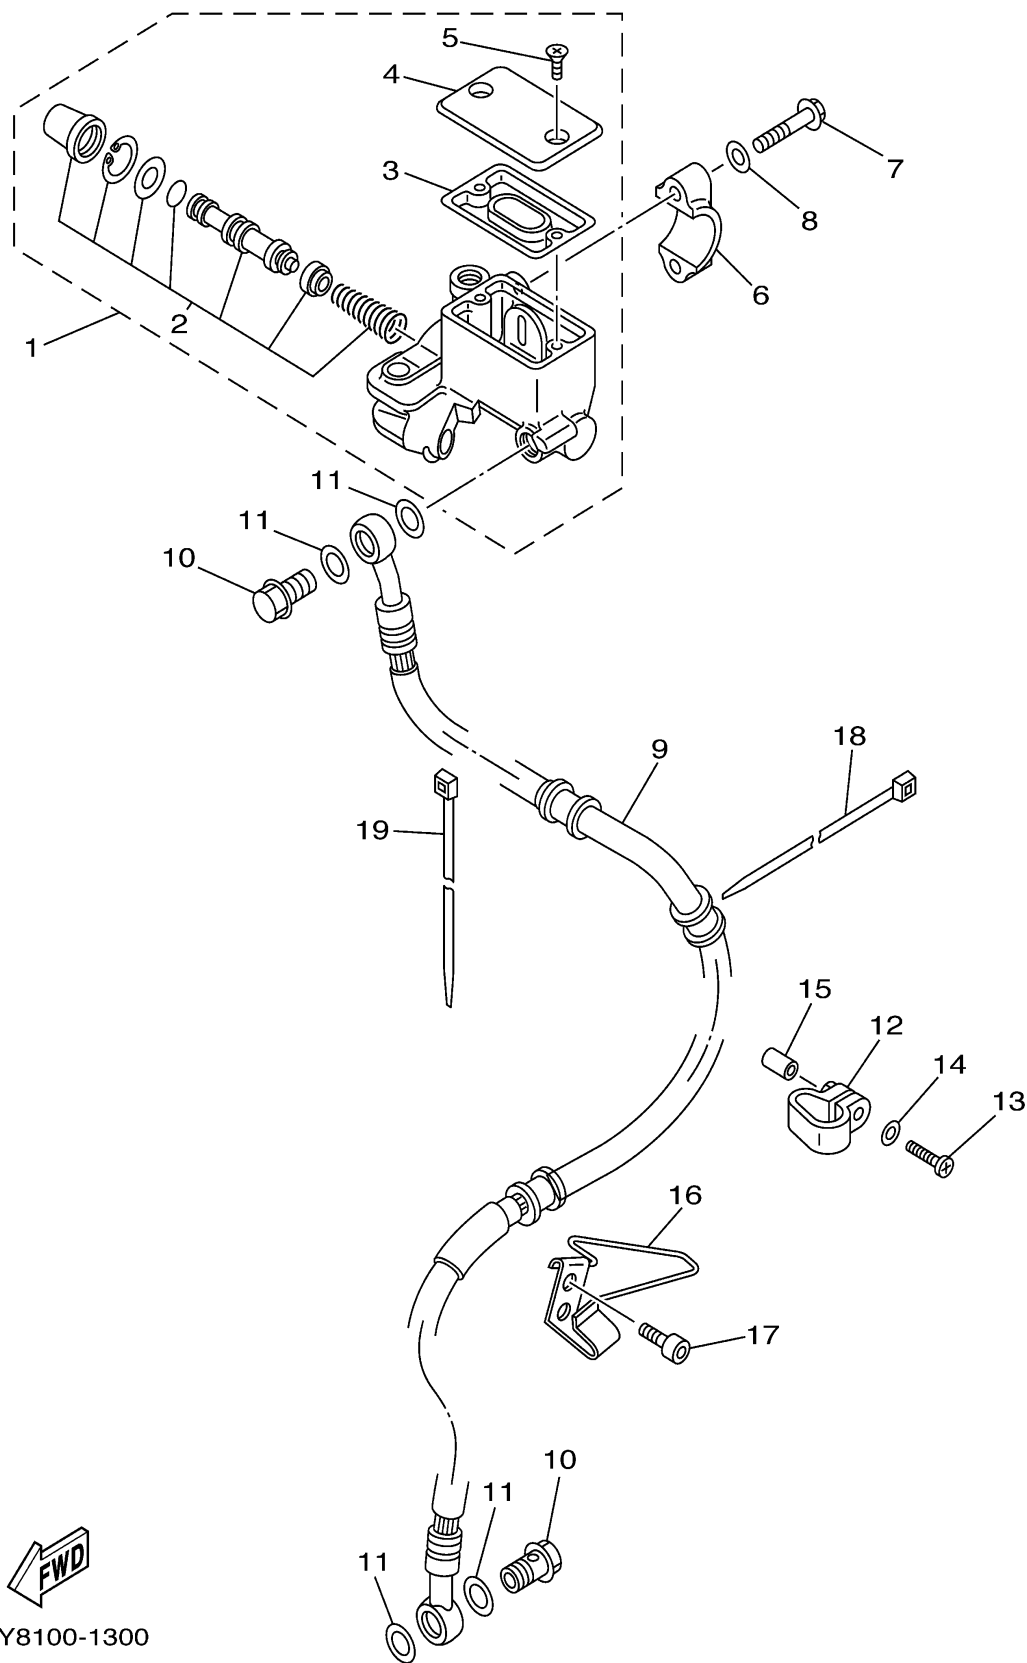

FRONT MASTER CYLINDER

Ref. No.	Part Number	Description	Qty	Remarks
1	4GY-25870-02-00	MASTER CYLINDER SUB ASSY	1	
2	5CG-W0041-00-00	. CYLINDER KIT, MASTER	1	
3	3RW-25854-00-00	. DIAPHRAGM, RESERVOIR . .	1	
4	4GY-25852-00-00	. CAP, RESERVOIR	1	
5	98706-04012-00	. .SCREW, FLAT HEAD	2	
6	3RW-25867-00-00	BRACKET, MASTER CYLINDER	1	
7	97007-06025-00	BOLT	2	
8	92907-06600-00	WASHER, PLATE	2	
9	5LB-25872-00-00	HOSE, BRAKE 1	1	
10	90401-10159-00	BOLT, UNION	2	
11	90201-10118-00	WASHER, PLATE	4	
12	3TB-23467-01-00	CLAMP	1	
13	98507-04018-00	SCREW, PAN HEAD	1	
14	92907-04600-00	WASHER	1	
15	90445-057G5-00	HOSE (L10)	1	
16	34X-25876-00-00	HOLDER, BRAKE HOSE 2	1	
17	91317-06010-00	BOLT	2	
18	1UA-82591-00-00	CLAMP	1	
19	1UA-82591-00-00	CLAMP	1	

5FY8100-1300

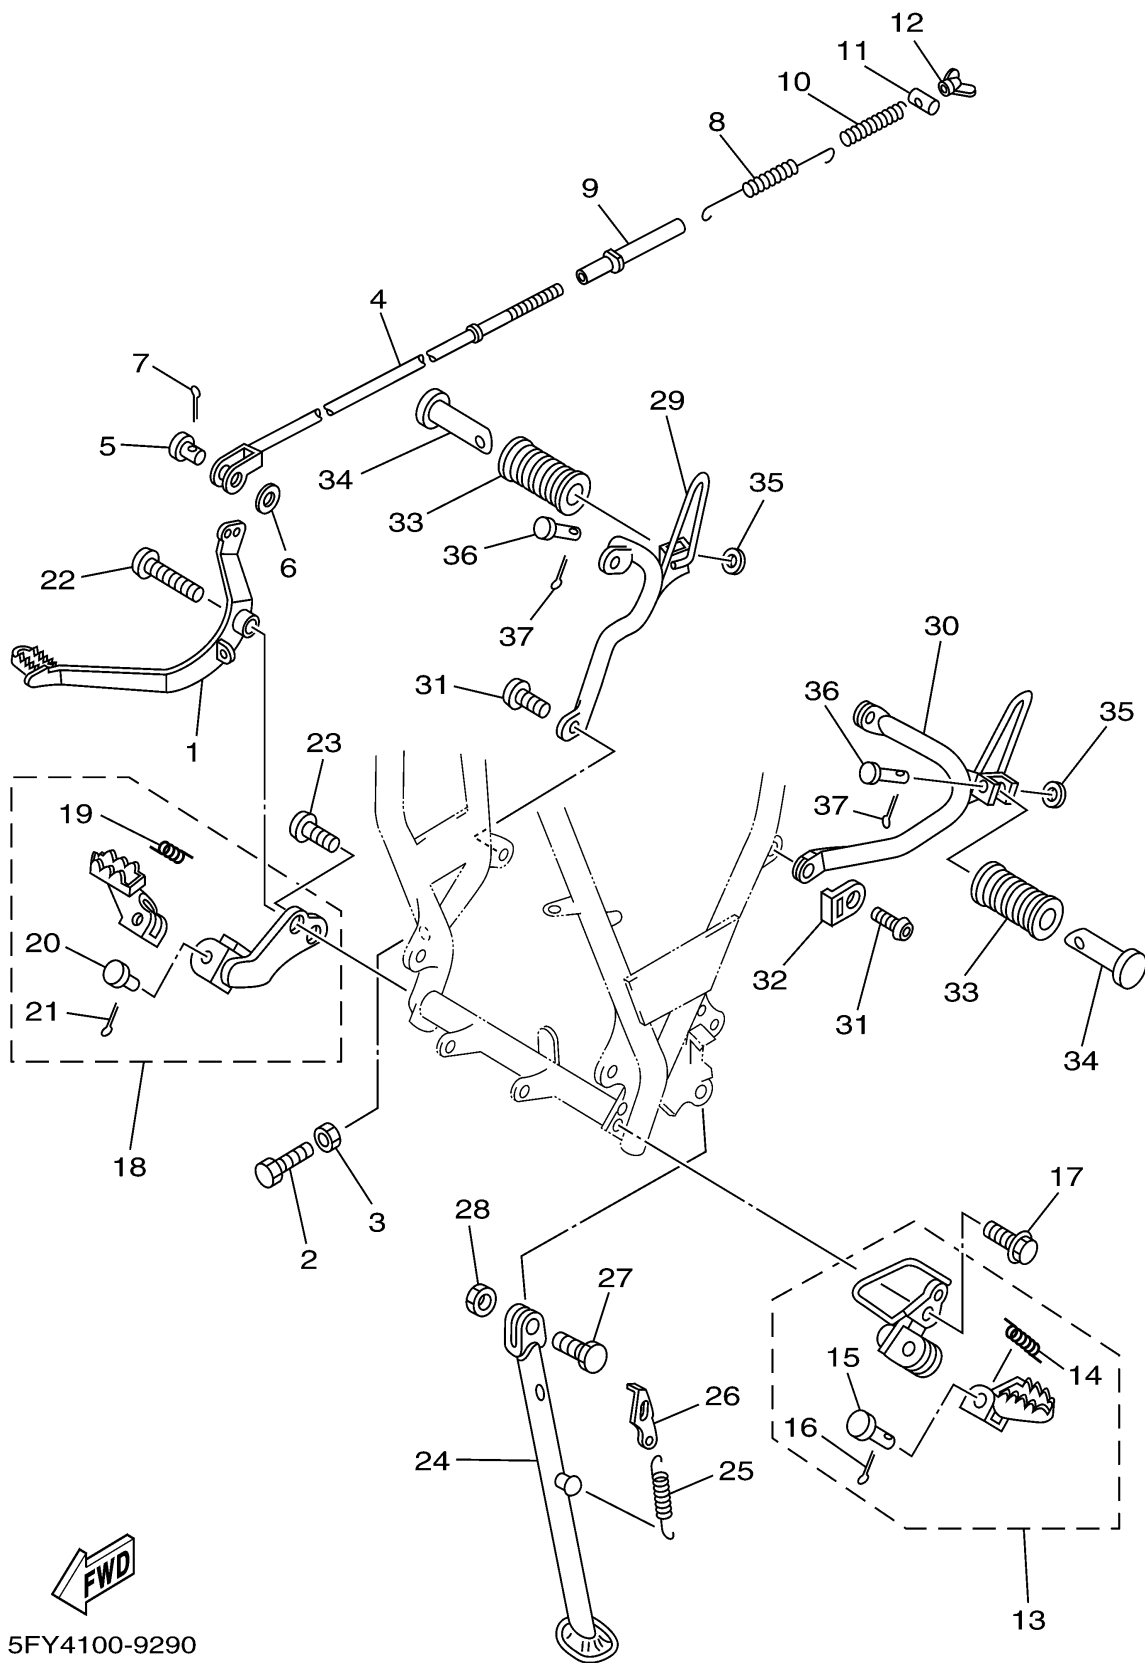


STAND. FOOTREST

Ref. No.	Part Number	Description	Qty	Remarks
1	2JX-27211-00-90	PEDAL, BRAKE	1	ZK
2	97007-06020-00	BOLT	1	
3	95307-06700-00	NUT	1	
4	2JX-27231-00-00	ROD, BRAKE	1	
5	90240-06076-00	PIN, CLEVIS	1	
6	92907-06200-00	WASHER	1	
7	91401-20012-00	PIN, COTTER	1	
8	90506-18289-00	SPRING, TENSION	1	
9	1M1-27244-00-00	COVER	1	
10	90501-10245-00	SPRING, COMPRESSION	1	
11	90249-12008-00	PIN	1	
12	90175-06013-00	NUT, WING	1	
13	2JX-27410-00-90	FRONT FOOTREST ASSY (LEFT)	1	ZK
14	90508-20023-00	. SPRING, TORSION	1	
15	91701-08038-00	. PIN, CLEVIS	1	
16	91401-25012-00	. PIN, COTTER	1	
17	95827-12025-00	BOLT, FLANGE	1	
18	15A-27420-01-90	FRONT FOOTREST ASSY (RIGHT)	1	ZK
19	90508-20023-00	. SPRING, TORSION	1	
20	91701-08038-00	. PIN, CLEVIS	1	
21	91401-25012-00	. PIN, COTTER	1	
22	92017-10035-00	BOLT, BUTTON HEAD	1	
23	92017-10020-00	BOLT, BUTTON HEAD	1	
24	2JX-27311-02-00	STAND, SIDE	1	
25	90506-29360-00	SPRING, TENSION	1	
26	5LB-27315-00-00	LINK, SIDE STAND	1	
27	90109-10473-00	BOLT	1	


CONTINUED ON NEXT FRAME ►

5FY4100-9290

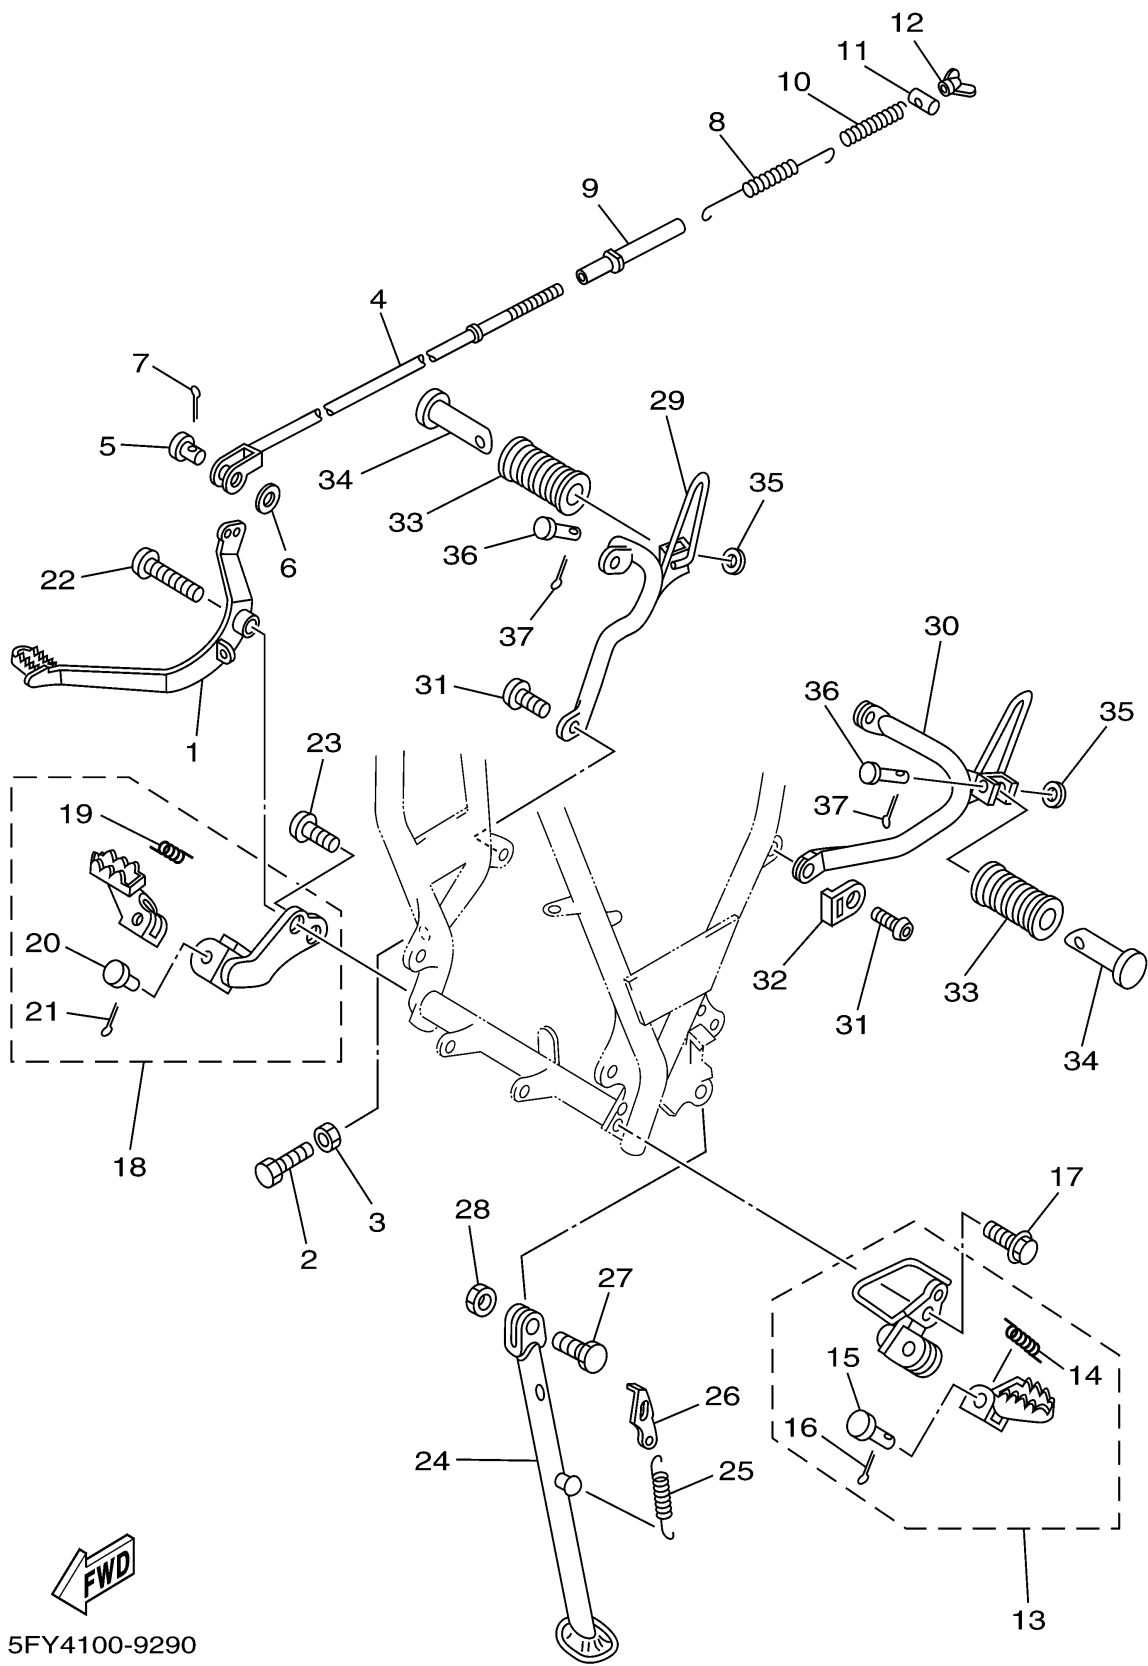

STAND. FOOTREST


Ref. No.	Part Number	Description	Qty	Remarks
28	90185-10037-00	NUT, SELF-LOCKING	1	
29	2JX-27442-00-33	BRACKET 2	1	YB
30	26F-27432-00-33	BRACKET 1	1	YB
31	92017-08016-00	BOLT, BUTTON HEAD	4	
32	2JX-27437-00-00	WASHER, SPECIAL	1	
33	120-27433-00-00	COVER, REAR FOOTREST ...	2	
34	120-27431-00-00	FOOTREST, REAR 1	2	
35	90201-20279-00	WASHER, PLATE	2	
36	91701-06032-00	PIN, CLEVIS	2	
37	91401-20012-00	PIN, COTTER	2	

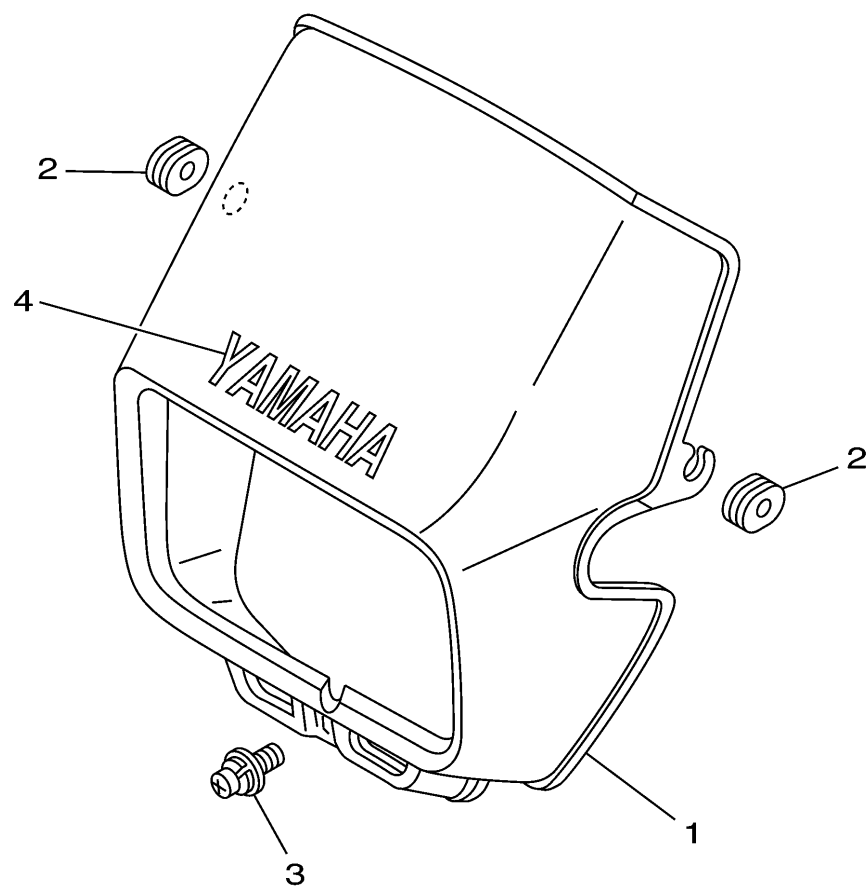

COWLING 1


Ref. No.	Part Number	Description	Qty	Remarks
1	3AW-28351-20-00	BODY, COWLING	1	
2	90480-12053-00	GROMMET	2	
3	90159-06060-00	SCREW, WITH WASHER	1	
4	99247-00100-00	EMBLEM, YAMAHA	1	


3AWW100-8300

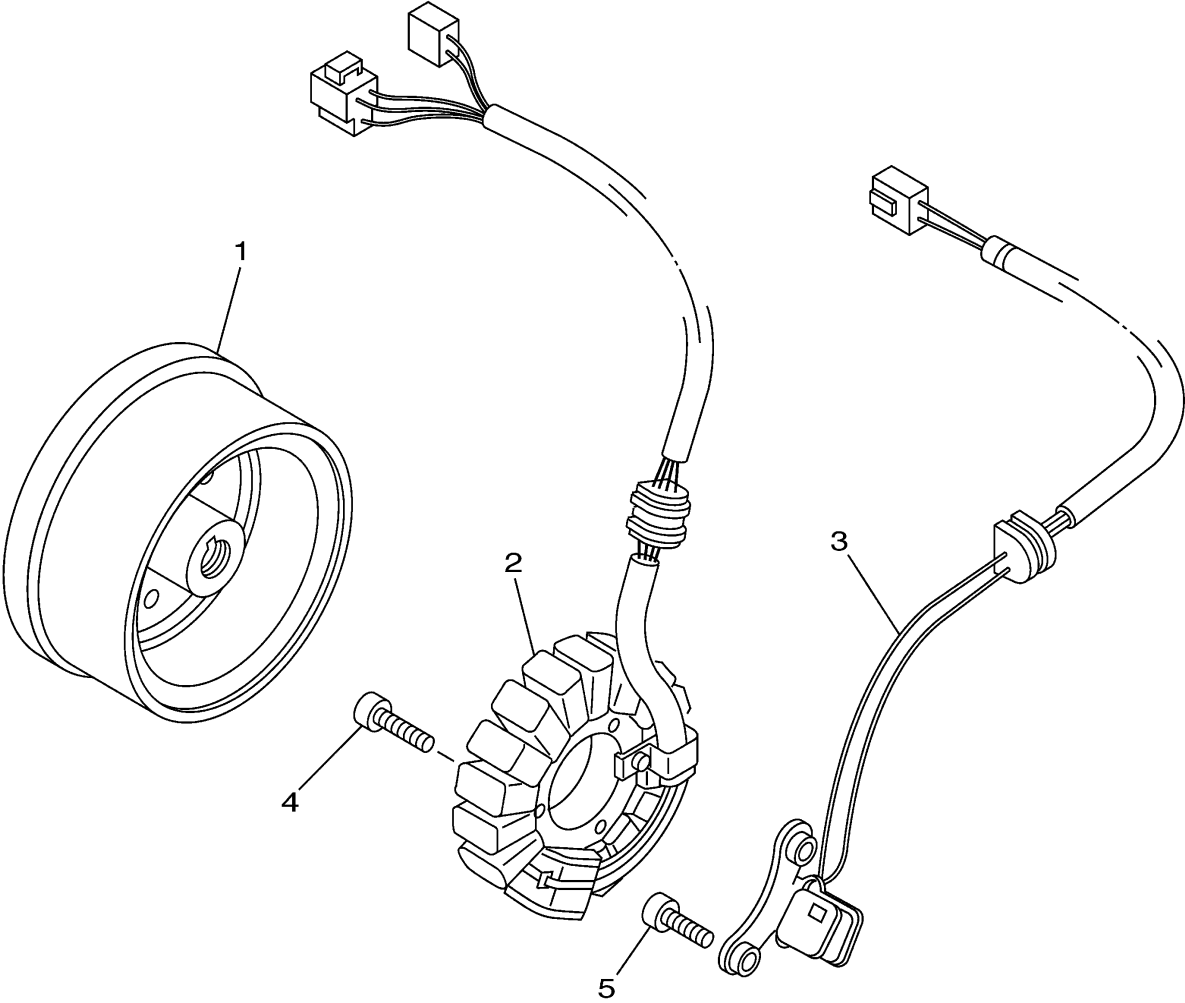

GENERATOR


Ref. No.	Part Number	Description	Qty	Remarks
1	5BT-85550-00-00	ROTOR ASSY	1	
2	4WP-85510-10-00	STATOR ASSY	1	
3	4JG-85580-01-00	COIL, PULSER	1	
4	91317-06025-00	BOLT, SOCKET HEAD	3	
5	91317-06020-00	BOLT	2	

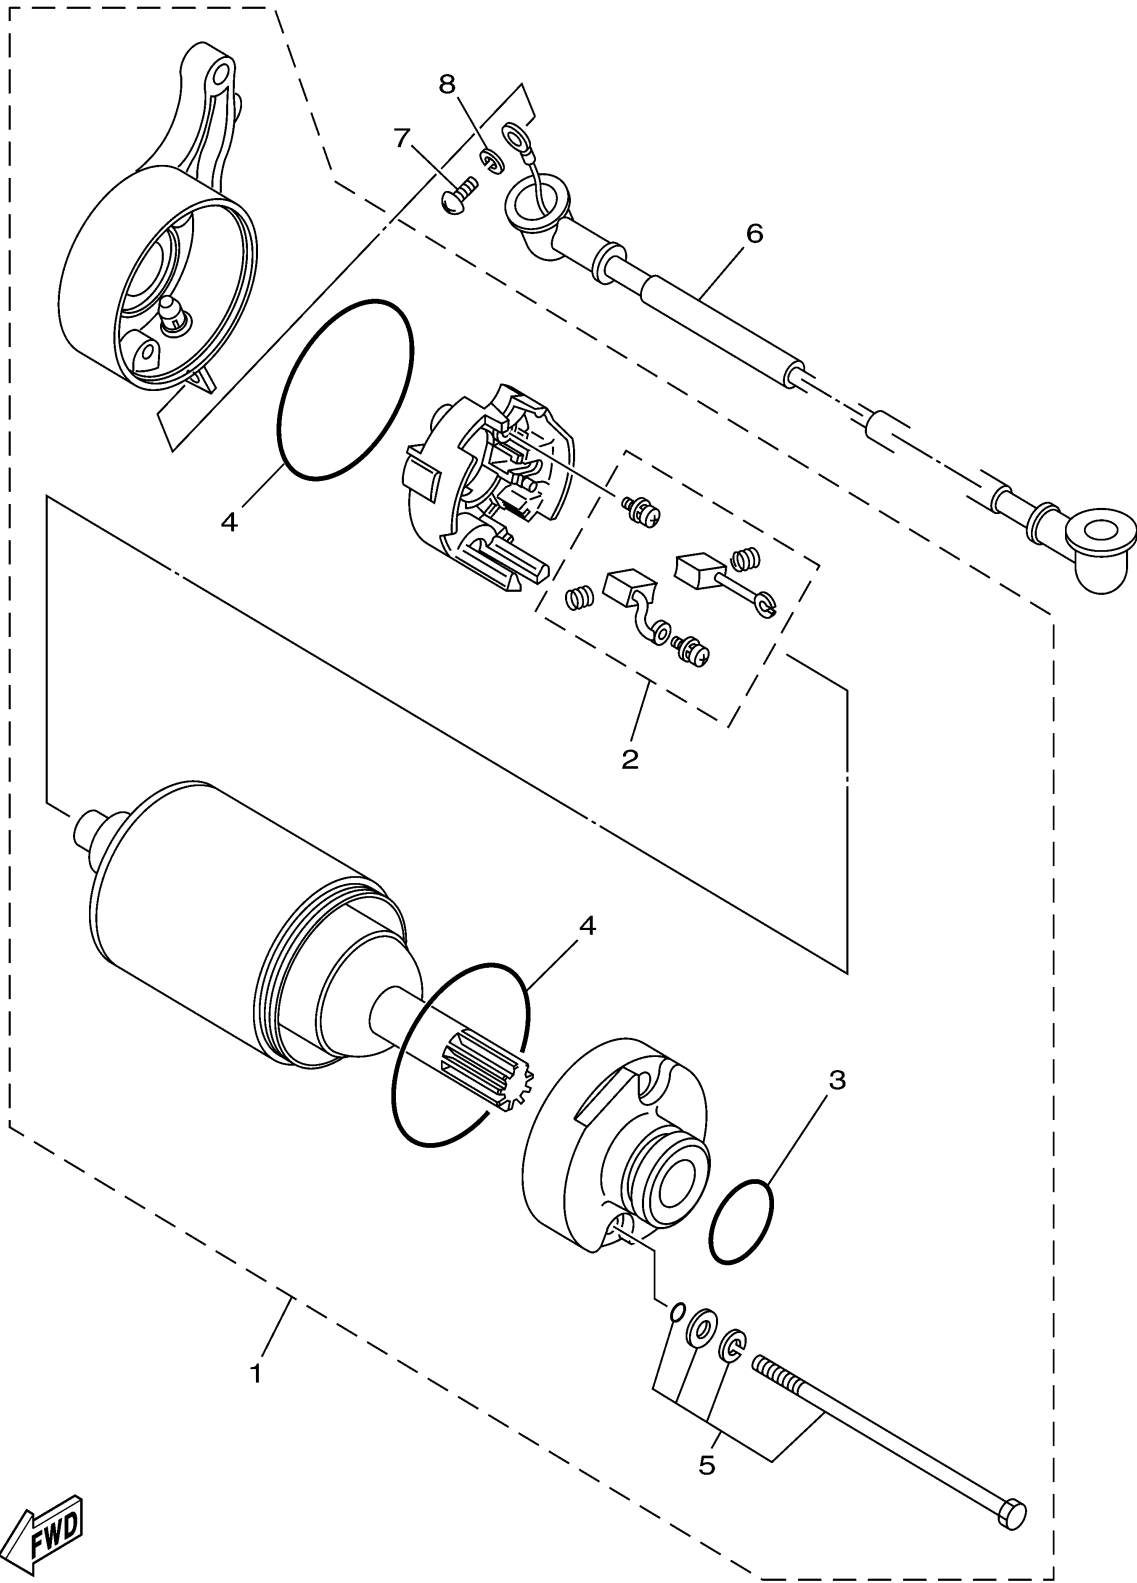

5FY5100-0320

STARTING MOTOR


Ref. No.	Part Number	Description	Qty	Remarks
1	3AW-81890-00-00	MOTOR ASSY	1	
2	50M-81801-M0-00	. BRUSH SET	1	
3	93210-25711-00	. O-RING	1	
4	93210-55669-00	. O-RING	1	
5	59V-81828-M0-00	. SCREW SET	1	
6	4JG-8183G-00-00	CORD COMP.	1	
7	98507-05008-00	SCREW, PAN HEAD	1	
8	92907-05100-00	WASHER (35 X)	1	

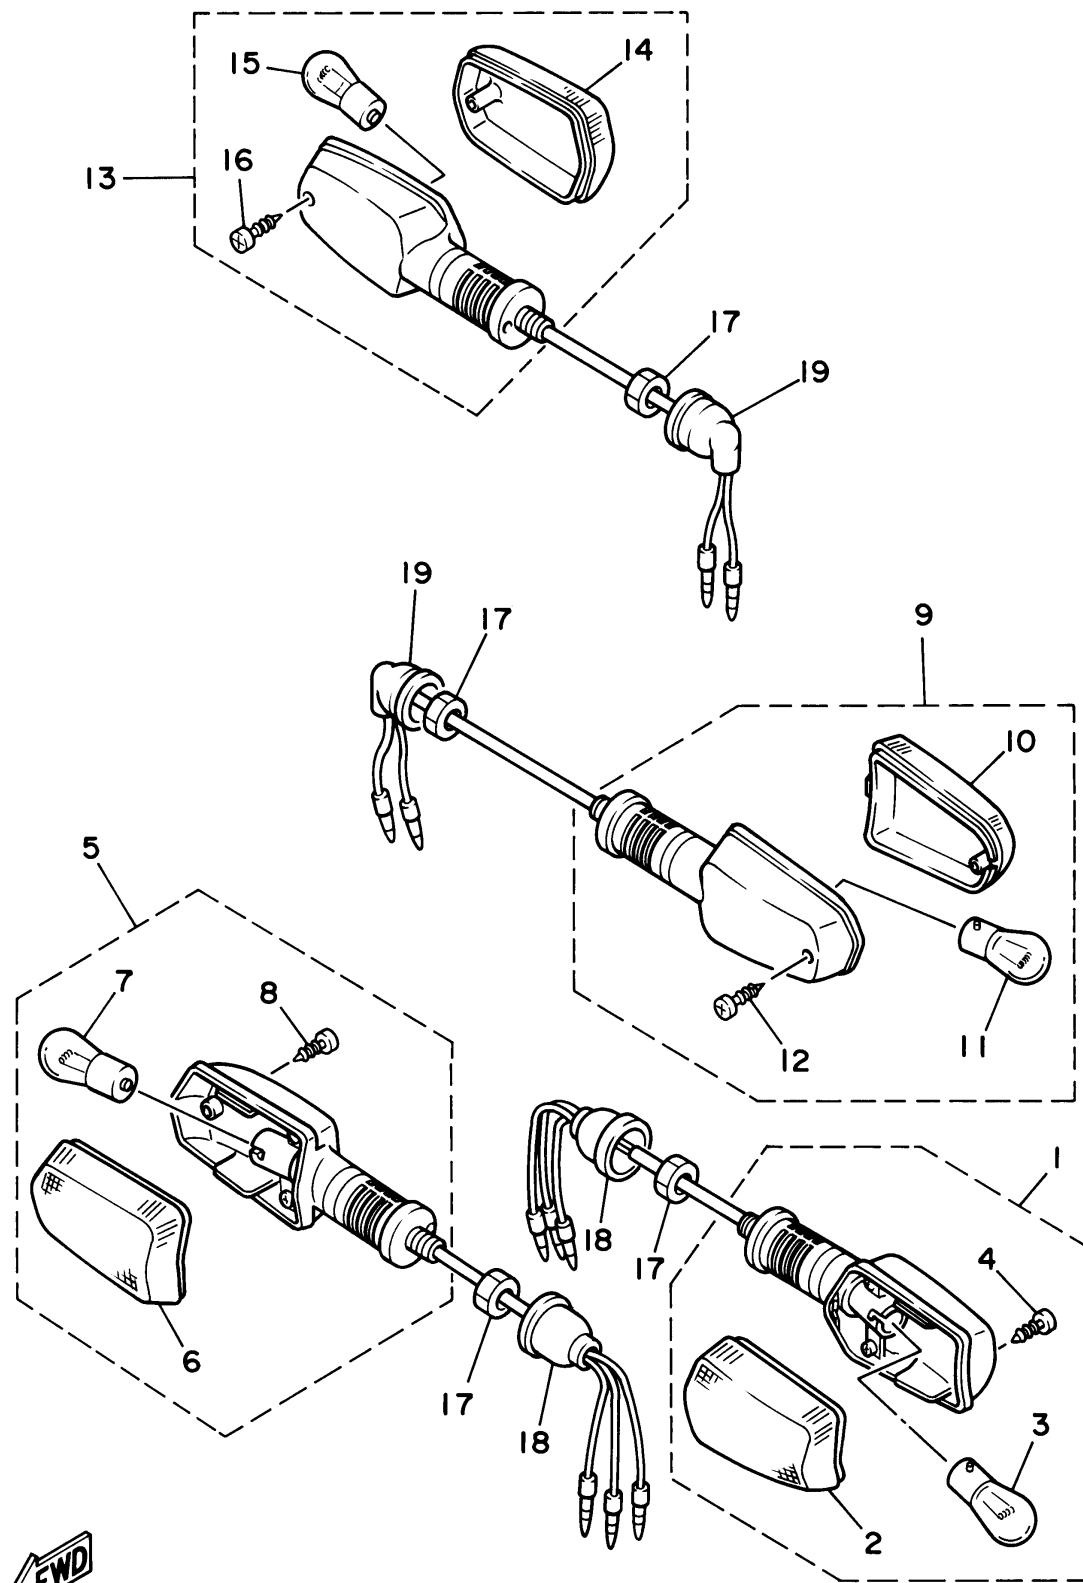

2YGI10-8330

FLASHER LIGHT

Ref. No.	Part Number	Description	Qty	Remarks
1	1UF-83310-00-00	FRONT FLASHER LIGHT ASSY 1	1	
2	51L-83332-01-00	. LENS, FLASHER	1	
3	256-84714-61-00	. BULB (12V-21/5W)	1	
4	97707-40620-00	. SCREW, TAPPING	1	
5	1UF-83320-00-00	FRONT FLASHER LIGHT ASSY 2	1	
6	51L-83342-01-00	. LENS, FLASHER 2	1	
7	256-84714-61-00	. BULB (12V-21/5W)	1	
8	97707-40620-00	. SCREW, TAPPING	1	
9	1UF-83330-00-00	REAR FLASHER LIGHT ASSY 1	1	
10	51L-83342-00-00	. LENS, FLASHER 2	1	
11	256-83311-70-00	. BULB (12V-27W)	1	
12	97706-40620-00	. SCREW, TAPPING	1	
13	1UF-83340-00-00	FLASHER LIGHT ASSY 2	1	
14	51L-83332-00-00	. LENS, FLASHER	1	
15	256-83311-70-00	. BULB (12V-27W)	1	
16	97706-40620-00	. SCREW, TAPPING	1	
17	95307-12700-00	NUT	4	
18	10V-83365-00-00	CAP	2	
19	18G-83365-00-00	CAP	2	

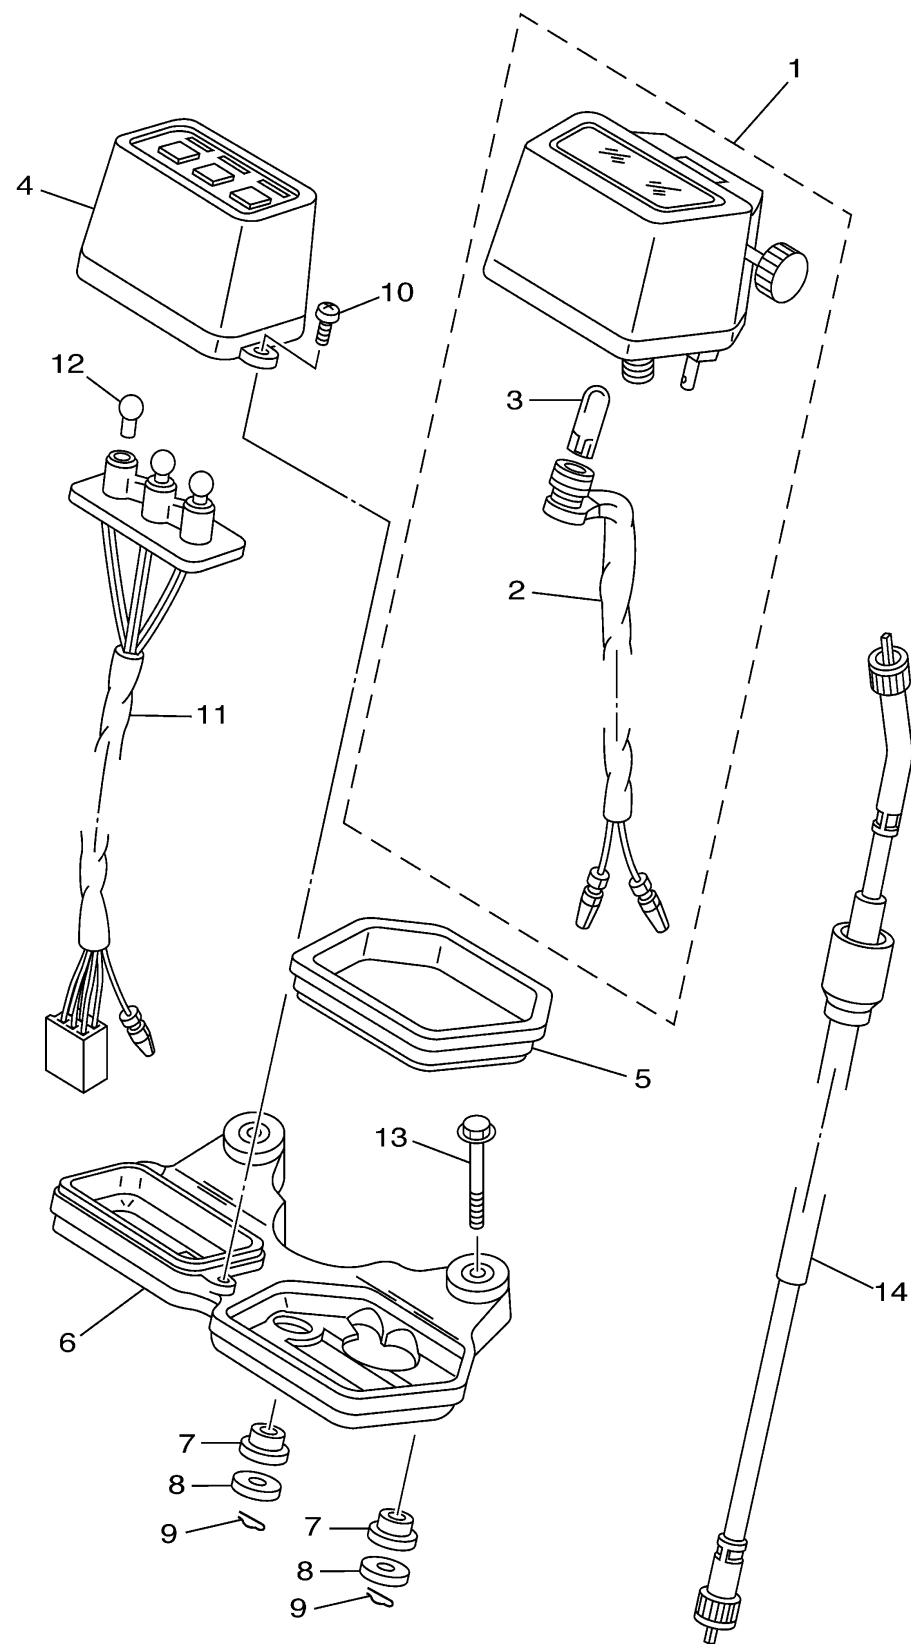


METER

Ref. No.	Part Number	Description	Qty	Remarks
1	2JX-83510-B0-00	SPEEDOMETER ASSY (MPH)	1	
2	2JX-83536-A0-00	. SOCKET, METER	1	
3	4R0-83517-00-00	. BULB (12V-3.4W T10)	1	
4	5EK-83568-00-00	PILOT BOX, UPPER	1	
5	5Y1-83513-00-00	DAMPER	1	
6	15A-83519-00-00	BRACKET, METER	1	
7	1M1-83526-00-00	DAMPER 2	2	
8	90201-05033-00	WASHER, PLATE	2	
9	437-83525-00-00	CLIP	2	
10	90164-04008-00	SCREW, TAPPING	2	
11	15A-83509-00-00	SOCKET CORD ASSY	1	
12	123-83516-21-00	BULB (12V-3.4W)	3	
13	95807-06040-00	BOLT, FLANGE	2	
14	5LB-83550-00-00	SPEEDOMETER CABLE ASSY	1	



5FY8100-1360

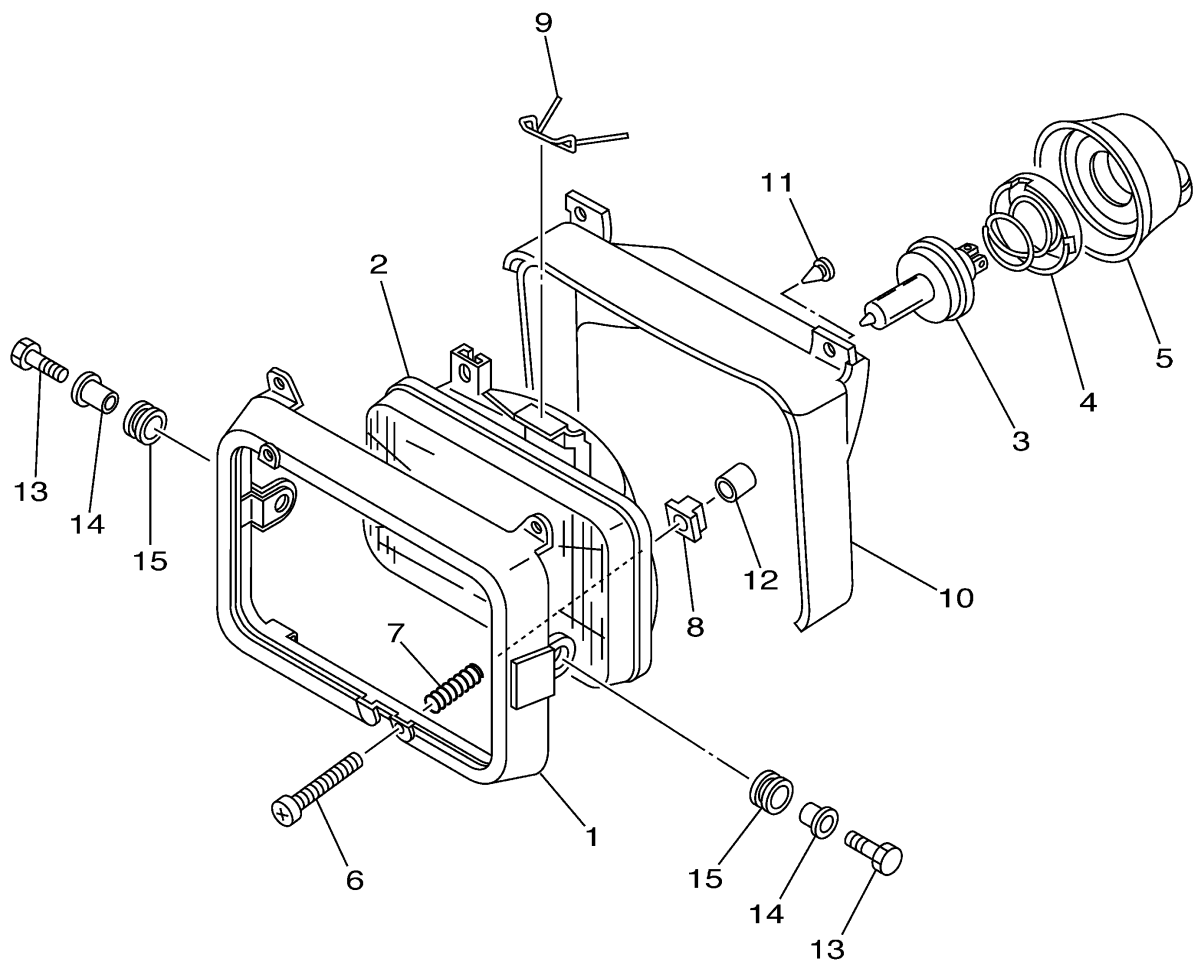


HEADLIGHT

Ref. No.	Part Number	Description	Qty	Remarks
1	47J-84115-00-00	RIM, HEADLIGHT	1	
2	5FY-84320-00-00	LENS ASSY	1	
3	2F9-84314-00-00	.BULB (12V-60/55W)	1	(H4)HALOGEN
4	2F9-84375-00-00	SETTING PLATE, BULB	1	
5	2F9-84397-01-00	COVER, SOCKET	1	
6	43F-84131-00-00	SCREW, RIM ADJUSTER	2	
7	5G2-84332-60-00	SPRING, SCREW	2	
8	198-84334-60-00	NUT, ADJUSTING	2	
9	5G2-84324-A0-00	SPRING, REFLECTOR	1	
10	30X-84196-00-00	COVER, SOCKET	1	
11	10V-84198-00-00	CLIP, COVER FITTING	2	
12	2RR-84178-00-00	PLUG	1	
13	97007-06025-00	BOLT	2	
14	90387-063E6-00	COLLAR	2	
15	90480-14023-00	GROMMET	2	



5FY8100-1370

TAILLIGHT

Ref. No.	Part Number	Description	Qty	Remarks
1	1W9-84710-61-00	TAILLIGHT UNIT ASSY	1	
2	1M1-84523-60-00	. GASKET, LENS	1	
3	1M1-84521-60-00	. LENS, TAILLIGHT	1	
4	1M1-84524-60-00	. SCREW, LENS FITTING	2	
5	256-84714-61-00	. BULB (12V-21/5W)	1	
6	4L0-84753-00-00	DAMPER	1	
7	90209-08125-00	WASHER	2	
8	90109-06005-00	BOLT	2	
9	90201-083A0-00	WASHER, PLATE	2	
10	36A-84551-00-00	BRACKET, LICENCE	1	
11	95807-06016-00	BOLT, FLANGE	2	
12	90201-06557-00	WASHER, PLATE	2	
13	95607-06100-00	NUT, U	2	
14	3G1-85130-01-00	REAR REFLECTOR ASSY	1	
15	95707-05500-00	NUT, FLANGE	1	

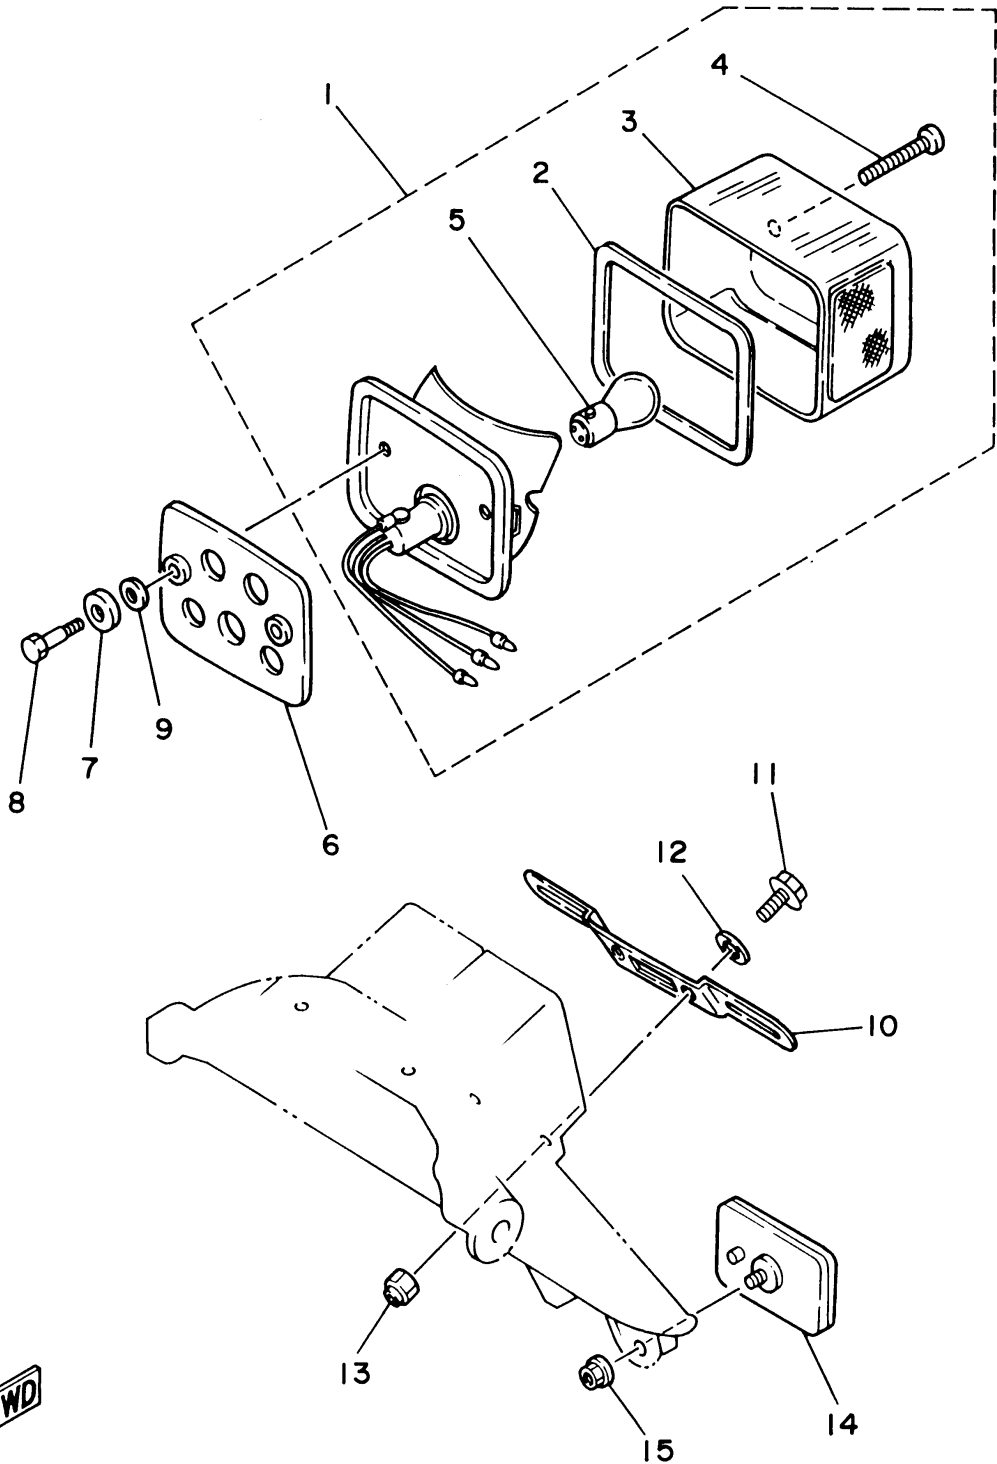

3AWT100-7380

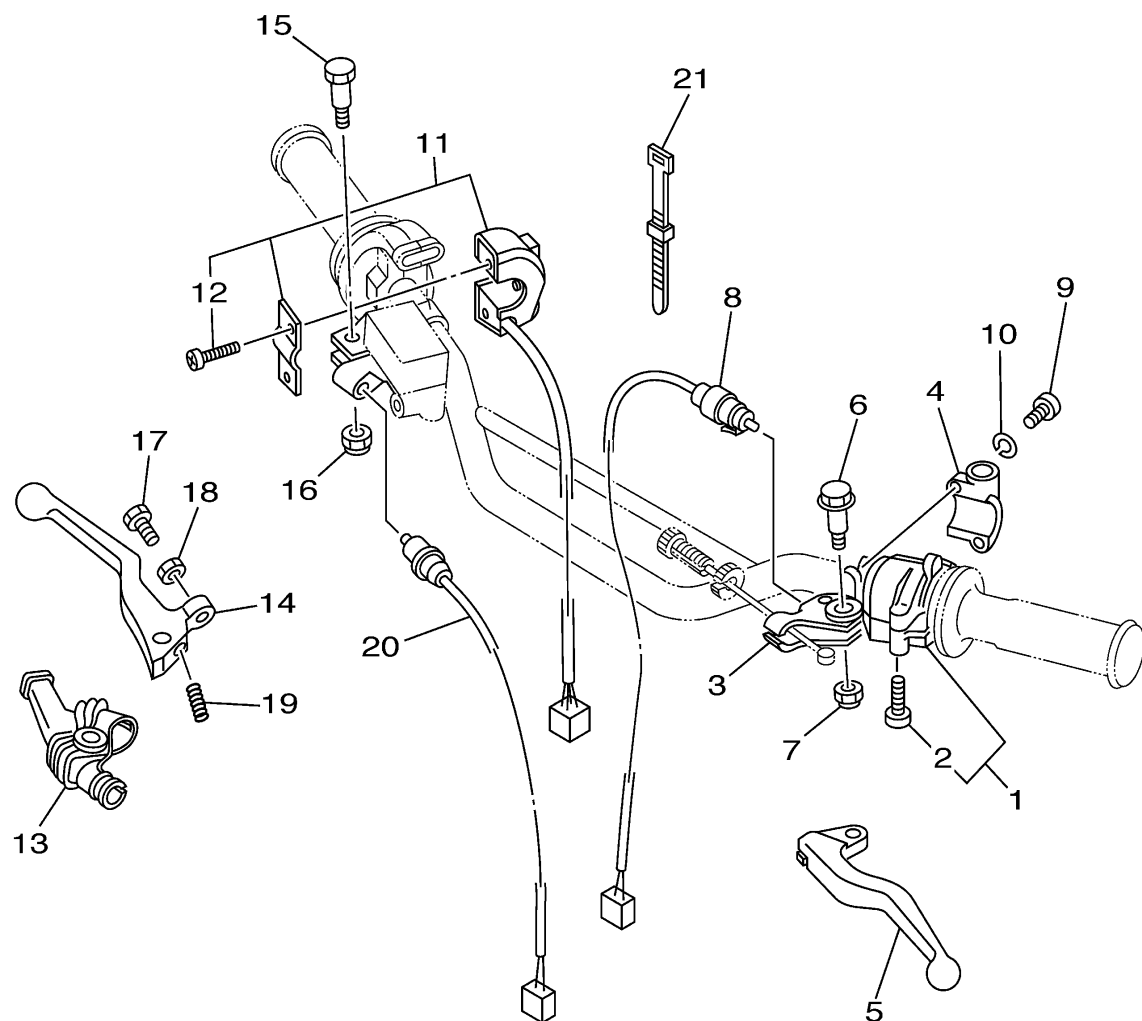


HANDLE SWITCH. LEVER

Ref. No.	Part Number	Description	Qty	Remarks
1	4CS-83973-00-00	SWITCH, HANDLE 3	1	
2	98507-05030-00	. .SCREW, PAN HEAD	2	
3	1LN-82911-00-00	HOLDER, LEVER 1	1	
4	33G-82913-01-00	HOLDER, LEVER LOWER 1	1	
5	4GY-83912-00-00	LEVER 1	1	
6	90109-06799-00	.BOLT	1	
7	95607-06100-00	NUT, U	1	
8	4GY-82917-01-00	SWITCH	1	
9	98507-05020-00	SCREW, PAN HEAD	2	
10	92907-05100-00	WASHER (35 X)	2	
11	5LB-83975-00-00	SWITCH, HANDLE 2	1	
12	98507-05018-00	. .SCREW, PAN HEAD	2	
13	1T5-26372-00-00	COVER, HANDLE LEVER 1	1	
14	55Y-83922-00-00	LEVER 2	1	
15	90109-06577-00	BOLT	1	
16	95607-06100-00	NUT, U	1	
17	90149-06131-00	SCREW, SPEC'L SHAPE	1	
18	90170-06010-00	NUT, HEXAGON	1	
19	90501-10312-00	SPRING, COMPRESSION	1	
20	3DM-83980-00-00	FRONT STOP SWITCH ASSY	1	
21	437-83936-01-00	BAND, SWITCH CORD	4	




5LB1010-0500

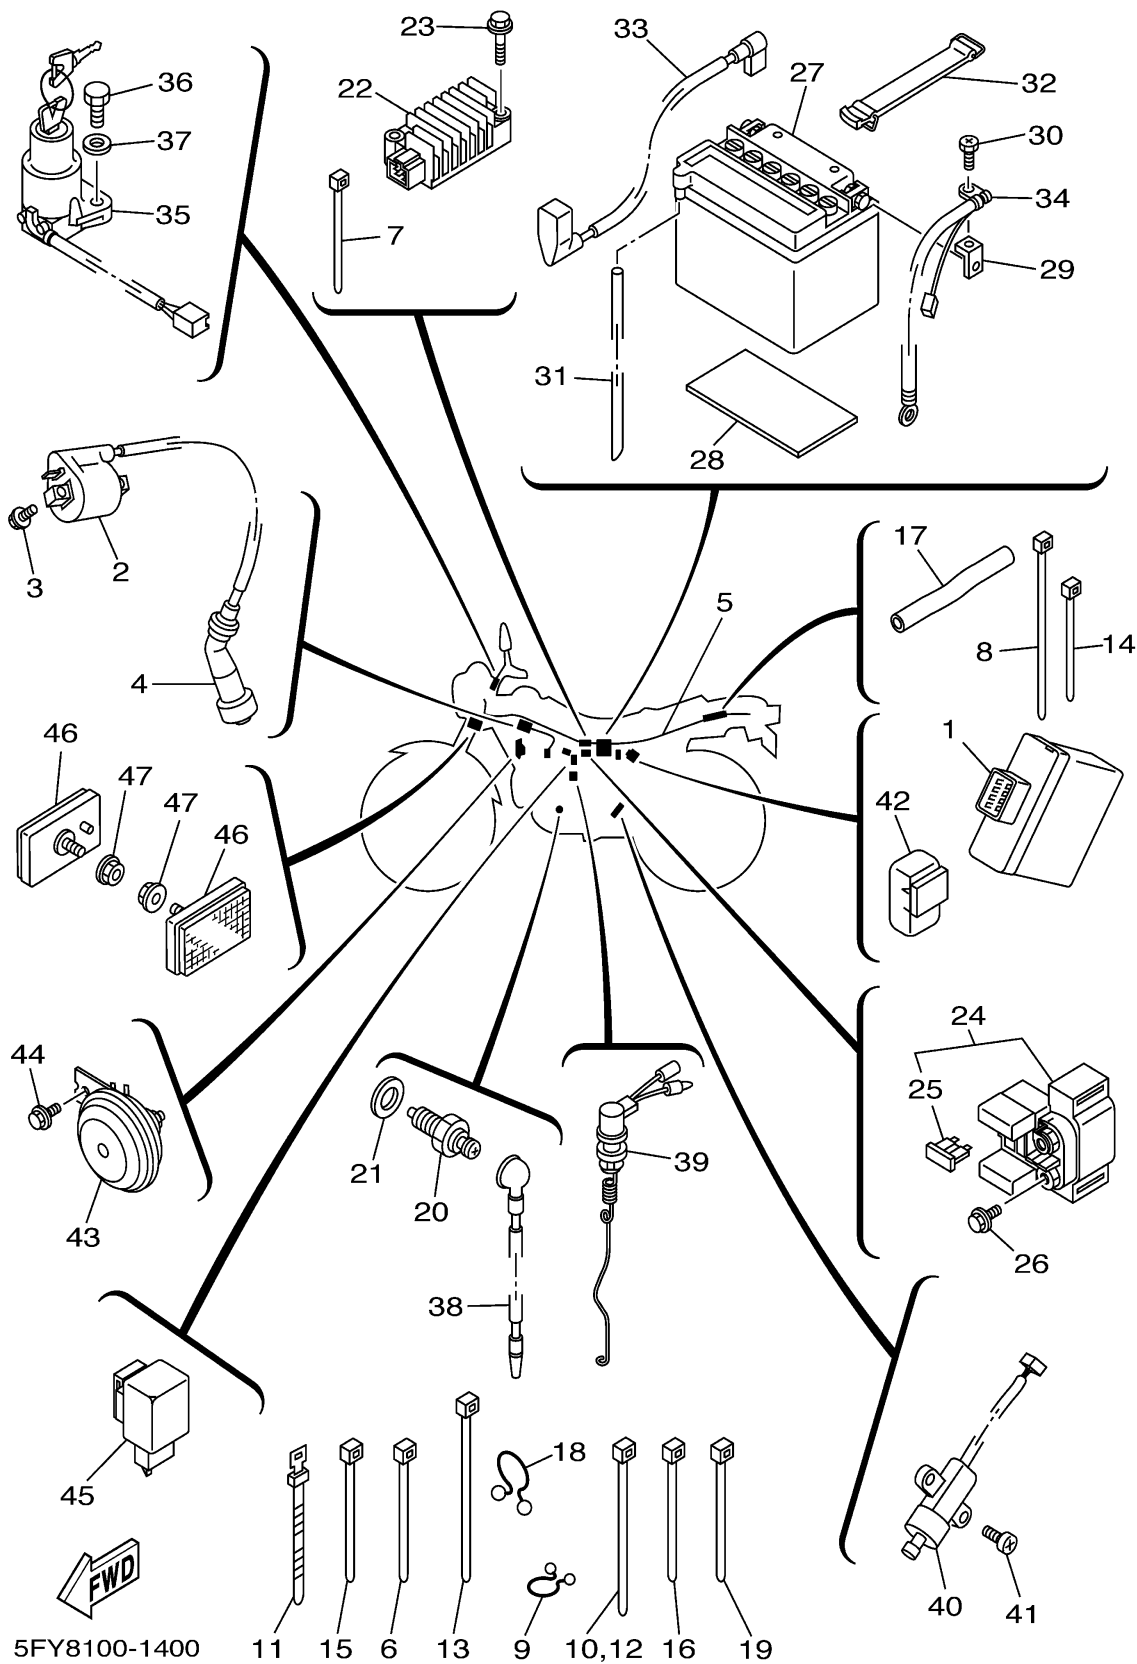

ELECTRICAL 1

Ref. No.	Part Number	Description	Qty	Remarks
1	5LB-85540-00-00	C.D.I. UNIT ASSY	1	
2	3RW-82310-10-00	IGNITION COIL ASSY	1	
3	95027-06016-00	BOLT, FLANGE	2	
4	1UY-82370-20-00	PLUG CAP ASSY	1	
5	5FY-82590-00-00	WIRE HARNESS ASSY	1	
6	5Y9-12491-00-00	CLAMP 1	1	
7	90465-13152-00	CLAMP	1	
8	1UA-82591-00-00	CLAMP	1	
9	341-82594-00-00	CLAMP	1	
10	1UA-82591-00-00	CLAMP	1	
11	25G-83936-01-00	BAND, SWITCH CORD	2	
12	1UA-82591-00-00	CLAMP	1	
13	90465-13275-00	CLAMP	1	
14	5Y9-12491-00-00	CLAMP 1	1	
15	90465-10098-00	CLAMP	1	
16	5Y9-12491-00-00	CLAMP 1	2	
17	90446-15377-00	HOSE	2	
18	90464-25267-00	CLAMP	1	(5FYD)
19	90465-10098-00	CLAMP	3	
20	4GY-82540-10-00	NEUTRAL SWITCH ASSY	1	
21	90430-10148-00	GASKET	1	
22	3TJ-81960-02-00	RECTIFIER & REGULATOR ASSY	1	
23	95027-06025-00	BOLT, FLANGE	2	
24	5EK-81940-00-00	STARTER RELAY ASSY	1	
25	2GH-82151-00-00	. . FUSE (20A-BL)	2	(5FYD)
26	95027-06008-00	BOLT, SMALL FLANGE	2	
27	1JE-82110-61-00	BATTERY ASSY (GM7CZ-3D) .	1	
28	51Y-82122-00-00	SEAT, BATTERY	1	

CONTINUED ON NEXT FRAME ►

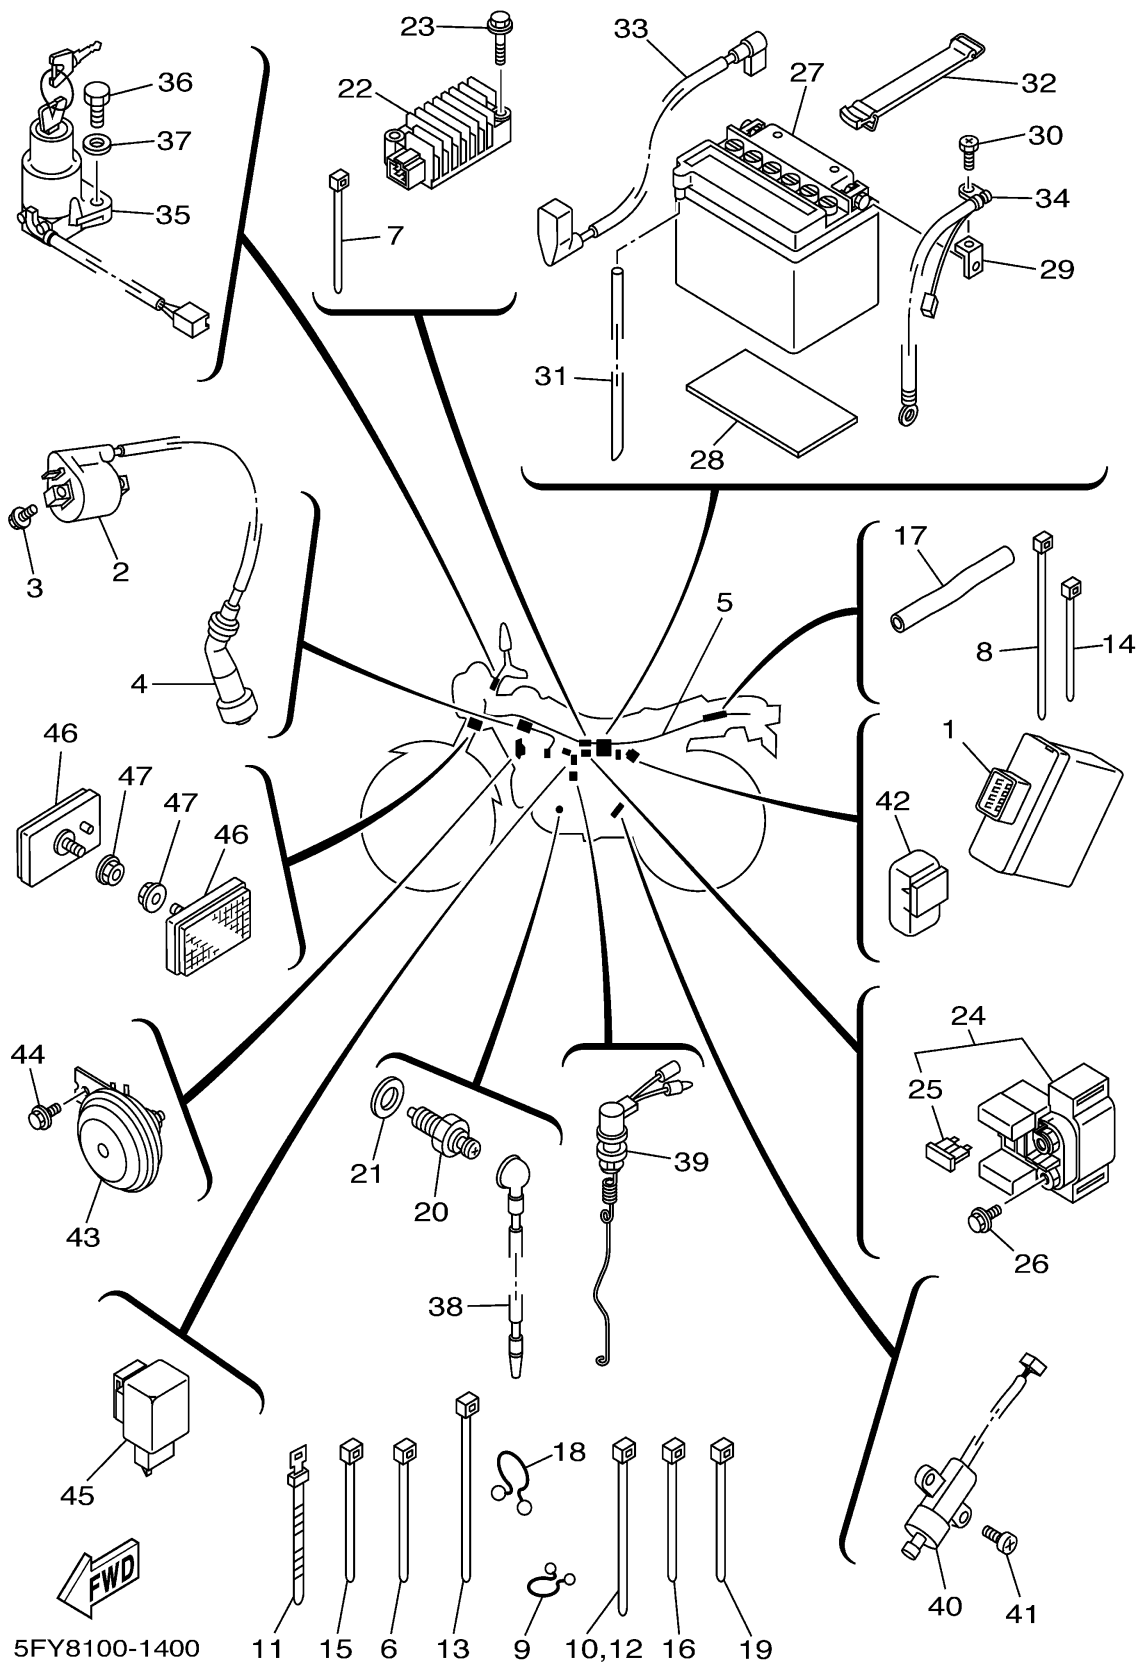

ELECTRICAL 1

Ref. No.	Part Number	Description	Qty	Remarks
29	5LB-8215C-00-00	TERMINAL	2	
30	90153-06001-00	SCREW, HEXAGON	2	
31	90445-082F3-00	HOSE (L540)	1	
32	18G-82131-00-00	BAND, BATTERY	1	
33	5LB-82115-00-00	WIRE, PLUS LEAD	1	
34	5EK-82116-02-00	WIRE, MINUS LEAD	1	
35	5LB-82501-00-00	MAIN SWITCH STEERING LOCK	1	
36	97007-06016-00	BOLT	2	
37	92907-06600-00	WASHER, PLATE	2	
38	5FY-82541-00-00	WIRE, LEAD	1	
39	2JX-82530-02-00	STOP SWITCH ASSY	1	
40	3LD-82566-60-00	SWITCH, SIDE STAND	1	
41	90157-05008-00	SCREW, PAN HEAD	2	
42	29U-81950-93-00	RELAY ASSY	1	
43	5LB-83371-00-00	HORN	1	
44	95807-06012-00	BOLT, FLANGE	1	
45	4MY-83350-01-00	FLASHER RELAY ASSY	1	
46	20G-85110-00-00	REFLECTOR ASSY	2	
47	95707-05500-00	NUT, FLANGE	2	